 




使用说明书

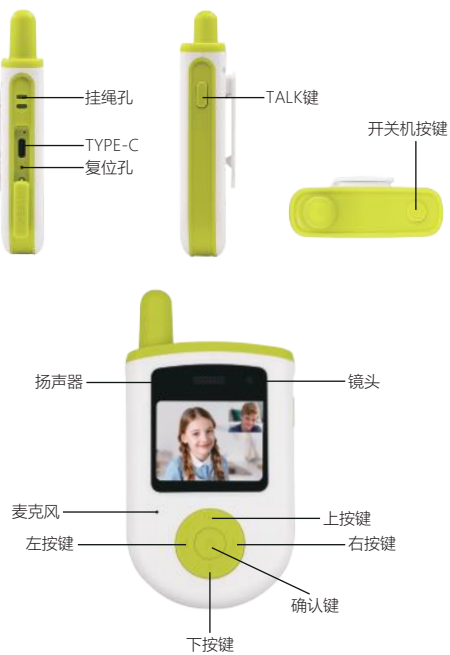

**开关机按键:** 长按2秒开机或关机

**上按键:** 菜单中短按向上选项;  
长按打开摄像头, 短按确认键拍照;

**下按键:** 菜单中短按向下选项,

 
**左按键:** 菜单中短按向左选项; 长按调小音量,

**右按键:** 菜单中短按向右选项, 长按调大音量

**确认键:** 菜单中按短按确定选项, 长按退出返回上一选项

**TALK键:** 长按TALK键开始对话

**复位孔:** 当出现卡机或死机等异常情况时, 可以使用手机取卡针戳机子侧边复位口复位

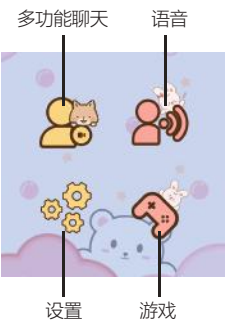

**配对:**

长按确认键 开始配对, 配对成功后才可以视频及对话等



**视频聊天:** 📞

短按确认键拨通, 对方短按确认键接受, 连接成功后开始视频

长按TALK键 说话

短按左按键 切换视频视角, 长按缩小声音

短按右按键 切换视频视角, 长按放大声音

短按上按键 打开大头贴

**发送语音:** 🗣️

长按下按键录制语音及发送

短按上/下键查看记录; 短按确认键播放

**发送表情:** 😊

短按上/下/左/右键选择表情, 短按确认键发送

**发送照片:** 📷

短按左/右键选择照片

短按下键发送照片

短按上键删除照片

短按确认键放大照片

**拍照发送照片:** 📷

短按确认键及发送

长按确认键退出返回上一选项



**语音**

短按确认键拨通, 对方短按确认键接受, 连接成功后开始语音

长按TALK键 说话

长按左按键 缩小声音

长按右按键 放大声音

长按确认键退出返回上一选项



**设置:**

短按上按键/左按键向上选项

短按下按键/右按键向下选项

短按确定键确定选项,

长按确认键退出返回上一选项



**游戏:**

短按左右键选择游戏

短按确认键进入游戏

长按确认键退出返回上一选项

**产品规格**

|       |                          |
|-------|--------------------------|
| 语言    | 多国语音                     |
| 信号范围  | 300M                     |
| 电池    | 600MAH                   |
| 显示屏尺寸 | 2.0                      |
| 充电接口  | TYPE-C                   |
| 链接方式  | WiFi热点配对连接               |
| 配件    | 挂绳*2, 充电线*1, 贴纸*1, 说明书*1 |

### 温馨提醒

1.不要使用快速充电适配器为相机充电, 这可能会造成损坏, 请使用5V 1A适配器进行充电。

2.禁止使用多芯充电电缆 (2合1、3合1、4合1), 这可能会损坏机器。

3.建议在空旷的地方使用, 如有水泥墙的障碍物阻挡, 将会缩短传输距离到100-150M.

 


### 保修卡

感谢您购买本公司产品, 请在购机时填写以下内容并妥善保存此卡。

用户档案

|      |  |
|------|--|
| 联系人  |  |
| 联系电话 |  |
| 购机日期 |  |
| 购机地址 |  |
| 联系地址 |  |
| 备注   |  |

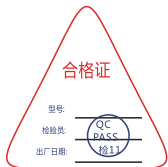

Instruction manual



**Power Button:** Long press for 2 seconds to power on or off.

**Up Button:** In the menu, short press to move up; Long press to open the camera, short press the OK button to take a photo.

**Down Button:** In the menu, short press to move down.

 
**Left Button:** In the menu, short press to move left; long press to decrease volume.

**Right Button:** In the menu, short press to move right; long press to increase volume.

**OK Button:** In the menu, short press to confirm; long press to exit and return to the previous option.

**TALK Button:** Long press the TALK button to start a conversation.

**Reset Hole:** When the device freezes or malfunctions, you can use a phone SIM ejector pin to press the reset hole on the side to restart.

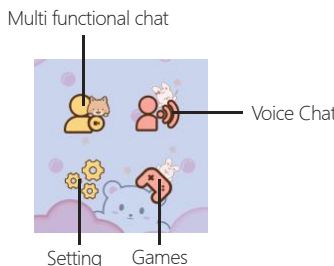

**Pairing:**

Long press the OK button to start pairing. Pairing must be successful before video calls or voice chats can be used.



**Video Chat:** 📞

Short press the OK button to call; the other party short presses the OK button to accept. Once connected, video chat begins.

Long press TALK to speak.

Short press the Left button to switch video angle; long press to lower volume.

Short press the Right button to switch video angle; long press to raise volume.

Short press the Up button to open stickers.

**Send Voice:** 🗣️

Long press the Down button to record and send voice messages.

Short press Up/Down to view records; short press OK to play.

**Send Emojis:** 😊

Short press Up/Down/Left/Right to choose emoji, short press OK to send.

**Send Photos:** 📷

Short press Left/Right to select photo.

Short press Down to send photo.

Short press Up to delete photo.

Short press OK to enlarge photo.

**Take and Send Photos:** 📷

Short press OK to take and send.

Long press OK to exit and return to the previous option.



**Voice Chat Instructions:**

Short press OK to dial; the other party short presses OK to answer, then voice chat begins.

Long press TALK to speak.

Long press Left to decrease volume.

Long press Right to increase volume.

Long press OK to exit.



**Setting:**

Short press Up/Left to move up.

Short press Down/Right to move down.

Short press OK to confirm option.

Long press OK to exit and return to previous option.



**Games:**

Short press Left/Right to choose a game.

Short press OK to enter the game.

Long press OK to exit and return.

**Product Specifications**

|                     |                                                        |
|---------------------|--------------------------------------------------------|
| Language            |                                                        |
| Signal range        | 300M                                                   |
| Battery             | 600MAH                                                 |
| Display screen size | 2.0                                                    |
| Charging interface  | TYPE-C                                                 |
| Connection method   | WiFi hotspot pairing connection                        |
| Accessories         | lanyard*2, charging cable*1, sticker*1, user manual *1 |

### Warm Reminder

1. Do not use a fast charging adapter to charge the camera, as this may cause it damaged. Please charge it using a 5V 1A adapter.

2. Do not use the multi-core charging cables (2-in-1, 3-in-1, 4-in-1). this is possible It may damage the camera.

3. It is recommended to use it in an open area. If there are obstacles such as concrete walls blocking, the transmission distance will be shortened to 100-150 meters.



### Warranty Card

Thank you for purchasing our company's products. Please fill in the following information when purchasing the machine and keep this card properly.

User Profile

|                  |  |
|------------------|--|
| Contact          |  |
| Tel              |  |
| Purchase Date    |  |
| Purchase Address |  |
| Contact Address  |  |
| Remark           |  |

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)This device must accept any interference received, including interference that may cause undesired operation.