 




USER MANUAL

— MODEL NO:G7—

**Secure Today
Smart Tomorrow**

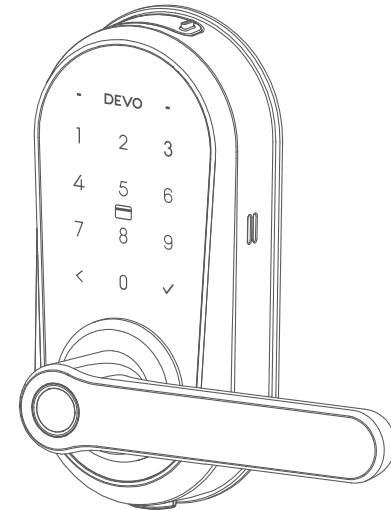

FCC ID:2BL9C-G7

Unlock the Future with Our Smart Lock:
Security Meets Convenience

Thank you for choosing G7 Smart Smart Door Lock.
Please read the quick start guide carefully before operation and installation

FOR USERS IMPORTANT

Thank you for choosing DEVO smart lock

In order to ensure the ease of use and safety of our products, we have prepared this manual to help you better understand DEVO Smart Lock.

Thank you for purchasing a “DEVO” smart lock. Considering the continuous improvement and updating of our products, the actual products may be slightly different from the pictures in this manual, please refer to the actual products!

DEVO smart lock is popular among users for its unique appearance, advanced and reliable technology and considerate after-sales service. Our smart locks have been tested for reliability and functionality. Ambient light test, temperature test, etc. constitute the leading and unique advantages of smart locks.

Our company has established a complete intelligent R&D, manufacturing and sales system. All smart locks are independently developed by the company. We sincerely invite you to share with us your experience of use and opinions of improvement, which will help us to improve our products.

CONTENTS

• • •	Hardware Introduction	01-02
• • •	Compatible Doors	03
• • •	Parts List	04
• • •	Installation Overview	05-16
• • •	Programming Instructions	17-20
• • •	Q&A	21-22
• • •	Disclaimer	35-36

 
1/ Hardware Introduction

(1) Overview

Note:


1.Thank you for using the smart door lock. Please carefully check the product list,readtheinstruction manual and install the lock according to the manual. If there is anydirect orindirect product problem,hazard and losses caused by failure to operateaccording to themanual,the company will not bear any responsibility.

2.Prepare screwdriver and a drilling machine before installation.

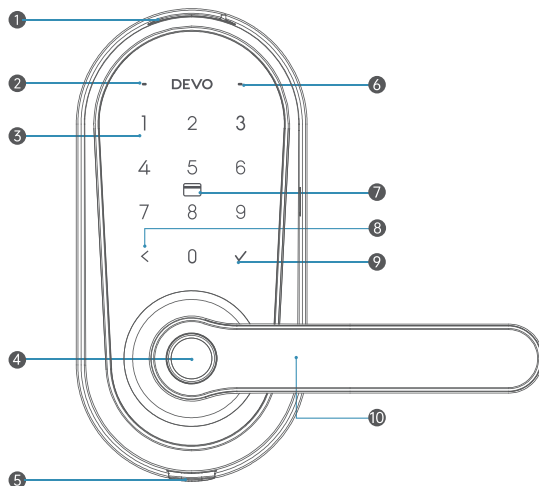


- | | |
|--|--|
| ① Keyhole | ⑥ Red Status Light: Abnormal status detected |
| ② Green Status Light: Succeed(Door Unlock) | ⑦ Fob Scanner |
| ③ Touch Keypad | ⑧ Return Button |
| ④ Fingerprint Scanner | ⑨ Confirm Button |
| ⑤ Emergency Power Support Port* | ⑩ Exterior Lever |

 *The "Emergency Power supply Port" is not for battery charging purposeand can only be used for emergency power supply to the lock.

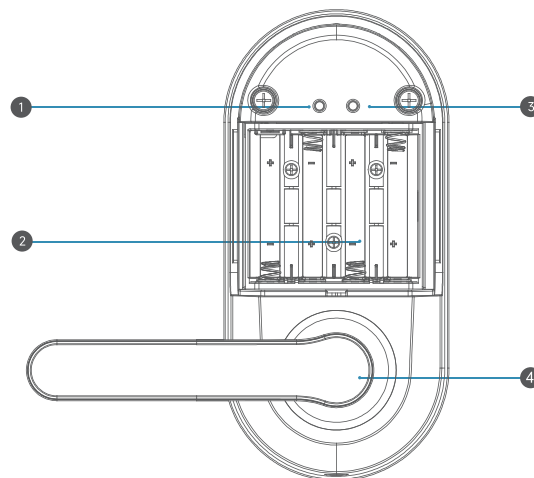

- | | |
|---------------------------|------------------|
| ① Set Button | ③ Re-set Button |
| ② 8 AA alkaline batteries | ④ Interior Lever |

 2/ Prepare the door and check dimensions Compatible Doors

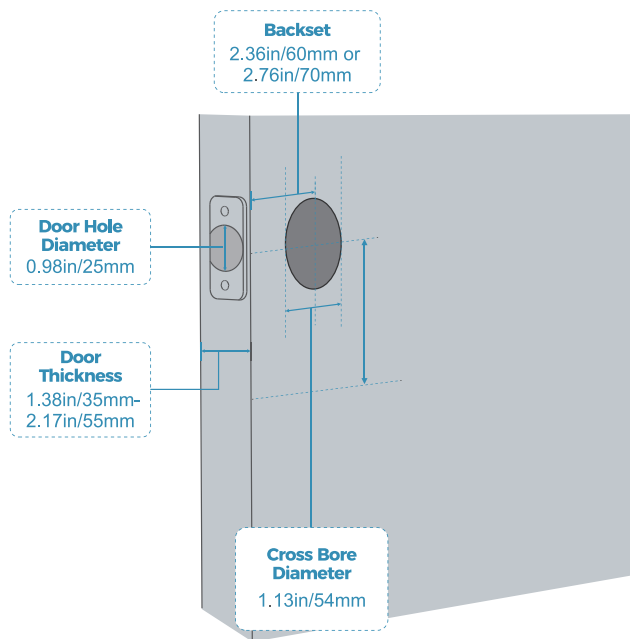


3/ Parts List




Exterior Assembly



 Interior Assembly



Latch

 

Strike Box



Strike



Fob Card (x2)



Keys (x2)



Strike Screws (x4)
0.98in/25mm



Mounting plate
Screws (x2)
1.38in/35mm



Mounting plate
Screws (x2)
0.98in/25mm



Square Spindle
2.95in/75mm



Interior Assembly
Screws (x3)
0.39in/10mm



Connecting StudL (x2)
1.54in/39mm



Crowbar



TOOL REQUIRED

 
All you need is a manual screwdriver or an electronic screwdriver.



IMPORTANT

Do not load batteries until lock is completely installed.

4/ Installation Overview

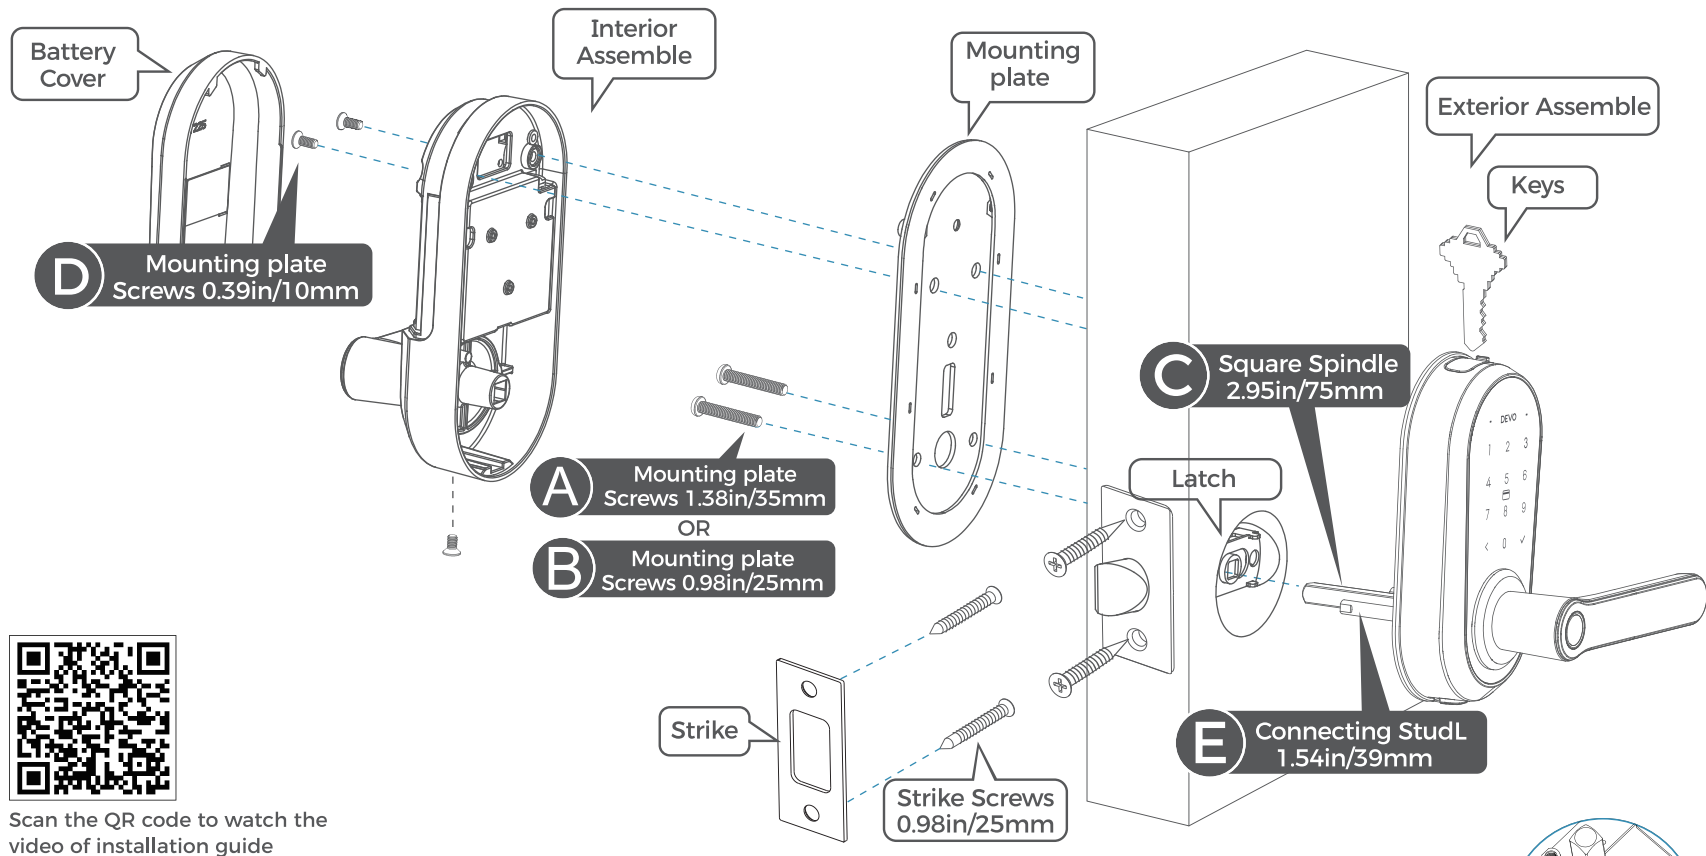


* 1.77-2.13in/45-55mm door thickness use **A**


* 1.34-1.77in/35-45mm door thickness use **B**

* Note: Users may select screw lengths according to the door's thickness. Excessively long screws can be cut to the required length prior to installation.

 
* The square spindle bolt should be aligned with the hole on the door lock spindle and secured in place.

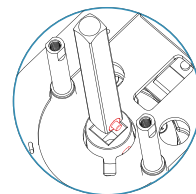


Door Orientation Confirmation

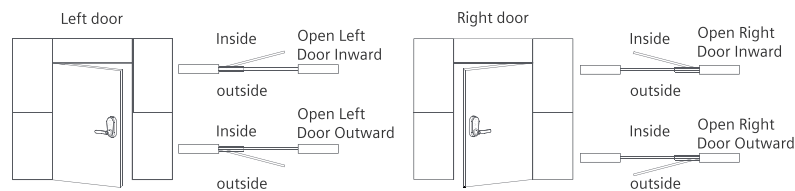 

 This Lock is suitable for above 4 scenarios

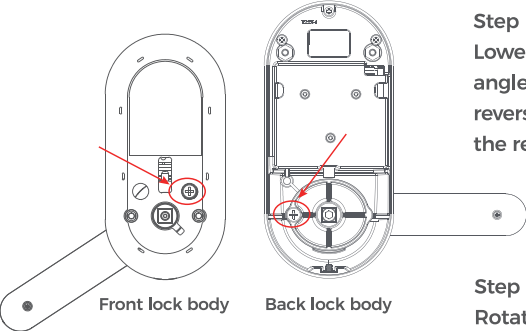



 
Step 1 :
Lower the handle to a 45° angle, and when you see the reverse screw, disassemble the reverse screw

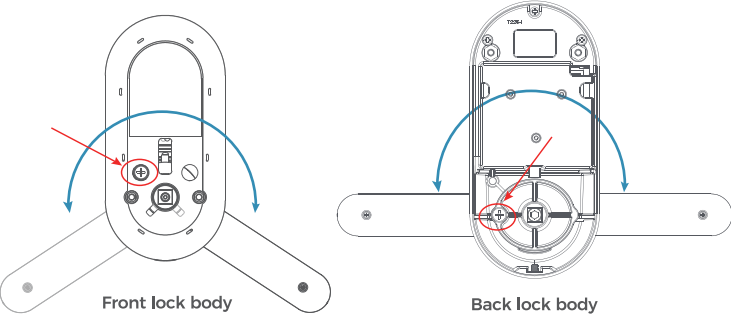


For a left-hand door, move the handle to the left; for a right-hand door, move the handle to the right.

Step 1. Install Deadbolt

   
1. Check your door to see if the deadbolt requires adjustment.
If the backset is 2.76in/70mm, Sliding control the faceplate to extend the length.

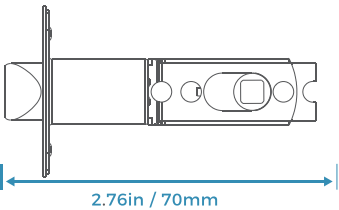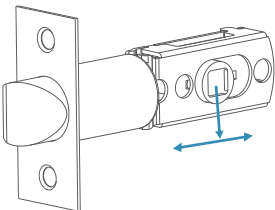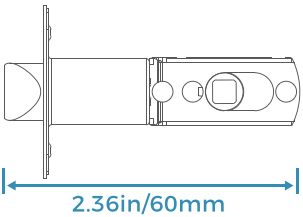

 2. Insert and screw the deadbolt into the doorframe.
Make sure the word "UP" on the deadbolt faces up.

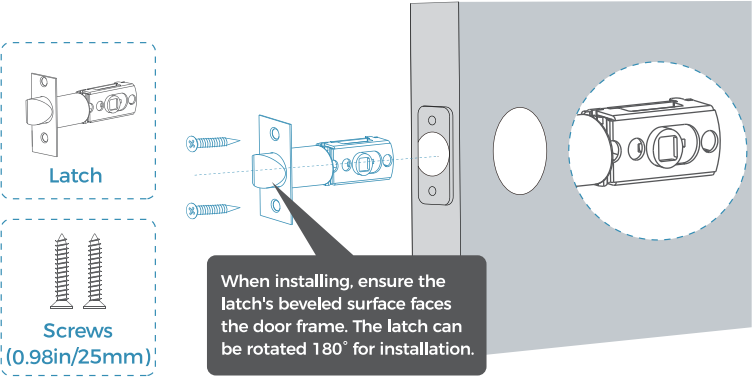


 Step 2. Install Strike Plate

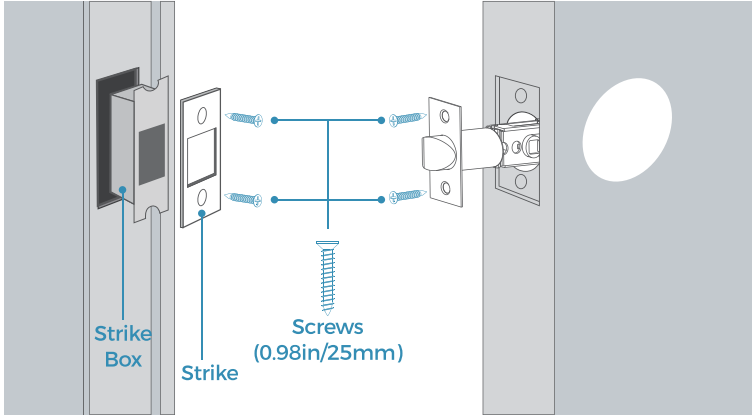


Step 3. Install Exterior Assembly

 Please fix the Square Spindle and Connecting StudL to the Exterior Assembly.

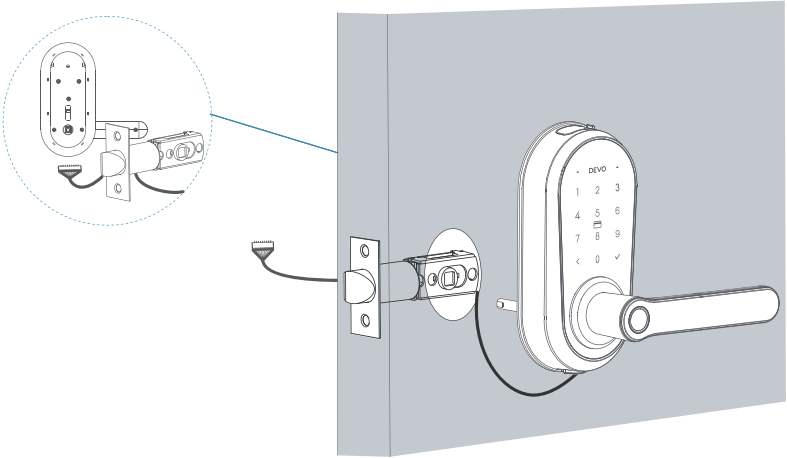


Step 4. Install Interior Assembly

 
1. Detach the back cover from the interior assembly.

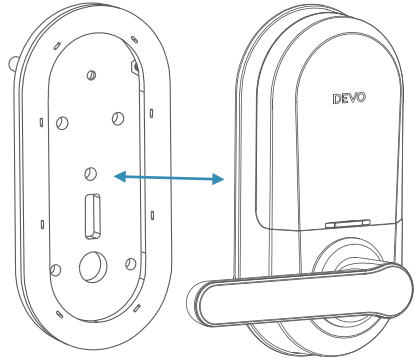

 
2. Run the wires through the back cover.

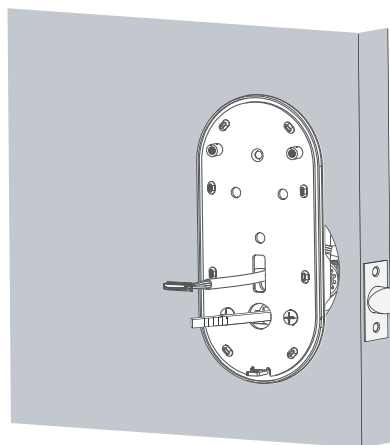

 
3. Secure the back cover with screws.





 
1.77-2.13in/45-55mm
door thickness use




 
1.34-1.77in/35-45mm
door thickness use

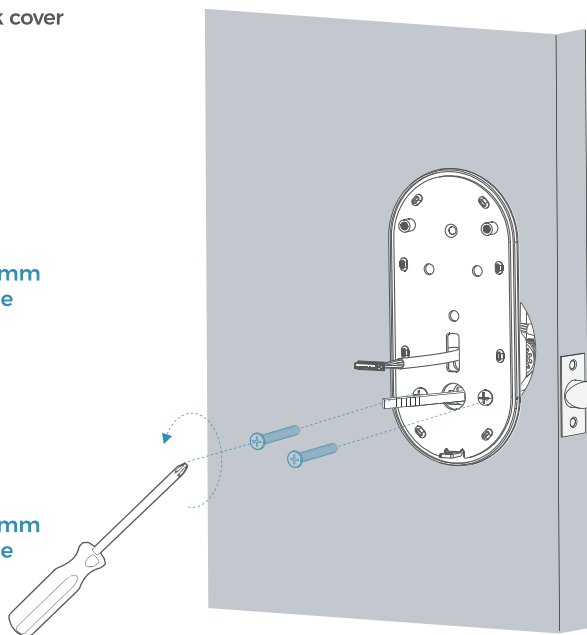

  
 
4. Wire to the interior assembly.

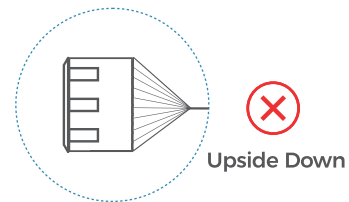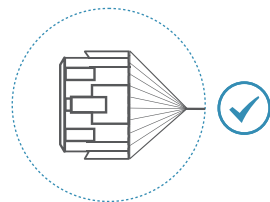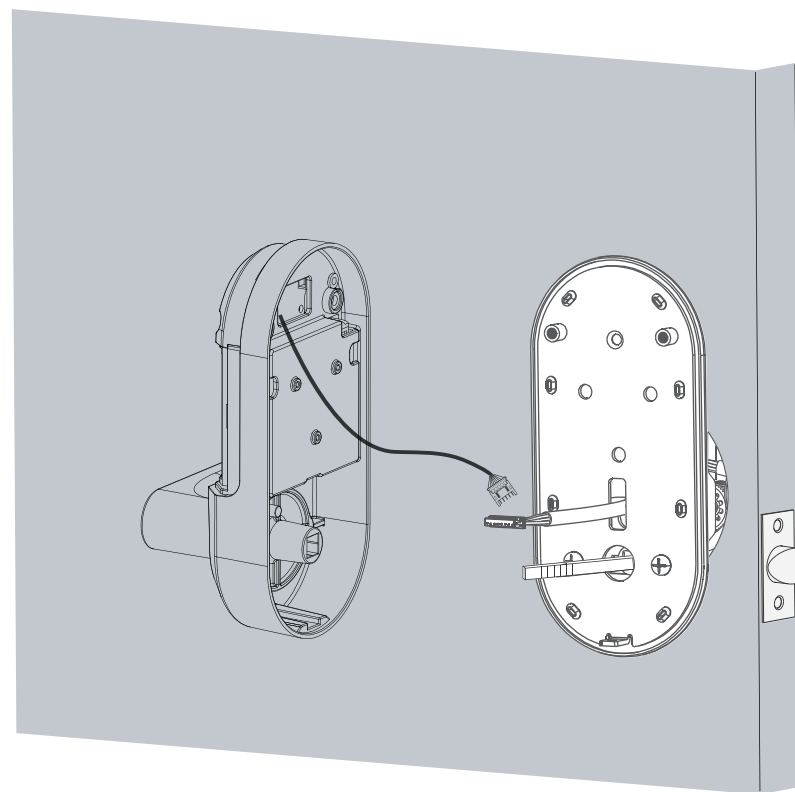

  
5. Mount the interior assembly. Make sure both wires are tucked into the cabin on the back of the interior assembly.

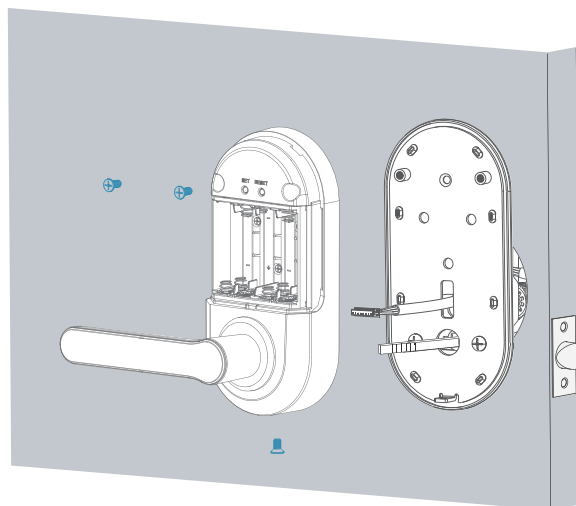

  6. Check to see if the deadbolt retracts by turning the inside handle.

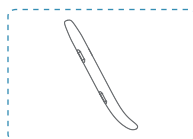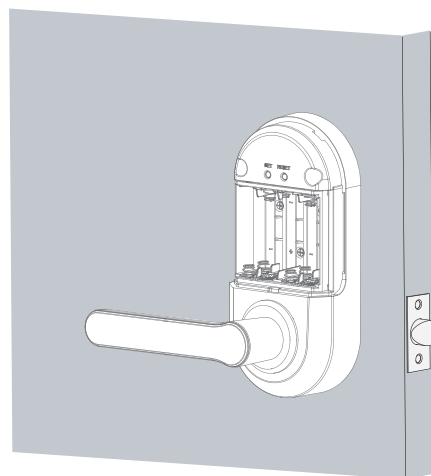


 When removing the bottom battery, use a crowbar to remove it slowly.

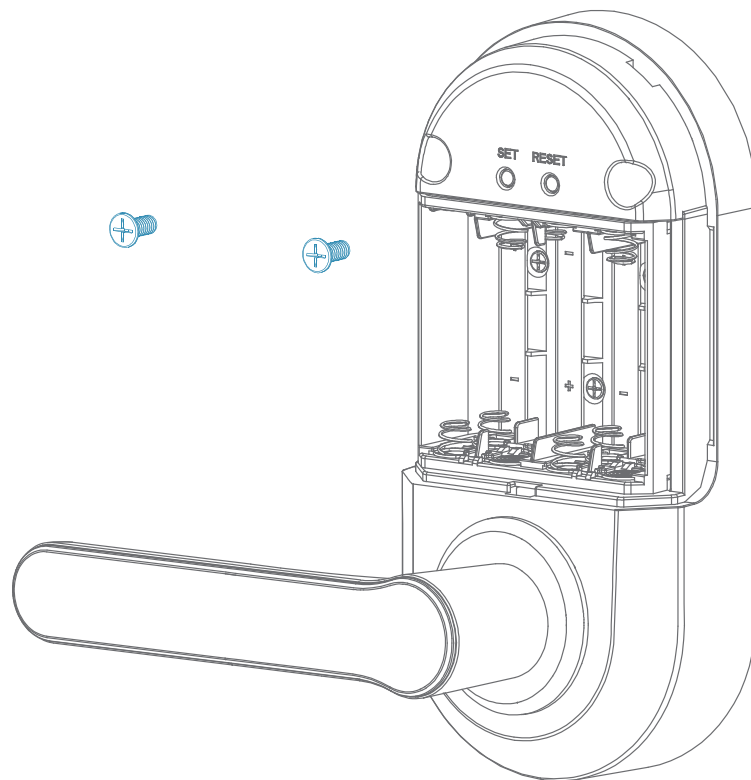

Operation Instructions

 1. Restore Factory Settings

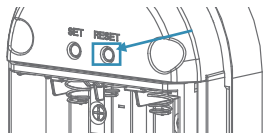


Step1: Press and hold "Reset" button, and after 2 seconds, the lock will start emitting a "beep" sound (7 times).



Step2: Hold the button until you hear the voice prompt: To confirm, Please press the "✔" button.

Step3: Press the unlock button within 4 seconds, you will hear the voice prompt: Factory reset succeeded.

 2. Set Administrator Password




Step1: Press the "set" button. If no administrator password has been set before, you will hear a voice prompt: Please set the administrator password.

Step2: After input the administrator password ,press the "✔" button to confirm.


Step3: Follow the voice prompt instructions, enter the administrator password again, and press the "✔" button to confirm.

 3. Enter The Function Settings Mode

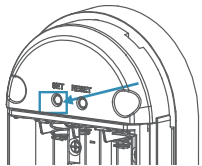

Step1: Press the "Set" button. You will hear a voice prompt saying, "Please verify administrator user." Enter the correct administrator password, then press the "✔" button to confirm. If the password verification is successful, you will enter the setting mode.

 4. Setting Mode Function List

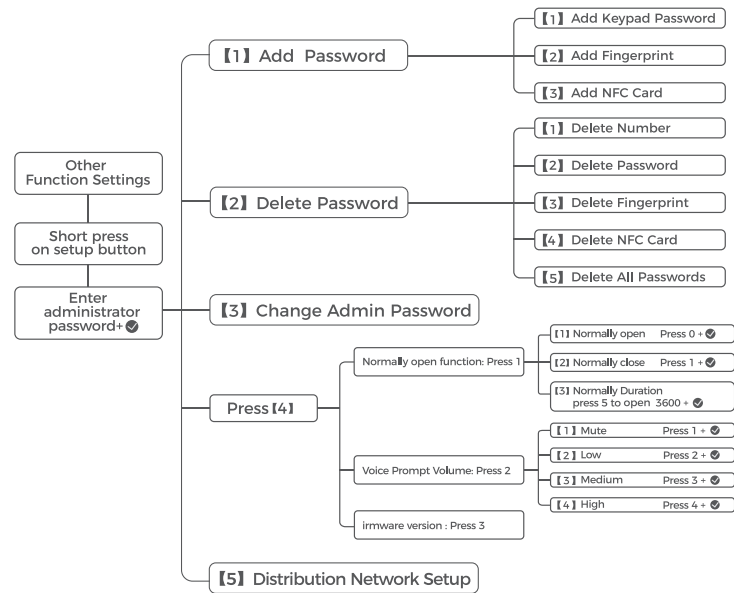

5. Permanent Unlock Mode

The "Normally open" function of a door lock allows the door to remain unlocked or accessible without the need for a key or code.

Note:1.When enabled, the door will remain open freely without entering the system.

2.The door can be set to remain open for 5 to 3600 seconds, after which the lock will automatically restore, requiring verification or a key to open the door again.

 
Enter Path: Setting Mode → Press [4] → Press [1] → Press [0] → Press ✔

Attention:


When the battery level is below 20%, we recommend charging it immediately. If you use the door lock frequently, the battery can last approximately one week; if infrequently used it can last about a month.

5/ Programming instructions

App Connection Guide


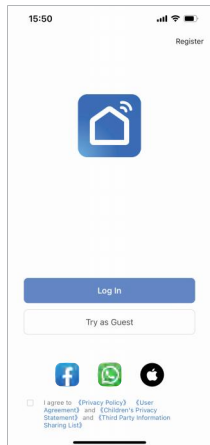


① Select the Quick Login

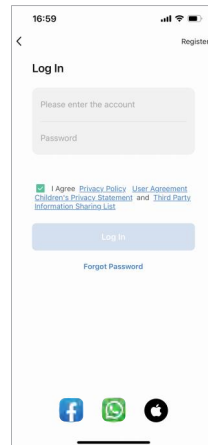 


② Input the Account and the Password

  App User Guide

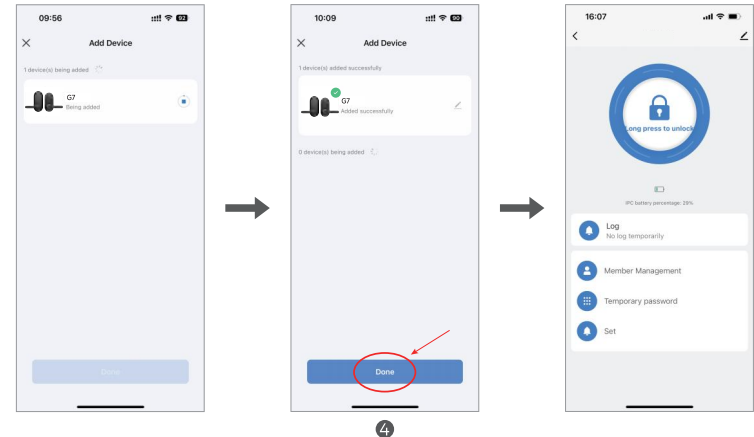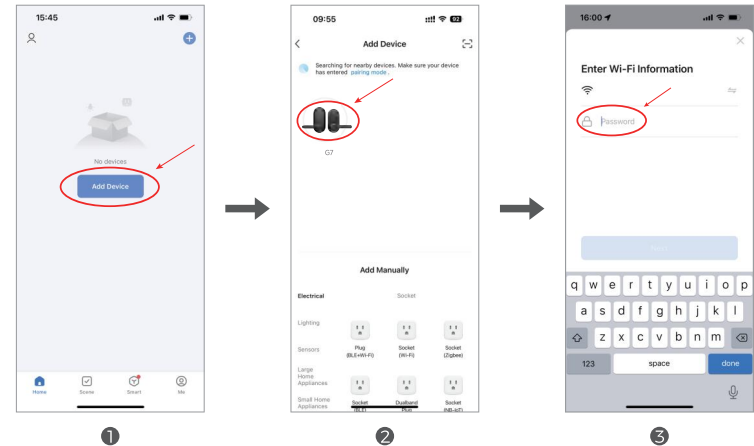

- ① To engage the network connection after locking the door →
 - ② Short press the setup button →
 - ③ Input the admin password+ →
 - ④ Press + →
- ① Select the D1
 - ② Input the WiFi Password (Network requires 2.4G)
 - ③ Select the Done

 Power-saving Mode

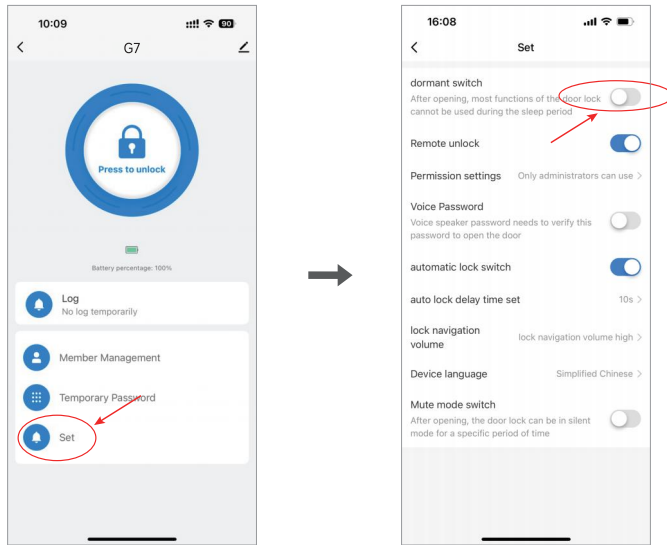


① Select the Set

② Open the dormant switch

Attention:

1. When the dormant switch is turned on to save power, functionalities of the smart lock controlled via the smartphone app will be disabled. This includes unlocking and adding passwords through the app.
2. You can only view unlock records through the app. To unlock, add passwords or register fingerprint recognition, you must use the keypad on the door lock.
3. To disable power-saving mode, you must manually wake up the door lock panel and then turn off the dormant switch in the mobile app.
4. If the user has not received the push message, please check whether the application has been granted permission and turn on the relevant permissions for it.

 
Add Member Password

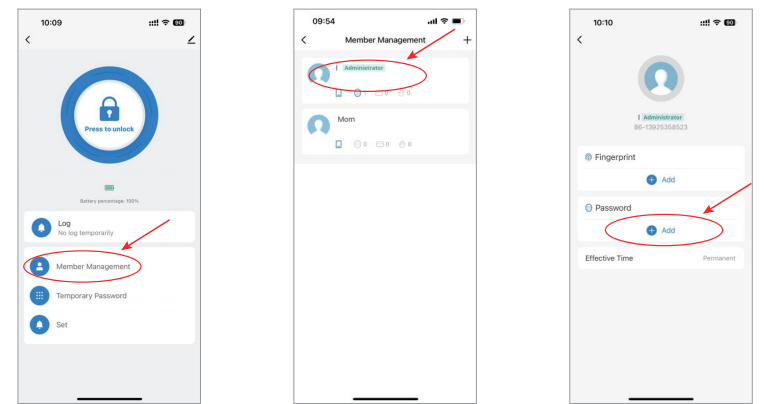

① Member Management

② Select the Member

 ③ Select 'Add' in Password

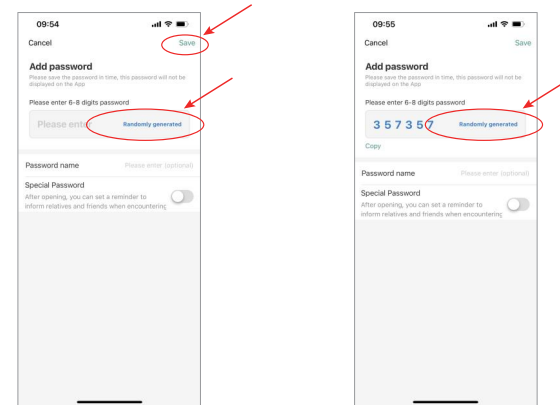

④ Select the Randomly generated, then Save

⑤ Operation successful

6 / Q&A

01 Question: After the door lock is reset, what will happen?

Answer: When the door lock is reset, any password (6-8 digits) can unlock the door. If you want to change this setting, simply register an administrator password.

02 Question: What is the difference between installing 4 AA battery locks and filling 8 batteries?

Answer: With four batteries, the product can run normally; with eight batteries, enjoy a longer-lasting use of experience.

03 Questions: Why do I have to replace the battery in less than 6 months?

Answer: Please use high-quality batteries such as Duracell, Energizer and so on. 8 AA batteries could support door lock unlocking more than 1800 times. If you unlock the door more than 20 times a day or the weather is cold, the battery life may be less than 3 months.

04 Questions: The door lock cannot be installed, what should I do?

Answer: Please refer to the door thickness and other data in the instruction manual to ensure that our lock is suitable for your door. Also please remove all accessories of the old lock before installation. Our door locks are not compatible with other door lock accessories.

05 Questions: The screws won't install, what happened?

Answer: Each screw installs differently. Please make sure to use the correct screws in each location.

06 Questions: Missing accessories, what should I do?

Answer: You can contact our customer service team to reissue accessories for you, email: DEVO.services@outlook.com

07 Questions: The door lock still doesn't work after installing batteries, why?

Answer: You could check if the battery is installed correctly. Also please check whether the exterior assembly connection power cord is completely inserted into the mainboard of interior assembly. If the door lock still doesn't work, it may have been damaged during shipping. You can contact Amazon customer service to replace a new lock.

08 Questions: The latch is not working properly, what should I do?

Answer: 1. The latch is adjustable (2.36in/60mm or 2.76/70mm), please adjust to the appropriate length when installing.
2. Our door lock will automatically recognize the direction of opening the door after being powered on. You can restore the factory settings to make the latch work properly.

09 Questions: I could not manually turn the lock from inside the house, what could be wrong?

Answer: First, check the installation for errors based on the installation video.

If there is no error in the installation, the reason is the gears inside the product are not tightly fitted. You need to use Turn the knob to the open or closed position with more force so that the gears can return to the correct position

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

7 / DISCLAIMER

1. Your biometric information is stored locally on the device rather than in the cloud, ensuring your personal information is safe and private.

2. IoT services are provided by Tuya, a third-party company. For information on how Tuya processes data, please refer to Tuya's privacy policy.



DEVO

For any questions, please feel free to contact us, we will send you a reply and solve the problem within 24 hours.



Email: DEVO.services@outlook.com

DEVO reserves the final interpretation right of all terms and conditions in this manual.

MADE IN CHINA