 


说明书

尺寸: 60*65 mm (折叠)、420*65 mm (展开)

 
材质: 128g双铜纸, PANTONE 431C专色印刷 (风琴折页)

正

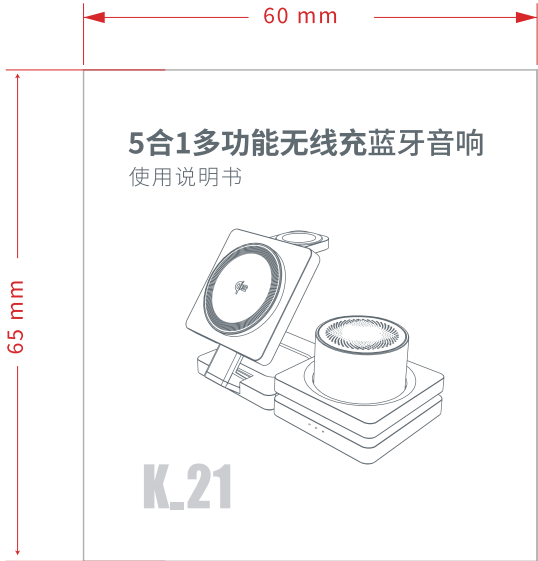


产品特点

- Qi2.2无线充 (手机)
- 无线充 (耳机)
- 无线充 (手表)
- 蓝牙音响
- 氛围灯

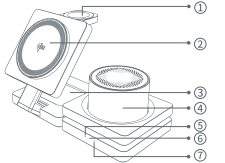

外观特征

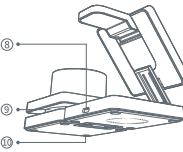 

- ① 无线充 (手表区域)
- ② 无线充 (手机区域)
- ③ 无线充 (耳机区域)
- ④ 功能旋钮
- ⑤ 蓝牙指示灯
- ⑥ 无线充指示灯
- ⑦ 电源指示灯
- ⑧ Type-C充电接口
- ⑨ 氛围灯
- ⑩ 硅胶脚垫

蓝牙操作说明

顺时针旋转开启设备, 蓝牙同步开启 (蓝牙指示灯蓝灯闪烁), 打开手机蓝牙, 搜索对应设备蓝牙 “K_21”, 点击对应蓝牙名自动配对连接, 连接成功后有对应提示音, 蓝牙指示灯蓝灯长亮, 蓝牙连接状态下逆时针旋转设备关机, 蓝牙同步关闭。



在音乐播放状态时:

顺时针旋转: 音量逐渐增加/最大
逆时针旋转: 音量逐渐减小/关机

 
备注: 蓝牙开启后15分钟内未连接, 设备自动关机。

氛围灯使用说明

设备开启时: 氛围灯 (彩灯) 同步亮起, 音乐播放时随节奏律动。
设备关闭后: 氛围灯同步熄灭。

无线充使用说明

无线充使用时先检查是否已正确连接电源, 注意电源输入要满足设备铭牌参数输入值DC 5V/3A, 9V/3A, 12V/3A, 15V/3A, 然后根据需求把需要充电的无线充设备放入对应的无线充区域, 无线充自动识别充电, 无线充指示灯白灯长亮, 最大可支持手机、耳机、手表3台无线充设备同时充电, 设备开/关机不影响无线充使用。

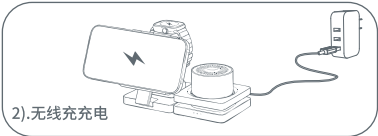

备注: 无线充 (手机/耳机) 区域支持FOD异物检测, 当发现无线充指示灯白灯闪烁时检查手机或耳机无线充区域是否有金属物附着, FOD异物检测触发后无线充电功能保护, 待金属异物解除后观察无线充指示灯是否停止闪烁, 如已停止闪烁, 无线充电功能恢复。

指示灯状态说明

蓝 牙		无 线 充		电 源	
未连接时	连接成功	灯珠	工作	满电	异物
闪烁	长亮	蓝色	长亮	熄灭	闪烁
				白色	长亮
				熄灭	红色

低电量提示说明

设备低电后播报低电提示音, 播报三次, 第三次播报后不再播报直到关机。

注意事项

- 请勿长时间在阳光直射或高温的地方使用、存放该产品。
- 请勿在离磁卡、磁记录媒体和精密的仪器太近的地方充电。
- 请勿分解或者改造本产品。
- 请勿用湿手触碰交流适配器。
- 请将本产品远离水或其它液体。
- 如果您想清洁本产品,请断开电源。
- 产品工作环境温度范围:-20-45°C。

产品参数

 
产品型号: K_21
产品材质: 锌合金+金属+ABS
产品输入: 5V ---3A 9V ---3A 12V ---3A 15V ---3A
无线充功率 (手机): 5W/7.5W/10W/15W/25W
无线充功率 (手表): 2.5W
无线充功率 (耳机): 2.5W
喇叭功率: 4Ω 3W
电池容量: 3.7V 500mAh
产品重量: 289g
产品尺寸 (折叠): 73x73x84 mm
电源接口: Type-C



背


5-IN-1 MAGNETIC WIRELESS CHARGING SPEAKER

Instruction Manual

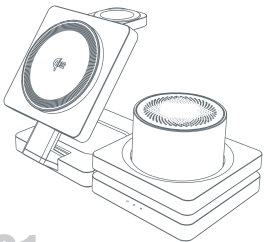

Product Features

 - Qi2.2 wireless charging (Phones)
- Wireless charging (Earbuds)
- Wireless charging (Watches)
- Wireless speaker
- Ambient light

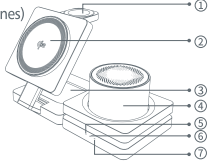

Appearance Features



- ① Wireless charging area (Watch)
- ② Wireless charging area (Phone)
- ③ Wireless charging area (Earbuds)
- ④ Function Knob
- ⑤ Bluetooth Indicator Light
- ⑥ Wireless Charging Indicator Light
- ⑦ Power Indicator Light
- ⑧ Type-C Charging Port
- ⑨ Ambient Light
- ⑩ Silicone Non-slip Pads

Bluetooth Operation Instructions

Rotate clockwise to turn on the device, Bluetooth will turn on synchronously, and the blue indicator light flashes. Turn on mobile phone Bluetooth, search for device name “K_21” and click to connect automatically. A prompt tone indicates successful connection, and the blue light stays on steadily. Rotate counterclockwise to power off the device, Bluetooth will turn off at the same time.



Music Playback Mode

Rotate clockwise: Increase volume gradually until maximum. Rotate counterclockwise: Decrease volume gradually or power off the device.

 
Note: The device will auto power off if no Bluetooth connection is made within 15 minutes after Bluetooth is activated.

Ambient Light Instructions

When the device is powered on, the colorful ambient light turns on simultaneously and flashes rhythmically with music playback. The ambient light will turn off synchronously when the device is powered off.

Wireless Charging Instructions

Before use, please confirm the power supply is properly connected. Input power shall comply with rated parameters: DC 5V/3A, 9V/3A, 12V/3A, 15V/3A. Place wireless charging devices on designated charging areas. It will start charging automatically with white indicator light steady on. It supports simultaneous charging for up to 3 devices including phones, earphones and watches. Wireless charging works normally regardless of device power on/off status.

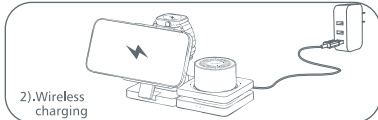

Note: The wireless charging area for phones and earphones supports FOD foreign object detection.If the white charging indicator flashes, please check for any metal objects on the charging area.Once FOD is triggered, wireless charging will stop for protection.Remove foreign objects and check if the indicator stops flashing, then charging function will resume normally.

Indicator Light Status Description

Wireless speaker			
Unconnected status	Connected successfully	Indicator light	
Flashing	Flashing	Blue	
Wireless charger			
Working	Fully charged	Foreign object	Indicator light
Steady on	Off	Flashing	White

Power		
Charging	Fully charged	Indicator light
Steady on	Off	Red

Low Battery Reminder Instruction

The device will sound low battery prompt tone for three times when power is low. No further reminder will be given after the third prompt until power off.

Precautions

- Do not use or store this product in direct sunlight or high-temperature environments for long periods.
- Do not charge the product in close proximity to magnetic cards, magnetic recording media, or precision instruments.
- Do not disassemble or modify this product.
- Do not touch the AC adapter with wet hands.
- Keep this product away from water or other liquids.
- Disconnect the power supply before cleaning the product.
- Operating temperature range for the product: -20 to 45°C.

Specifications

Product Model: K_21
Product Material: Zinc Alloy+Metal+ABS
Input: 5V ---3A 9V ---3A 12V ---3A 15V ---3A
Wireless Charging (Phone): 5W/7.5W/10W/15W/25W
Wireless Charging (Smartwatch): 2.5W
Wireless Charging (Earbuds): 5W
Speaker Power: 4Ω 3W
Battery Capacity: 3.7V 500mAh
Product Weight: 289g
Product Size (Fold): 73x73x84 mm
Power Interface: Type-C

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the operator and any part of your body.

