

trigger to sing. Press and hold again for 2 seconds to exit Karaoke mode.
5. During Karaoke, press Button 4–Button 8 voice change buttons to change the voice into the corresponding sound effects.



Button 4–8: Voice Changing Modes

1. Button 4: Robot voice, Button 5: Monster voice, Button 6: Original voice, Button 7: Girl voice, Button 8: Boy voice.
2. Short press any voice change button, then hold down the trigger and speak into the microphone at the rear, you can hear the change in your voice.

Button 9: Echo / Track Switching

1. Short press the (see image) button, each press increases the echo. When the prompt sound “beep beep” is heard, it is the maximum echo.
2. Short press the (see image) button, each press decreases the echo. When the prompt sound “beep beep” is heard, it is the minimum echo.
3. In Bluetooth mode, press and hold the (see image) button to switch to the next track.
4. In Bluetooth mode, press and hold the (see image) button to switch to the previous track.

Button 10: Volume Adjustment

1. Short press the (see image) button, each press increases the volume. When the prompt sound “beep beep” is heard, it is the maximum volume.
2. Short press the (see image) button, each press decreases the volume. When the prompt sound “beep beep” is heard, it is the minimum volume.

Battery Instructions

- Charging (see image)
1. Use the included charging cable. The indicator light will turn on, and will turn off after fully charged.
 2. Fully charging takes about 80 minutes. Do not use the product while charging.

INSTRUCTION MANUAL



VOICE CHANGER



RECHARGEABLE

BATTERY SAFETY


1. Do not use the toy while charging.
2. Do not use the toy if the battery overheats.
3. Avoid overcharging. Exceeding the required charging time may damage the battery.
4. Do not use poor quality charging cables, please use the original charger.
5. Please confirm that the toy's charging port is properly connected and that the indicator light on the dedicated charging cable is lit.
6. Children are not allowed to charge batteries without adult supervision.
7. Please recycle and dispose of used batteries in the proper way.

PACKAGE CONTAINS



Battery Instructions

- Charging (see image)
1. Use the included charging cable. The indicator light will turn on, and will turn off after fully charged.
 2. Fully charging takes about 80 minutes. Do not use the product while charging.

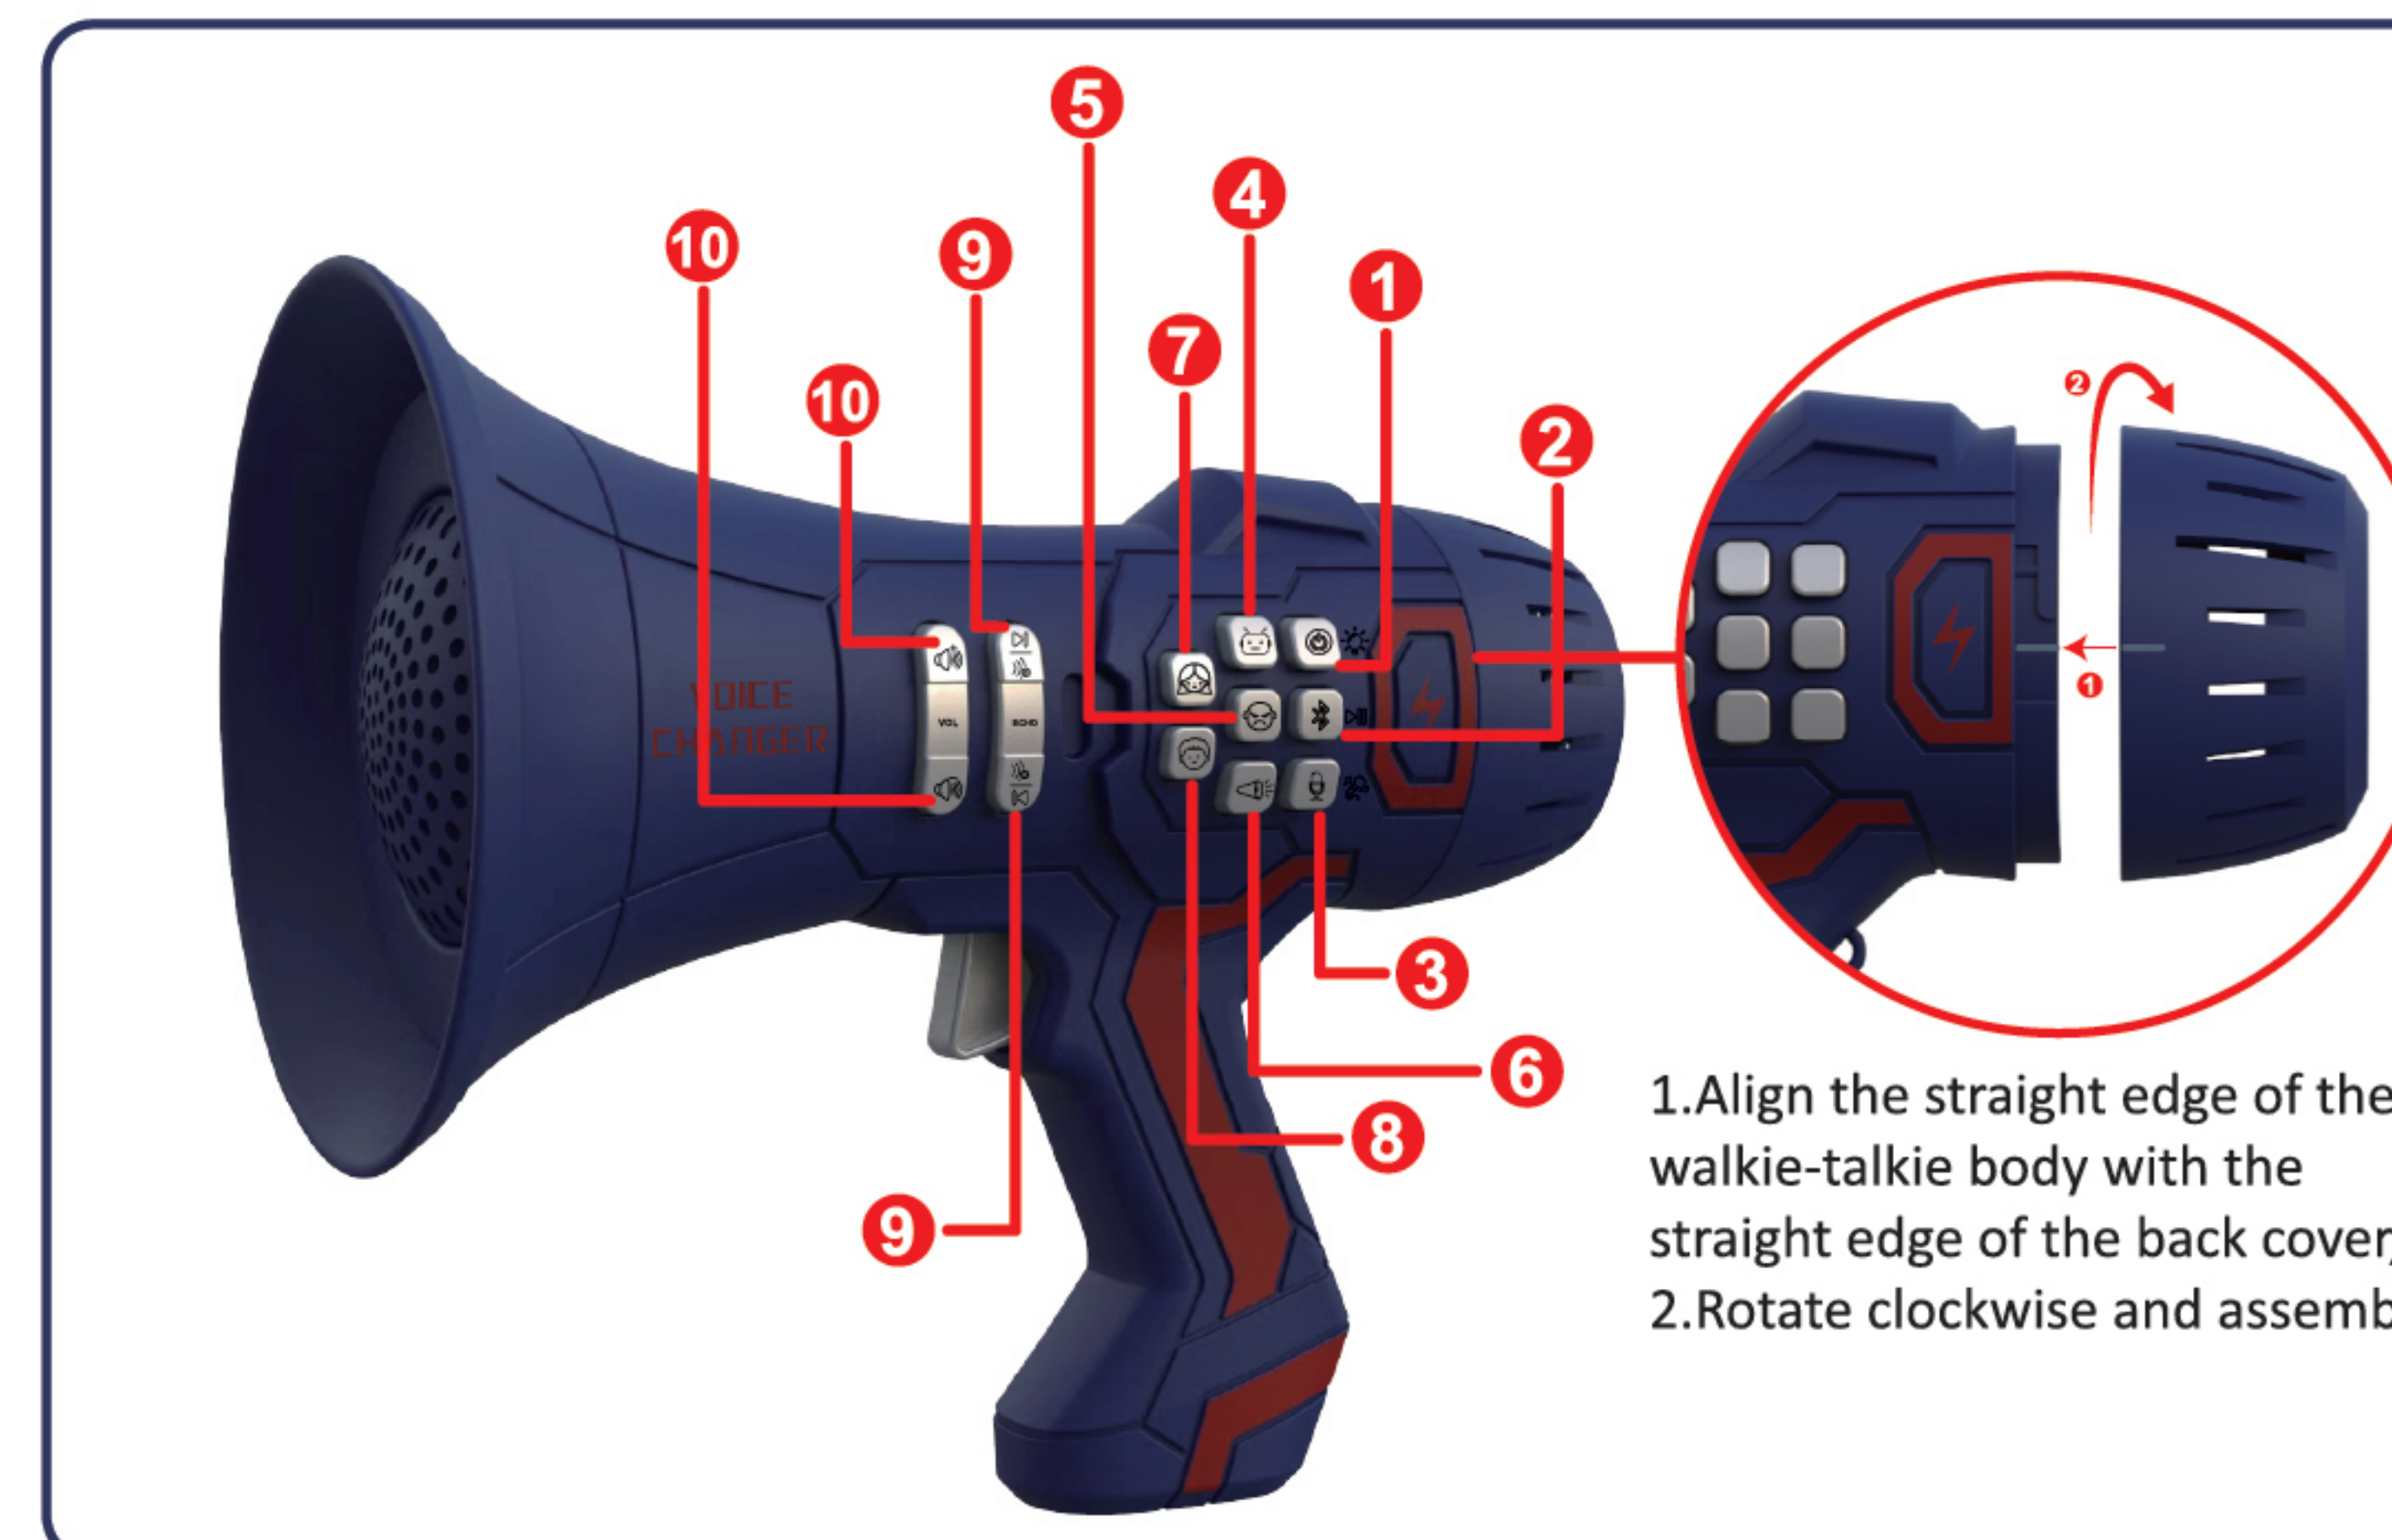

1. Align the straight edge of the walkie-talkie body with the straight edge of the back cover,
2. Rotate clockwise and assemble.

Package Contents

Voice Changer ×1 (see image), Charging Cable ×1 (see image), User Manual ×1 (see image)

Function Description

Button 1: Power / Light

1. Press and hold for 2 seconds to turn on/off.
2. In power-on state, short press to switch lighting modes. There are five lighting modes (breathing effect, running light effect, gradient effect, sound-responsive effect, lights off).

Button 2: Bluetooth / Music Pause

1. Press and hold for 2 seconds, the voice prompt “The Bluetooth is turned on” will play, entering Bluetooth mode. Press and hold again for 2 seconds, the voice prompt “The Bluetooth is turned off” will play, exiting Bluetooth mode.
2. In Bluetooth mode, when successfully connected, the voice prompt “The Bluetooth is connected” will play; when disconnect-ed, the voice prompt “The Bluetooth is disconnected” will play.
3. Bluetooth name: voice changer.
4. In Bluetooth mode, short press to pause music playback.

Button 3: Recording / Playback / Karaoke Mode

1. Press and hold for 2 seconds to enter recording mode, then short press to exit recording mode. Up to three recordings can be recorded.
2. Short press to play recordings. Each short press plays one recording. During playback, press Button 4–Button 8 voice change buttons to change the recorded original sound into the corresponding voice effects for playback.
3. In recording mode, it is not necessary to hold down the trigger to record.
4. After entering Bluetooth mode, press and hold for 2 seconds to enter Karaoke mode. In Karaoke mode, it is not necessary to hold down the

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.