 


COBAK

Thank you

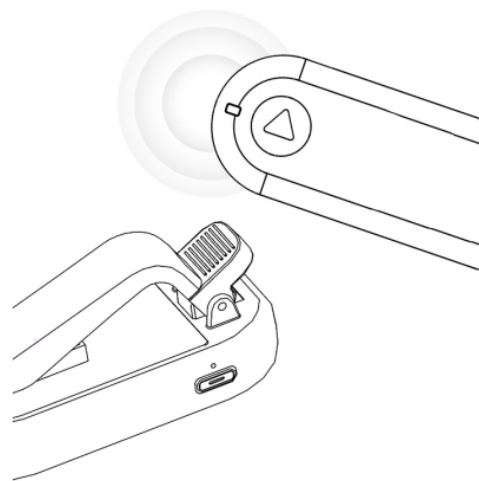

 
E-Reader Page Turner

User Manual

Introduction

Thank you for choosing CoBak Page Turner. This accessory includes a clip, a magnetic remote control, and a wrist strap for convenient use. It supports forward page turning, bringing a comfortable hands-free reading experience to your e-reader.

Package Contents

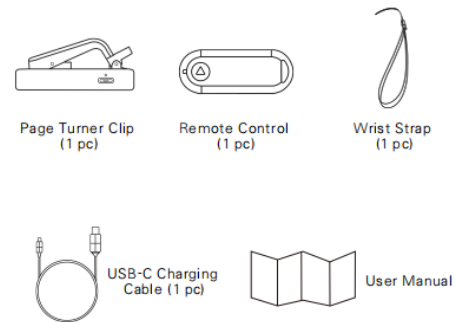

- 1 -

Product Features

- **Magnetic Docking:** The remote control attaches magnetically to the clip for storage and charging.
- **Shared Charging:** A single USB-C port charges both the clip and the remote simultaneously.
- **Wrist Strap:** Keeps the remote easily accessible and prevents accidental drops.

How to Use

Installing the Clip

- Attach the clip securely to the side of your e-reader.
- Make sure it does not block the screen.

Using the Remote

- Attach the wrist strap to the designated hole and wear it around your wrist for convenience and safety
- Use the forward button to turn pages

- 2 -

How to Use

Charging

- Dock the remote onto the clip magnetically.
- Connect a USB-C cable to the clips' charging port.
- Both the clip and the remote will charge simultaneously.

Charging indicator

- Red Light - Charging
- Green Light / Off - Fully charged
- Charging time: ~3 hours

Auto Sleep & Wake

- The clip will automatically enter sleep mode after 10 minutes of inactivity to conserve battery.
- To wake the clip, simply press the button on the clip.
- Tip: Before first use or after long storage, always press the clip button to activate the device.

How to Use

Pairing the Devices

 
Default Pairing :

- The clip and remote are pre-paired at the factory.


Re-Pairing

- Press and hold the pairing button on the clip until the indicator light flashes blue.
- Press the button on the remote. The clip's indicator light will flash blue once to confirm successful pairing.

Correct use of page turner

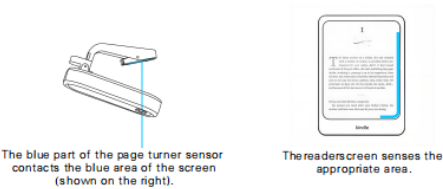

Correct use of page turner

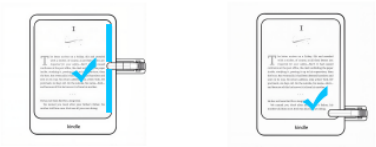 

Page Forward
Correct use of the single clip

Page turner incorrect use

- Stop! You Might Be Using Your Page Turner Wrong.

Why This Matters?

- Over-pressing triggers the device's rapid-scroll mode, disrupting your reading flow. Master the tap, and enjoy seamless navigation.
(This isn't just a tip—it's your shortcut to a flawless experience.)
- Here are some common mistakes users make. Please avoid the following examples:

Page turner incorrect use



Product Specifications

Clip Battery Capacity	250 mAh
Remote Battery Capacity	200 mAh

Product Specifications

Charging Interface	USB-C
Charging Time	3 hours

Frequency	433.91M
-----------	---------

Safety Notes

- Do not disassemble.
- Avoid placing near strong magnetic or electronic interference.

Warranty

This product comes with a 1-year warranty. For support, please visit our Amazon store or contact customer service.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.