 


FM AM radio TF card BT music player

 
User Manual

Model: W-213

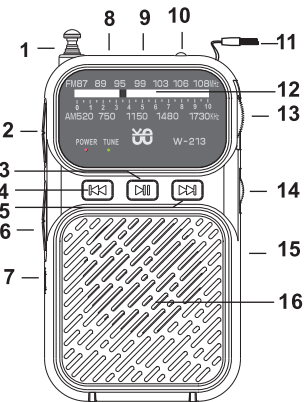


- 1.FM receiving antenna
2. Flashlight switch
3. Pause. Play/mode
4. Previous song/Fast back
5. Next track/Fast forward
6. Function switch
7. Power mode switch
- 8.TF card slot
9. Headphone jack
10. Lighting fixtures
11. Hand harness
12. Frequency scale
13. Frequency tuning button
14. Volume knob
- 15.TYPE-C charging port
16. Speaker

Preparations before starting up

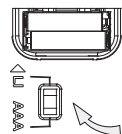


Correctly install the three AAA alkaline batteries into the battery compartment at the back of the machine, close the battery covers, and then press the power button Switch to the corresponding power supply mode.

 
Steps for listening to radio programs



 1. Push the function switch to the band (FM/AM) you want to listen to. Push it to "OFF", and the device will shut down.

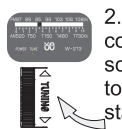

 2. Refer to the pointer in combination with the frequency scale and rotate the tuning knob to the frequency of the radio station you want to listen to.



3. Rotate the volume knob to adjust to the desired volume.

Note:

- 1.When searching for FM radio stations, please pull out the telescopic antenna and turn it to the window. Only then can more radio stations be searched out.
2. Due to the limitation of AM signals, it is best to listen at night.

The steps for playing MP3



1.Push the function switch to the MP3 file. The machine will default to Bluetooth mode. At this point, you can connect to Bluetooth to play music.



2. Insert the TF card into the TF card slot, and the machine will automatically play the music on the TF card. Select the song directory to play by briefly pressing the three buttons on the front of the machine.




3.During playback, you can long press or to rewind or fast forward the song,Long press the side to switch the playback mode (TF/BT).

4. Memory storage playback progress: During playback, press the once to pause (or remove the card), then turn off the machine (or switch the function switch), and the playback progress will be saved. The next time the machine is turned on, it will continue playing based on the saved progress.

Keyboard remapping function


	Short press	Long press	Double-tap
	Previous track	Rewind	Switch folder
	Pause, Memory saved/Play	Mode switch	Single cycle/Cancel single cycle
	Next track	Fast forward	Folder repeat/Cancel folder repeat

 The use of the external headset function

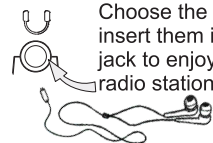


Choose the right headphones and insert them into the headphone jack to enjoy the pleasure of the radio station alone.

 The use of lighting functions



Turn the flashlight switch to the "ON" position to turn on the lighting, and turn it to the "OFF" position to turn it off.

 Charging



When the battery inside the machine runs out, you can insert the provided data cable into the charging port to connect a 5V charger to charge the machine. During charging, the charging indicator light will be on. Once fully charged, the indicator light will go off.

Product Specification

Power supply: TYPE-C:5V 1A
Built-in lithium battery: 3.7V
External alkaline battery: 4.5V(AAAX3)
Frequency: FM: 87-108MHZ
AM: 520-1730KHZ
Size: 63x35x116mm

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.