


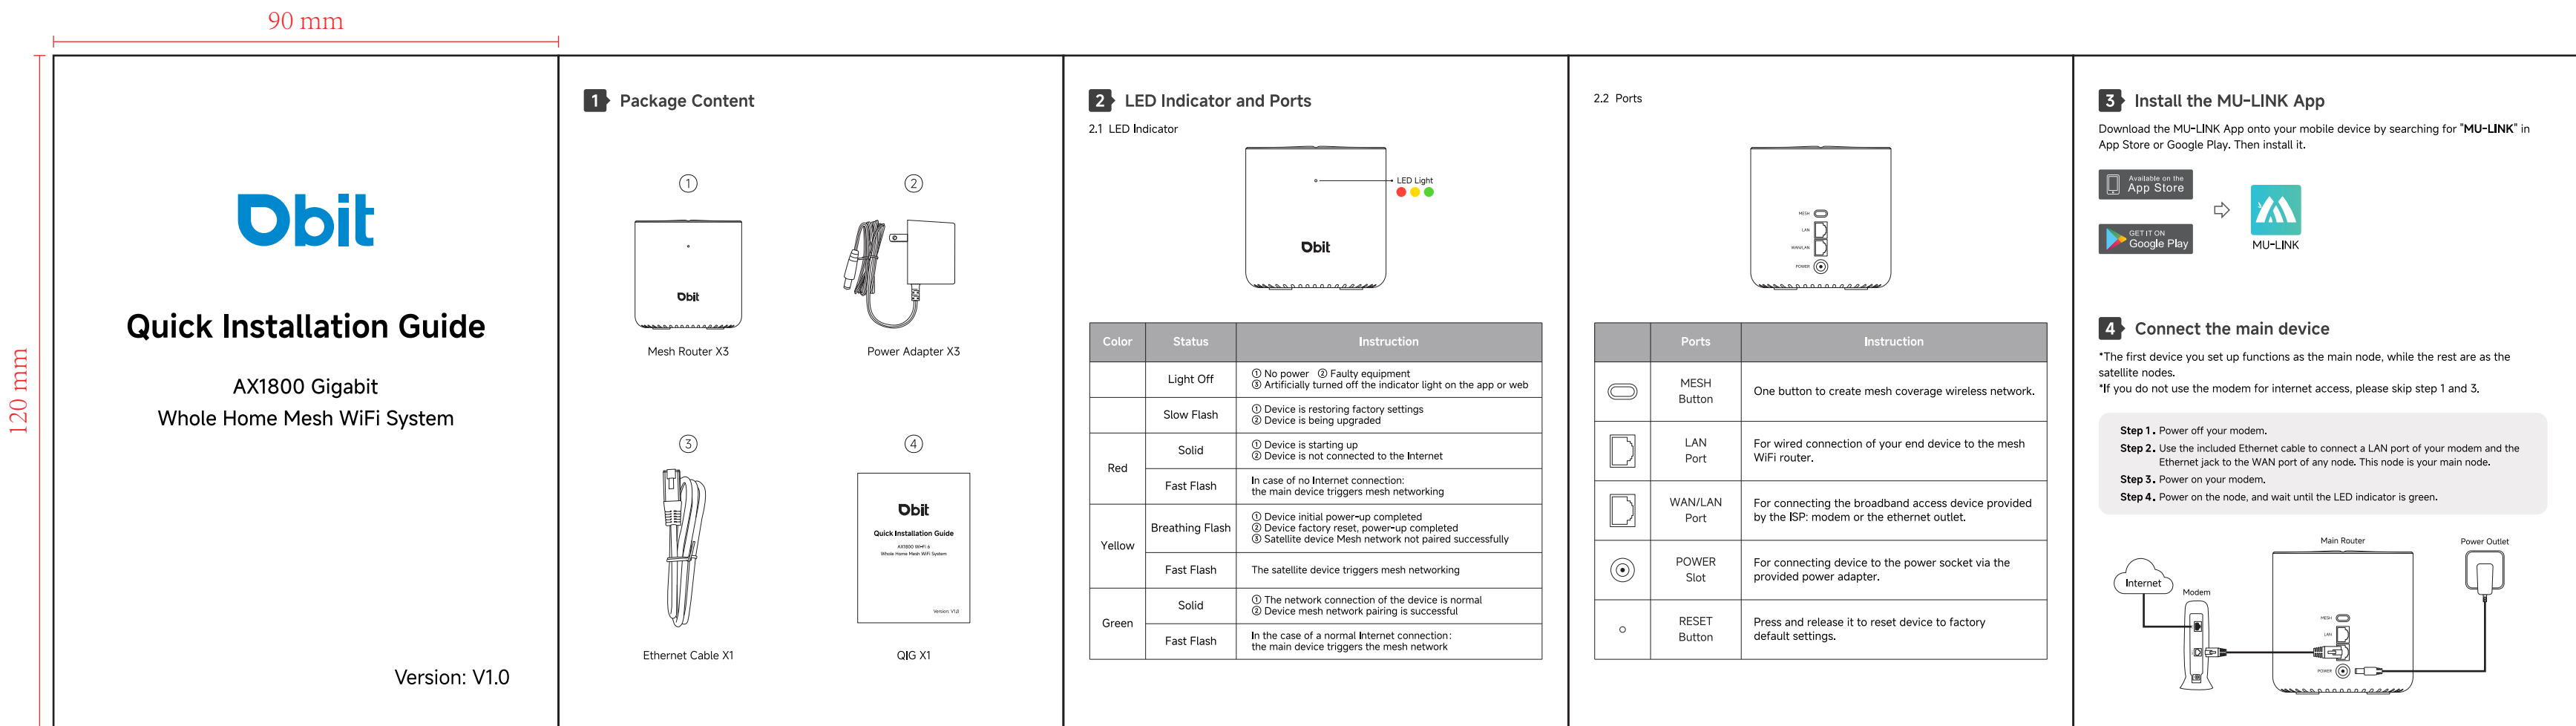

Mesh Networking Method 1: Wireless Mesh Networking (Mesh Button) 5.1 Connect the main node to the internet (1) Connect the smartphone to the WiFi network of the main node. The SSID and password are specified on the bottom label of any node. (2) Run the MU-LINK App and follow the onscreen instructions to connect the main node to the internet; (3) After the main node is connected to the internet, its LED indicator lights solid green. 5.2 Mesh networking of satellite devices with main device (1) Take out the first satellite device and power it on. (2) Wait for the yellow light to flash breathing, press the MESH button of the main device, wait for the green light of the main device to flash quickly, release the MESH button, and then press the MESH button of the first satellite device, wait for the yellow light to flash quickly, release the MESH button. (3) The two devices enter into the automatic networking stage, and when the LEDs of the main device and the first satellite device both turn green, it means that the Mesh is successful. (4) The second satellite device and the main device for Mesh networking method as above. 5.3 Mesh networking of two satellite devices If the two satellite devices want to mesh network, first press the first satellite device's MESH button, wait for the yellow light to flash quickly and then release the MESH button, then press the second satellite device's MESH button, also wait for the yellow light to flash quickly and then release the MESH button, and wait for the two devices to light up the green light, the mesh network is successful. Tips: (1) If it is three devices Mesh networking, note that you have to follow the above steps in order to network, you can't press the MESH button at the same time for all three, so as not to cause abnormality. (2) After the two sub routers are successfully networked together with the main router first, then put the two sub routers into the corresponding rooms to save your unnecessary time. FAQ Method 2 : Paring Mesh Network via APP Download and install the APP, then follow the instructions in the APP interface to set up the mesh network, at the same time you can operate network settings, guest network settings, parental controls, firmware upgrades, etc. on the app. Q: If I forget the login name and password of the device, what should I do (how to reset the router)? A: If you forget the login name and password of the device, if you have changed it, the only way you can do factory reset to the device, then the login name and password will be restored to their default values. *The RESET button is on the bottom of the wifi router.* Q: What should I do if I can't access the router's management page? A: - Reboot your router and try again. - Check your Wi-Fi connection. Q: How to connect a device to my Mesh router? A: It supports both wired and wireless connections. For wireless devices, you only need to search it's Wi-Fi name on the device and connect with the Wi-Fi password. Besides, each node provides one Ethernet port on the back for wired devices such as PC, printers, TVs, etc. You can also connect a switch to the Ethernet port to expand the wired connections. Q: Can I add another new node to expand my network coverage? A: Yes. Run the MU-LINK App or create a mesh network wirelessly using mesh button or pair networking using LAN to LAN wired. Q: My 2.4 GHz Wi-Fi-enabled devices, such as a home security camera, cannot connect to my Mesh Wi-Fi network. What should I do? A: Step 1: Connect your smartphone to your Mesh Wi-Fi network Step 2: Select the SSID ending with 2_4G Step 3: Re-configure the camera for the network	Quick Installation Guide Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means (electronic, mechanical, printing, recording or other possible means) for the propagation of goods any commercial, profitable purposes. Obit is the registered trademark of Shenzhen Dbit Network Equipment Co., Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners. Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee. Manufacturer: Shenzhen Dbit Network Equipment Co., Ltd. Address: 4002, Phase II, Qianhai Shimao Financial Center, No. 3040 Xinghai Avenue, Nanshan Street, Qianhai Shenzhen-Hong Kong Cooperation Zone, Shenzhen, China Cautions: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Operating frequency: 2412-2462MHz, 5180-5240MHz, 5260-5320MHz, 5500 - 5700MHz, 5745 - 5800MHz OTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable. Copyright© 2024 Shenzhen Dbit Network Equipment Co., Ltd. All rights reserved.
---	---