 


Party Speaker with Flame Light

GKD60

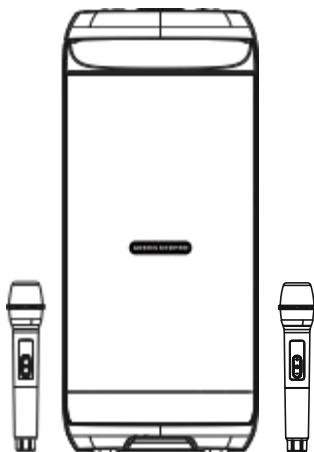

English

Deutsch

Français / Belgium

Español

Italiano

Polski

Nederlands

Svenska

Română

中文

USER MANUAL

KARAOKE MACHINE

For more information and customer support contact



SUPPORT@CHLCHL.COM

IMPORTANT SAFETY INFORMATION

Please read and retain these safety instructions carefully before using your portable karaoke speaker. Failure to follow these guidelines could result in electric shock, fire, personal injury, or damage to the product or surrounding property. To ensure safe operation, observe the following precautions:

INTENDED USE ONLY

Use the speaker only as directed in the user manual and by the manufacturer. Any improper or unintended use may lead to malfunction, injury, or voiding of the warranty.

AVOID MOISTURE

Keep the speaker dry at all times. Do not use or store the device in damp or wet environments. Avoid exposing it to rain, splashes, or spills.

NO LIQUID CONTAINERS NEARBY

Do not place containers holding liquids (e.g., vases, cups, bottles) on or near the speaker. Accidental spills can lead to electric shock or short circuits.

AVOID HEAT SOURCES

Keep the speaker away from open flames, radiators, heat registers, stoves, or any other sources of excessive heat. Prolonged exposure to heat may cause overheating or damage.

USE APPROVED ACCESSORIES

Only use the power adapter, charging cables, and accessories supplied with the product or officially recommended by the manufacturer. Using unapproved accessories can pose safety risks.

MAINTAIN PROPER VENTILATION

Do not cover or block any ventilation openings. Install and operate the speaker in a well-ventilated area to prevent overheating. Maintain a minimum clearance of 10 cm (4 inches) around the unit.

POWER SAFETY

Unplug the speaker during electrical storms or if it will be unused for extended periods. This helps protect the device from power surges or lightning damage.

CABLE MANAGEMENT

Position power cords to avoid tripping hazards or damage. Do not allow the power cable to be pinched, bent excessively, or exposed to heavy foot traffic, especially at the plug or device connector.

AVOID PHYSICAL DAMAGE

Do not drop, crush, puncture, or disassemble the device. Physical damage may compromise internal safety components and create a fire or shock hazard.

NO USER-SERVICEABLE PARTS

Do not attempt to open or repair the speaker yourself. Repairs should only be performed by authorized service personnel. Unauthorized tampering may result in injury and void the warranty.


CHILDREN AND PETS

Keep the speaker and accessories out of reach of small children and pets. Small parts may pose a choking hazard, and cords can present entanglement risks.

WHAT'S IN THE BOX

- | | | |
|----------------------|-----------------------|----------------------|
| 1 Speaker x 1 | ② UHF Microphones x 2 | ③ Remote Control x 1 |
| 4 Charging Cable x 1 | 5 AUX Cable x 1 | ⑥ User Manual x 1 |

 PRODUCT DIAGRAM

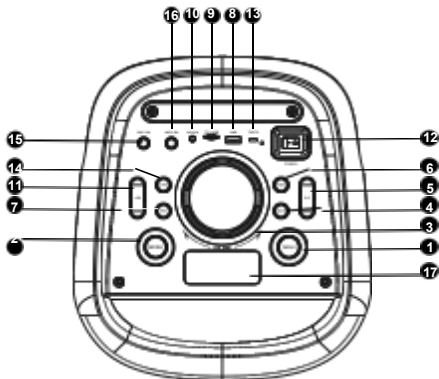


- ① **MENU:** Short press to switch between master volume, treble, bass, mic volume, and echo mix settings. View the current value on the LED screen.
- ② **MODE:** Short press to switch between Bluetooth, FM, and AUX modes. In Bluetooth mode, long press for 3 seconds to disconnect and re-enter pairing mode.
- ③ **VOLUME KNOB:** Rotate to adjust the currently selected volume or audio setting.
- ④ **NEXT:** In USB/TF mode, short press to skip to the next track; long press to fast-forward. In Bluetooth mode, short press to skip to the next track.
- ⑤ **PLAY/PAUSE (P/P):** In Bluetooth, USB, or TF mode, short press to play or pause. In FM mode, long press to auto-scan for stations.
- ⑥ **PREV:** In USB/TF mode, short press to go to the previous track; long press to rewind. In Bluetooth mode, short press to go to the previous track.
- ⑦ **REC:** With a USB drive or TF card inserted, short press to start recording, and short press again to stop and play the recording. Recording requires a wired microphone or an active wireless microphone. After recording, turn off the microphone before exiting recording mode. During playback, long press REC to replay the recording or long press again to exit playback.

- 8 **USB PORT:** Insert a USB drive ($\leq 128\text{GB}$) to play audio files or save recordings.
- 9 **TF-CARD PORT:** Insert a TF (microSD) card ($\leq 128\text{GB}$) to play audio files or save recordings.
- 10 **AUX IN:** Connect external devices using the provided 3.5mm AUX cable to play audio through the speaker.
- 11 **LED:** Short press to cycle through LED lighting effects. Long press to turn the LEDs off.
- 12 **POWER:** Press to turn the speaker on or off.
- 13 **CHARGING PORT:** Supports 5V/2A charging inputs.
- 14 **M.PRI:** Short press to enable or disable microphone priority. When enabled, background music automatically lowers while speaking.
- 15 **MIC1 IN:** Connect a wired microphone.
- 16 **MIC2 IN:** Connect a second wired microphone.
- 17 **LED SCREEN:** Displays the menu selection and settings. The default settings are:


Screen Display	Menu Setting	Default Value	Adjustment Range
Treble: Adjust the treble level.		6	0-12
Bass: Adjust the bass level.		8	0-12
Mic Volume: Adjust the microphone volume.		30	0-30
Echo Mix: Adjust the microphone echo effect.		10	0-30
Master Volume: Adjust the main speaker volume.		18	0-30

*Press Menu button to change audio settings.

 REMOTE CONTROL DIAGRAM

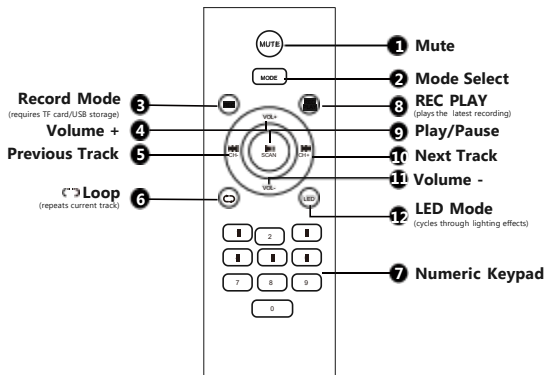

POWER ON AND RECHARGE

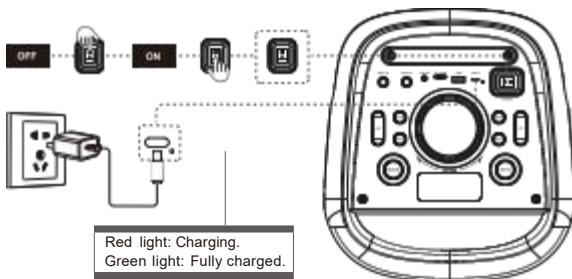 

1. Connect the speaker to AC power using the provided charging cable. The battery level will be displayed as bars on the LED screen.
2. Press the Power button to turn the speaker on or off.

 
Important Note: To protect battery life, do not let the speaker fully drain. Always turn off the speaker when not in use.

USING YOUR KARAOKE SPEAKER

This karaoke speaker supports one audio source at a time, including USB, TF card, Bluetooth, FM, or AUX input. By default, the speaker powers on in Bluetooth mode.

Note: If multiple audio sources are connected simultaneously, the speaker will automatically play from the source with the highest priority.


Bluetooth Pairing Instructions

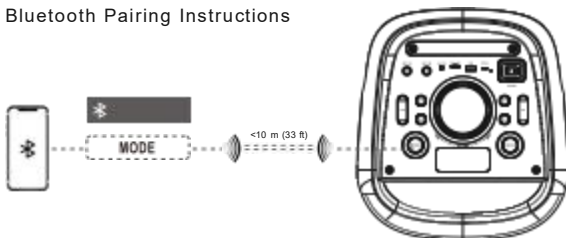

1. Power on the speaker. Bluetooth pairing mode will be activated by default. If not, press the Mode button to switch to Bluetooth mode.
2. On your device, enable Bluetooth and select "GKD60-C" from the list of available devices.
3. Once connected, you can start streaming audio to the speaker.

***Long press the Mode button for 3 seconds to disconnect and re-enter pairing mode.**

 
TF Card and USB Connection Instructions

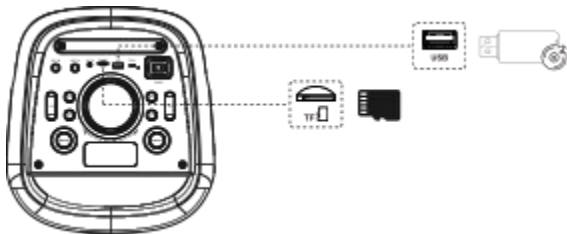

1. Insert a TF card or USB drive (max. 128GB) into the corresponding slot.
 2. Once inserted, the speaker will automatically switch to the corresponding playback mode.
- Supported audio formats are MP3 and WAV.

AUX Connection Instructions

 
1. Connect an external device using the provided 3.5 mm AUX cable.
2. Once connected, the speaker will detect the AUX input (after stopping other sources like Bluetooth or USB) and play audio from the connected device.

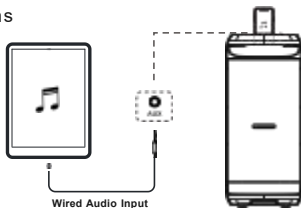

MICROPHONE CONNECTION INSTRUCTIONS


This speaker supports both UHF wireless microphones (included) and wired microphones (not included).

 MICROPHONE DIAGRAM

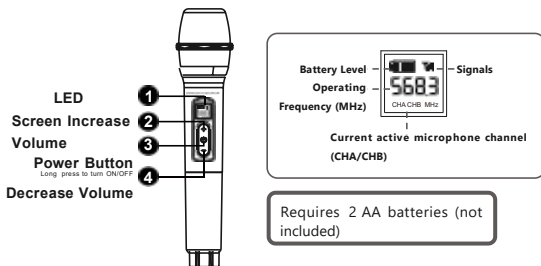

CONNECTING MICROPHONES

 1. Press the Power button to switch on the microphone(s).
2. Power on the speaker. The microphones will connect automatically.
3. If not, press and hold + and - simultaneously until the screen displays **1d** to enter re-pairing mode. Restart the speaker to complete connection.

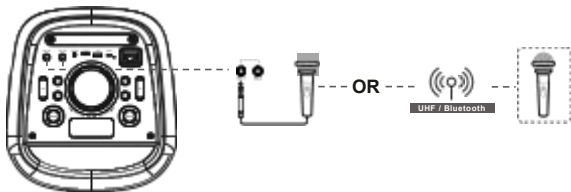

TROUBLESHOOTING WIRELESS MICROPHONES

1. Microphones not pairing

 
1. Ensure the speaker is powered on and in bluetooth pairing mode.
2. Verify the microphones are switched on and within 5 m (16 ft) of the speaker.
3. If pairing fails, power off both devices, then turn them back on and retry.

2. UHF/Bluetooth instability or disconnections Performance may be affected

if:


1. The speaker or microphone battery is low.
2. The device is too far from the speaker.
3. Nearby wireless devices cause interference.

If issues persist, please contact after-sales support via email for assistance. ADVANCED USAGE INSTRUCTIONS

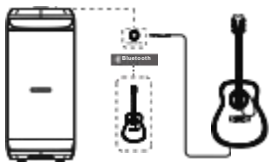

Guitar Connection

 Connect your guitar to the speaker using the guitar input socket

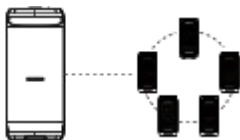

Light Effect

Press the LED button to cycle through 12 different light effects.
Long press to turn off the lights



TWS Mode

1. Turn on two speakers of the same model and switch both to Bluetooth mode. Ensure that neither speaker is connected to any external device.
2. Place the speakers within 50 cm (20 in) of each other.
3. Select one speaker as the main unit and press its TWS button to activate TWS mode. The speakers will connect automatically, and a voice prompt will confirm a successful connection.
4. On your playback device, enable Bluetooth, search for the speaker's model name, and connect. Once paired, the speaker's display will stop flashing.
5. To disconnect TWS mode, press the TWS button while connected. A voice prompt will confirm the disconnection.

TECHNICAL SPECIFICATIONS

MODEL	GKD60
POWER INPUT	5V =2A
BATTERY CAPACITY	7.4V / 8000mAh
RATED POWER	50W
PEAK POWER	500W
SPEAKER DRIVERS	2 × 6.5" woofers + 1 × 1" tweeter
DISPLAY SCREEN	LED screen
SPEAKER IMPEDANCE	3Ω
BLUETOOTH VERSION	5.3
BLUETOOTH TRANSMISSION RANGE	10 m (33 ft)
BLUETOOTH FREQUENCY RANGE	2.402G - 2.480G
FREQUENCY RESPONSE	50Hz - 20kHz
TOTAL HARMONIC DISTORTION (THD)	<10%
SENSITIVITY	≥85DB
SIGNAL-TO-NOISE RATIO (SNR)	≥75DB
FM FREQUENCY RANGE	87.5MHz - 108MHz
OPERATING TEMPERATURE	-10°C to +50°C (14°F to 122°F)
WEIGHT	8.56 kg (18.9 lbs)
DIMENSIONS	35 × 32 × 73 cm (13.8 × 12.6 × 28.7 in)

COMPLIANCE DECLARATION

FCC & IC COMPLIANCE

This device complies with FCC Part 15 and Industry Canada license-exempt RSS standards. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received.

CAN ICES-003(B)/NMB-

003(B) FCC DECLARATION

This product complies with FCC Part 15, Subpart B.

Note: Unauthorized changes may void FCC authorization.

Complies with the Radio Equipment Directive 2014/53/EU, EMC Directive 2014/30/EU, and LVD 2014/35/EU. Indoor use only for 5150–5350 MHz band.

UK COMPLIANCE (UKCA MARK)

Conforms to UK Radio, EMC, and Electrical Safety Regulations.

ENVIRONMENTAL COMPLIANCE

Complies with EU RoHS (2011/65/EU & 2015/863) and UK RoHS. Contains lead above 0.1% (CAS No. 7439-92-1) as per REACH Article 33. Dispose of in accordance with WEEE regulations.

WARRANTY

LIMITED 12-MONTH WARRANTY

Your Green Keeper portable karaoke speaker is covered by a 12-month limited warranty from the date of purchase, against defects in materials and workmanship under normal use.

If a defect arises within the warranty period, we'll repair or replace the product after technical assessment. Warranty claims require a valid proof of purchase.

NOTE: This warranty does not cover misuse, unauthorized modifications, accidental damage, normal wear and tear.

To request service, please contact us at: support@chlchl.com

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement .

Radiation Exposure Statement

To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.