 


GREEN KEEPER

-GKD61-

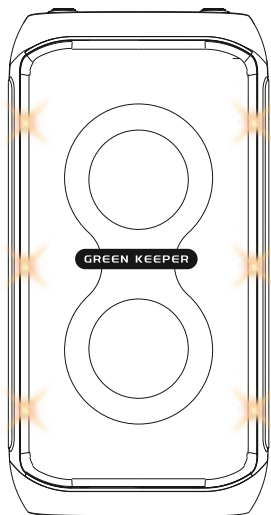

English Deutsch Français / Belgium Español Italiano
Polski Nederlands Svenska Română 中文

USER MANUAL

MULTIFUNCTIONAL KARAOKE MACHINE

For more information and customer support contact
SUPPORT@CHLCHL.COM

IMPORTANT SAFETY INFORMATION

Please read and retain these safety instructions carefully before using your portable karaoke speaker. Failure to follow these guidelines could result in electric shock, fire, personal injury, or damage to the product or surrounding property. To ensure safe operation, observe the following precautions:

INTENDED USE ONLY

Use the speaker only as directed in the user manual and by the manufacturer. Any improper or unintended use may lead to malfunction, injury, or voiding of the warranty.

AVOID MOISTURE

Keep the speaker dry at all times. Do not use or store the device in damp or wet environments. Avoid exposing it to rain, splashes, or spills.

NO LIQUID CONTAINERS NEARBY

Do not place containers holding liquids (e.g., vases, cups, bottles) on or near the speaker. Accidental spills can lead to electric shock or short circuits.

AVOID HEAT SOURCES

Keep the speaker away from open flames, radiators, heat registers, stoves, or any other sources of excessive heat. Prolonged exposure to heat may cause overheating or damage.

USE APPROVED ACCESSORIES

Only use the power adapter, charging cables, and accessories supplied with the product or officially recommended by the manufacturer. Using unapproved accessories can pose safety risks.

MAINTAIN PROPER VENTILATION

Do not cover or block any ventilation openings. Install and operate the speaker in a well-ventilated area to prevent overheating. Maintain a minimum clearance of 10 cm (4 inches) around the unit.

POWER SAFETY

Unplug the speaker during electrical storms or if it will be unused for extended periods. This helps protect the device from power surges or lightning damage.

CABLE MANAGEMENT

Position power cords to avoid tripping hazards or damage. Do not allow the power cable to be pinched, bent excessively, or exposed to heavy foot traffic, especially at the plug or device connector.

AVOID PHYSICAL DAMAGE

Do not drop, crush, puncture, or disassemble the device. Physical damage may compromise internal safety components and create a fire or shock hazard.

NO USER-SERVICEABLE PARTS

Do not attempt to open or repair the speaker yourself. Repairs should only be performed by authorized service personnel. Unauthorized tampering may result in injury and void the warranty.

CHILDREN AND PETS

Keep the speaker and accessories out of reach of small children and pets. Small parts may pose a choking hazard, and cords can present entanglement risks.

WHAT'S IN THE BOX



Karaoke Speaker x 1



Remote Control x 1



USB-C Charging Cable x 1

 
 


AUX Cable x 1



User Manual x 1

PRODUCT DIAGRAM

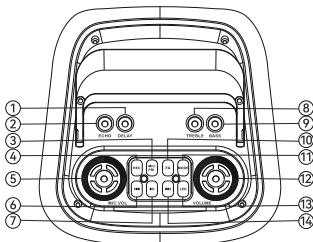


- 1 **DELAY KNOB:** Rotate clockwise to increase microphone delay effect; counter-clockwise to decrease or disable.
- 2 **ECHO KNOB:** Rotate clockwise to add microphone echo; counterclockwise to reduce or disable.
- 3 **MIC PRIORITY:** Press to enable or disable microphone priority. When enabled, background music automatically lowers while speaking.
- 4 **RECORDING:** Press to start or stop recording. A tone will confirm recording has started.
- 5 **MIC VOLUME KNOB:** Rotate to adjust microphone volume.
- 6 **⏮ PREV:** Press to skip to the previous track.
- 7 **⏸ PLAY/PAUSE:** Press to play or pause. In USB/TF mode, long press to enable/disable repeat. In Bluetooth mode without external media connected, long press to enable/disable TWS mode.

- 8 TREBLE KNOB:** Rotate clockwise to increase treble; counterclockwise to reduce or disable.
- 9 BASS KNOB:** Rotate clockwise to increase bass; counterclockwise to reduce or disable.
- 10 EQ:** Press to switch between sound presets: Standard, Rock, Pop, Classic, Jazz, and Country.
- 11 MODE:** Press to toggle audio sources: Bluetooth, FM Radio, or AUX (line-in).
- 12 VOLUME KNOB:** Rotate to adjust master volume.
- 13 LED LIGHT:** Press to cycle through 10 lighting modes. Long press to turn lights off.
- 14 ►►NEXT:** Charging port.
- 15 AUX:** Connect an external device via 3.5 mm AUX cable.
- 16 USB:** Insert a USB drive (up to 128 GB). Playback starts automatically.
- 17 TF:** Insert a TF card (up to 128 GB). Playback starts automatically.
- 18 CHARGING INDICATOR:** Red light = charging; light off = fully charged.
- 19 USB-C PORT:** Charging port (DC 5V).
- 20 MIC IN 1/2:** Connect a wired microphone or wireless receiver.
- 21 POWER:** Switch the speaker on or off.


SOUND EFFECT MIXING GUIDE

MENU SETTING	RECOMMENDED VALUE	ADJUSTMENT RANGE
Echo Mix: Adjust the microphone echo effect.	10	0-16
Delay Effect: Adjust the microphone echo effect.	10	0-16
Treble: Adjust the bass level.	2	-8,8
Bass: Adjust the treble level.	2	-8,8
Mic Volume: Adjust the microphone volume.	20	0-30
Master Volume: Adjust the main speaker volume.	18	0-30

 REMOTE CONTROL DIAGRAM

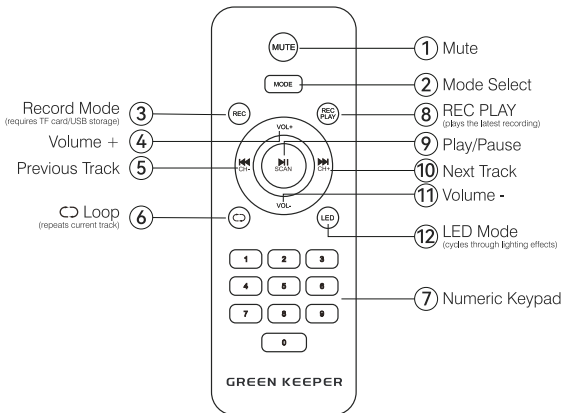

POWER ON AND RECHARGE

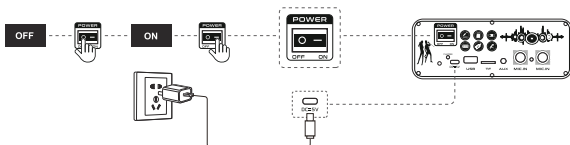 

1. Connect the speaker to AC power using the supplied USB-C charging cable. The CHARGING INDICATOR LED light shows charging status: red = charging, light off = fully charged.

2. Use the POWER switch to turn the speaker on or off.

If no audio input is detected for 10 minutes, the speaker will automatically shut down.

 
Note: Power adapter not included.
Supported charging power: 1–10 W (max).

USING YOUR KARAOKE SPEAKER

This karaoke speaker supports one audio source at a time, including USB, TF card, Bluetooth, or AUX input. By default, the speaker powers on in Bluetooth mode.

Note: If multiple audio sources are connected simultaneously, the speaker will automatically play from the source with the highest priority.


BLUETOOTH PAIRING INSTRUCTIONS

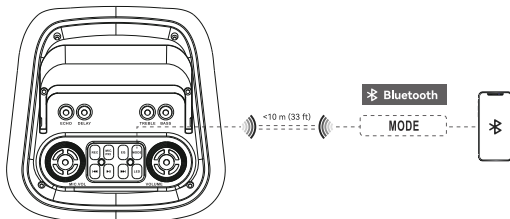

1. Power on the speaker. Bluetooth pairing mode will be activated by default. If not, press the MODE button to switch to Bluetooth mode.
2. On your device, enable Bluetooth and select GKD61 from the list of available devices.
3. Once successfully connected, you can start streaming audio to the speaker.

Tip: To pair a new device, long press the MODE button for 3 seconds to disconnect and enter pairing mode.

 TF CARD AND USB CONNECTION INSTRUCTIONS

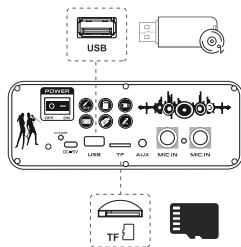

1. Insert a TF card or USB drive (max. 128GB) into the correspondant slot.
2. Once inserted, the speaker will automatically switch to the corresponding playback mode.

 
Note: Supported audio formats are MP3 and WAV.

FM RADIO MODE INSTRUCTIONS


1. Press the MODE button to switch to FM Radio mode.
2. Use the PREV/NEXT buttons to manually tune stations, or select a station using the remote control.
3. To start automatic scanning, press and hold the PLAY/PAUSE button for 3 seconds.

Tip: For clearer reception, place the speaker near a window and avoid areas with heavy obstructions.

AUX CONNECTION INSTRUCTIONS

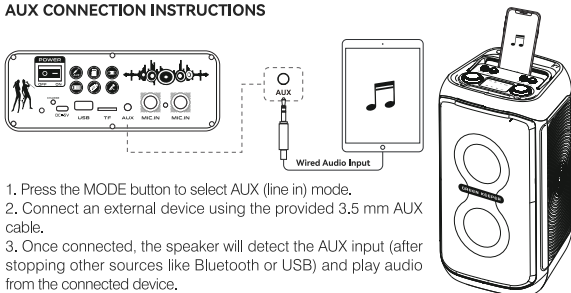

 1. Press the MODE button to select AUX (line in) mode.
2. Connect an external device using the provided 3.5 mm AUX cable.
3. Once connected, the speaker will detect the AUX input (after stopping other sources like Bluetooth or USB) and play audio from the connected device.



CONNECTING MICROPHONES

1. Press the Power button to switch on the microphone(s).
2. Power on the speaker. The microphones will connect automatically.
3. If the connection fails, press and hold the + and – buttons on the microphone at the same time until 1d appears on the display. Then restart the speaker to complete the pairing.

TROUBLESHOOTING WIRELESS MICROPHONES

1. Microphones not pairing

1. Ensure the speaker is powered on and in bluetooth pairing mode.
2. Verify the microphones are switched on and within 5 m (16 ft) of the speaker.
3. If pairing fails, power off both devices, then turn them back on and retry.

2. UHF/Bluetooth instability or disconnections

Performance may be affected if:

 
1. The speaker or microphone battery is low.
2. The device is too far from the speaker.
3. Nearby wireless devices cause interference.

If issues persist, please contact after-sales support via email for assistance.

ADVANCED USAGE INSTRUCTIONS

TWS (TRUE WIRELESS STEREO) MODE SETUP

1. Power on two speakers of the same model and switch both to Bluetooth mode. Ensure they are not connected to any device.
2. Place the speakers within 10 m (33 ft) of each other.
3. Select one speaker as the primary unit and press its TWS button to activate pairing. The two speakers will connect automatically, and a voice prompt will confirm successful pairing.
4. On your playback device, enable Bluetooth, search for the speaker model name, and connect.
5. To exit TWS mode, press the TWS button again. A voice prompt will confirm disconnection.

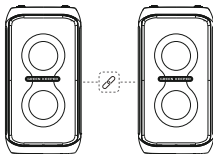

RECORDING

1. Insert a TF card or USB drive and connect the microphone(s).
2. Press the REC button to start recording. A tone will confirm recording has begun.
3. Press the REC button again to stop and automatically play back the recording.
4. Use the PREV/NEXT buttons to navigate between recordings.

TECHNICAL SPECIFICATIONS

MODEL	GKD61
POWER INPUT	DC 5V/2A 10W
BATTERY CAPACITY	7.4V / 7200MAH
RATED POWER	40W
PEAK POWER	400W
SPEAKER DRIVERS	2 × 6.5" WOOFERS + 1 × 1" TWEETER
DISPLAY SCREEN	LED SCREEN
SPEAKER IMPEDANCE	4Ω
BLUETOOTH VERSION	5.1
BLUETOOTH TRANSMISSION RANGE	10 M (33 FT)
BLUETOOTH FREQUENCY RANGE	2.402G - 2.480G
FREQUENCY RESPONSE	20HZ-18KHZ
TOTAL HARMONIC DISTORTION (THD)	< 10%
SENSITIVITY	≥85DB
SIGNAL-TO-NOISE RATIO (SNR)	≥75DB
FM FREQUENCY RANGE	87.5MHZ - 108MHZ
OPERATING TEMPERATURE	-10°C TO +50°C (14°F TO 122°F)
WEIGHT	7.4 KG (16.3 LBS)
DIMENSIONS	30 × 29 × 57 CM (11.8 × 11.4 × 22.4 IN)

COMPLIANCE DECLARATION

FCC & IC COMPLIANCE

This device complies with FCC Part 15 and Industry Canada license-exempt RSS standards. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
 2. This device must accept any interference received.
- CAN ICES-003(B)/NMB-003(B)

FCC DECLARATION

This product complies with FCC Part 15, Subpart B.

Note: Unauthorized changes may void FCC authorization.

WIRELESS RF NOTICE

RF exposure limits are met. Devices in the 5.15–5.35 GHz band are restricted to indoor use. Radar interference may occur in the 5.25–5.85 GHz range.

EU COMPLIANCE (CE MARK)

Complies with the Radio Equipment Directive 2014/53/EU, EMC Directive 2014/30/EU, and LVD 2014/35/EU. Indoor use only for 5150–5350 MHz band.

UK COMPLIANCE (UKCA MARK)

Conforms to UK Radio, EMC, and Electrical Safety Regulations.

ENVIRONMENTAL COMPLIANCE

Complies with EU RoHS (2011/65/EU & 2015/863) and UK RoHS. Contains lead above 0.1% (CAS No. 7439-92-1) as per REACH Article 33. Dispose of in accordance with WEEE regulations.

WARRANTY

LIMITED 12-MONTH WARRANTY

Your Green Keeper portable karaoke speaker is covered by a 12-month limited warranty from the date of purchase, against defects in materials and workmanship under normal use.

If a defect arises within the warranty period, we'll repair or replace the product after technical assessment. Warranty claims require a valid proof of purchase.

NOTE: This warranty does not cover misuse, unauthorized modifications, accidental damage, normal wear and tear.

To request service, please contact us at: support@chlchl.com

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

GREEN KEEPER

MULTIFUNCTIONAL KARAOKE MACHINE

Manufacturer: Shenzhen CHL Industries Co.,Ltd
Address: Room 6F, 6/F, Nanyuan Maple Building Nanshan Avenue,
Nanshan District, Shenzhen, Guangdong, China



MADE IN PRC