

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the audio cable (not included) to connect from the device's "Line Out" to the "Aux In" of this device to enjoy playing music.

Under any playing mode, When you use the audio cable to connect the device, it will auto switch to the AUX mode.

Under AUX mode, all functions can be controlled by external device.

Battery Charging:

1. Power off the unit, put the provided adapter into the charge slot of unit,the red charging indicator keep lighting.
2. Charge time should be 5-6 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

Note:

- 1.The playtime depends on how hard the unit is working. Heavy, loud, bass music will use more energy.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.
3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

Recording function:

- 1.Make sure the unit is swithed on, and there is a USB memory stick or TF card inserted in the slot.
2. Plug and test the microphone upon plugging. The device is ready to record once your voice is audible from the speaker.
3. Press the button 'REC' on the remote controller to start/stop recording, you are freely to rec what you want.

Playing music from USB disk and Micro SD card:

- 1.Turn the Power button to "ON".
2. Insert USB flash disk or Micro SD card into slot, the music stored will be played automatically.
3. Under playing mode, short press Previous or Next button to select songs you like, Or press the VOL-/ VOL+ button to adjust volume down and up. PLAY/PAUSE to play or pause.
4. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert USB disk or Micro SD card will disconnect the Bluetooth and switch to play the USB disk or Micro SD card. You can press the MODE button to switch to Bluetooth mode again.

How to Use FM Radio:

1. Turn the power button to "ON", press the "MODE" button to FM radio mode.
2. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
3. Press Previous or Next button to change the stored FM channel.

Under FM radio state, to get a better FM signal, please insert a audio cable (not included) as antenna.

Party Speaker with Flame Light
GKD62



INSTRUCTION
MANUAL

For correctly operating, please read this manual carefully before using. We are not responsible for consequence caused by fault or oversight of this manual.

FEATURES :

- Outdoor HIFI Bluetooth Radio
- Output very clear sound and dynamic sound effect
- With A2DP/AVRCP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
- Secure simple pairing for user-friendly operating
- 10 meters operating range
- With USB and Micro TF supporting
- With Line-in function, suitable for PC'MID'TV and other audio device
- Built-in lithium rechargeable battery 4400mAh
- With FM Radio
- TWS function
- RGB music beat light


ACCESSORIES:

- User manual *1pc
- Wireless microphone *2pc
- Type C cord *1pc
- Remote controller *1pc

SPECIFICATION:

Bluetooth range: up to 10 meters
Speaker: Woofer Size: 6.5 inch*2
Output: 30W
Connections: USB disk, Micro SD card reader, Microphone input jack
Aux-in 3.5mm jack connection
Power supply: Built-in rechargeable lithium battery 4400mAh
Play time: 2-5 hours
Recharge power: 5V/2A
Product size: 295(L) *265(W) * 575(H) mm
Charge time: 5-6 hours(5V/2A)


INSTRUNCTION FOR APPEARANCE AND KEY :

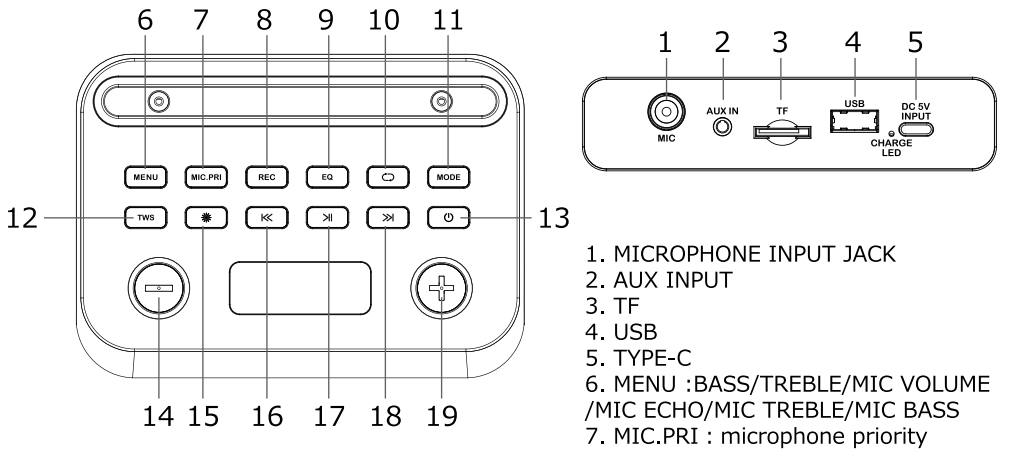

8. REC : recording your voice by microphone ,first long press REC button ,recording voice playback .undering recoring voice palyback , long press REC button ,delect voice recording in USB/TF
9. EQ :IN DOOR /OUT DOOR MODE
10. C REPEAT/LONG PRESS :VOICE CANCEL
11. MODE :FM/AUX/BLUETOOTH/USB/TF,
12. TWS function
13. Power ON/OFF,
14. VOLUME -
15. Light Switch
16. PREVIOUS SONG/IN FM MODE,selects last channel
17. PAUSE/PALY, IN FM MODE :AUTO SCAN FM
18. NEXT SOUND. In FM MODE, selects next FM channel.
19. VOLUME +

REMOTE FUNCTION DECLARATION:

1. POWER :POWER ON /POWER OFF
2. MODE :FM/AUX/BLUETOOTH/USB/TF
3. 0-9 , Key number for selecting the certain songs in the USB/TF card.
4. EQ: In door /out door mode.
5. REP :repeat one/repeat all.
6. PREVIOUS SOUND . In FM MODE selects last channel.
7. PAUSE/PALY,Press to PAUSE and resume to PLAY.
8. VOL-:Increase/decrease the master volume.
9. MUTE :Press this button to mute the unit.
10. SCAN :When it is on the mode of FM,press this button to auto scan all channels.
11. NEXT SOUND. In FM MODE, selects next FM channel.
12. VOL+:Increase/decrease the master volume.

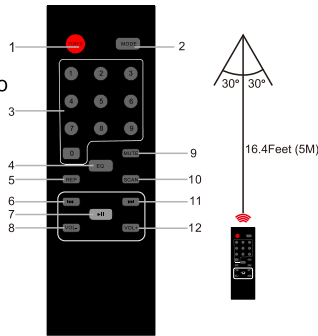

Bluetooth connection:

- 1.Turn the power button to "ON". In the front panel, press the mode button to launch the Bluetooth application. The system voice of the device will say "Bluetooth mode".
2. Activate Bluetooth of mobile phone and search for device name "FG206-22" then connect it. The system voice says "Bluetooth connected" once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Press Previous or Next button on the device or on Mobile phone to select songs you like.
5. Press Play/pause button on the device or on Mobile phone to play/pause the music.
6. Use the Bluetooth device to adjust volume up and down. Or press the VOL-/ VOL+ button to adjust volume down and up

TWS FUNCTION :

1. Turn on two identical speakers you want to pair, please noted they must be the same BT paring name, both under BT mode. use your mobile phone connect one speaker bluetooth
2. press another speaker "TWS"button,the unit shows "SLAV" in indicator screen without flicker, then successfully paired,
3. play music and enjoy true wireless stereo sound effect

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement .

Radiation Exposure Statement

To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.