

GREEN KEEPER

-GKD80-



USER MANUAL

MULTIFUNCTIONAL KARAOKE MACHINE

For more information and customer support contact



SUPPORT@CHLCHL.COM

IMPORTANT SAFETY INFORMATION

Please read and retain these safety instructions carefully before using your portable karaoke speaker. Failure to follow these guidelines could result in electric shock, fire, personal injury, or damage to the product or surrounding property. To ensure safe operation, observe the following precautions:

INTENDED USE ONLY

Use the speaker only as directed in the user manual and by the manufacturer. Any improper or unintended use may lead to malfunction, injury, or voiding of the warranty.

AVOID MOISTURE

Keep the speaker dry at all times. Do not use or store the device in damp or wet environments. Avoid exposing it to rain, splashes, or spills.

NO LIQUID CONTAINERS NEARBY

Do not place containers holding liquids (e.g., vases, cups, bottles) on or near the speaker. Accidental spills can lead to electric shock or short circuits.

AVOID HEAT SOURCES

Keep the speaker away from open flames, radiators, heat registers, stoves, or any other sources of excessive heat. Prolonged exposure to heat may cause overheating or damage.

USE APPROVED ACCESSORIES

Only use the power adapter, charging cables, and accessories supplied with the product or officially recommended by the manufacturer. Using unapproved accessories can pose safety risks.

MAINTAIN PROPER VENTILATION

Do not cover or block any ventilation openings. Install and operate the speaker in a well-ventilated area to prevent overheating. Maintain a minimum clearance of 10 cm (4 inches) around the unit.

POWER SAFETY

Unplug the speaker during electrical storms or if it will be unused for extended periods. This helps protect the device from power surges or lightning damage.

CABLE MANAGEMENT

Position power cords to avoid tripping hazards or damage. Do not allow the power cable to be pinched, bent excessively, or exposed to heavy foot traffic, especially at the plug or device connector.

AVOID PHYSICAL DAMAGE

Do not drop, crush, puncture, or disassemble the device. Physical damage may compromise internal safety components and create a fire or shock hazard.

NO USER-SERVICEABLE PARTS

Do not attempt to open or repair the speaker yourself. Repairs should only be performed by authorized service personnel. Unauthorized tampering may result in injury and void the warranty.

CHILDREN AND PETS

Keep the speaker and accessories out of reach of small children and pets. Small parts may pose a choking hazard, and cords can present entanglement risks.

WHAT'S IN THE BOX



Karaoke Speaker x 1



Remote Control x 1



Power Adapter x 1

 


AUX Cable x 1



User Manual x 1


PRODUCT DIAGRAM

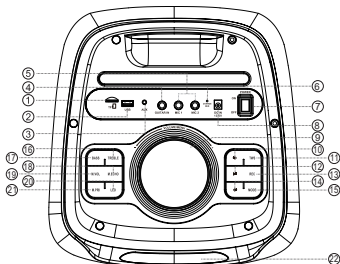


- ① **TF**: Plug a TF card and the speaker switches to the TF source automatically.
- ② **USB**: Plug a USB storage device and the speaker switches to the USB source automatically.
- ③ **AUX**: Connect an external audio device to the speaker through a 3.5mm AUX cable.
- ④ **GUITAR IN**: Connect a guitar to the guitar socket.
- ⑤ **MIC 1/2**: Connect wired microphone 1/2 to the MIC 1/2 socket.
- ⑥ **CHARGE RED**: Red light on while charging; blue light on when fully charged.
- ⑦ **POWER**: Press to power ON/OFF.
- ⑧ **DC IN**: DC charging socket.

- 9** **○**: Rotate the Volume/Menu knob to adjust volume or menu setting values.
- 10** **⏮**: Press to go to the previous track.
- 11** **TWS**: Press to enable True Wireless Stereo (TWS) pairing mode.
- 12** **⏸**: Press to Pause or continue to Play.
- 13** **REC**: Press to enable recording mode.
- 14** **⏭**: Press to go to the next track.
- 15** **MODE**: Press to switch between audio source modes: Bluetooth, FM Radio, and AUX.
- 16** **TREBLE**: Press the Treble button to adjust the treble level.
- 17** **BASS**: Press the Bass button to adjust the bass level.
- 18** **M.ECHO**: Press the Echo button to adjust the echo level.
- 19** **M.VOL**: Press the Volume button to adjust the master volume.
- 20** **LED**: Press to cycle through LED lighting modes. A total of 12 lighting effects are available.
- 21** **M.PRI**: Press to turn ON or OFF the microphone priority.
- 22** **LED SCREEN**: Displays the menu options and current settings.

 REMOTE CONTROL DIAGRAM

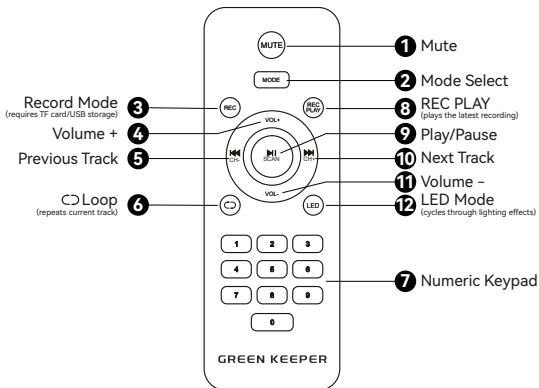

POWER ON AND RECHARGE

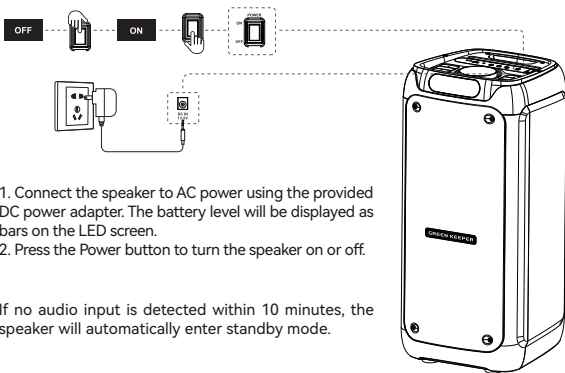 

1. Connect the speaker to AC power using the provided DC power adapter. The battery level will be displayed as bars on the LED screen.
2. Press the Power button to turn the speaker on or off.

If no audio input is detected within 10 minutes, the speaker will automatically enter standby mode.

 
USING YOUR KARAOKE SPEAKER

This karaoke speaker supports one audio source at a time.

Priority order: USB/TF card > Bluetooth > AUX input.


Note: When multiple sources are connected, the speaker will automatically play from the highest-priority source available.

BLUETOOTH PAIRING INSTRUCTIONS

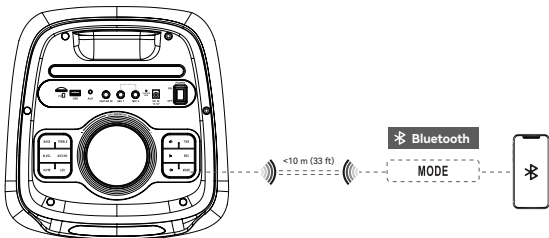


1. Press the Bluetooth button on the speaker to enter pairing mode.
2. Select "GKD80" from the available devices list.
3. Once connected, you can start streaming audio from your device to the speaker.

 TF CARD AND USB CONNECTION INSTRUCTIONS

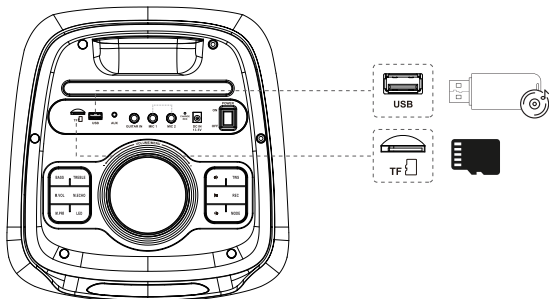


1. Insert a TF card or USB drive into the appropriate slot.
 2. Once inserted, the speaker will automatically switch to the corresponding playback mode.
- Supported audio formats: MP3 and WAV.

 AUX CONNECTION INSTRUCTIONS

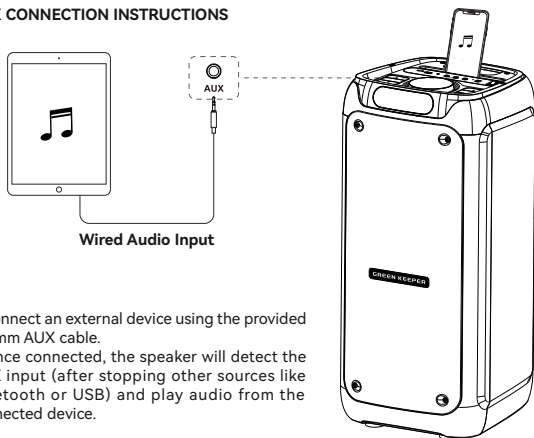


1. Connect an external device using the provided 3.5 mm AUX cable.
2. Once connected, the speaker will detect the AUX input (after stopping other sources like Bluetooth or USB) and play audio from the connected device.

 ADVANCED USAGE INSTRUCTIONS

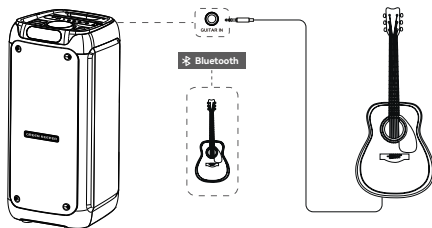


Guitar Connection

 Connect your guitar to the speaker using the guitar input socket.

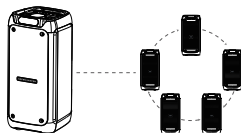

Light Effect

 Press the LED button to cycle through 12 different light effects.

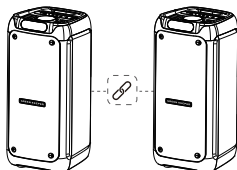

TWS Mode

1. Turn on two speakers of the same model and switch both to Bluetooth mode.
2. Place the speakers within 50 cm (20 in) of each other.
3. Select one speaker as the main unit and press its TWS button to activate TWS mode. The speakers will connect automatically, and a voice prompt will confirm a successful connection.
4. On your playback device, enable Bluetooth, search for the speaker's model name, and connect. Once paired, the speaker's display will stop flashing.
5. To disconnect TWS mode, press the TWS button while connected. A voice prompt will confirm the disconnection.

TECHNICAL SPECIFICATIONS

MODEL	GKD80
POWER INPUT	DC 13.5V / 2A
BATTERY CAPACITY	11.1V / 7200MAH
RATED POWER	60W
PEAK POWER	600W
SPEAKER DRIVERS	2 × 6.5" WOOFERS + 1 × 3" TWEETER
DISPLAY SCREEN	LED SCREEN
SPEAKER IMPEDANCE	4Ω
BLUETOOTH VERSION	5.1
BLUETOOTH TRANSMISSION RANGE	10 M (33 FT)
BLUETOOTH FREQUENCY RANGE	2.402G - 2.480G
FREQUENCY RESPONSE	20HZ - 20KHZ
TOTAL HARMONIC DISTORTION (THD)	< 5%
SENSITIVITY	≥85DB
SIGNAL-TO-NOISE RATIO (SNR)	≥75DB
FM FREQUENCY RANGE	87.5MHZ - 108MHZ
OPERATING TEMPERATURE	-10°C TO +50°C (14°F TO 122°F)
WEIGHT	9.28 KG (20.5 LBS)
DIMENSIONS	69.2 × 32.5 × 33 CM (27.2 × 12.8 × 13.0 IN)

COMPLIANCE DECLARATION

FCC & IC COMPLIANCE

This device complies with FCC Part 15 and Industry Canada license-exempt RSS standards. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
 2. This device must accept any interference received.
- CAN ICES-003(B)/NMB-003(B)

FCC DECLARATION

This product complies with FCC Part 15, Subpart B.

Note: Unauthorized changes may void FCC authorization.

WIRELESS RF NOTICE

RF exposure limits are met. Devices in the 5.15–5.35 GHz band are restricted to indoor use. Radar interference may occur in the 5.25–5.85 GHz range.

EU COMPLIANCE (CE MARK)

Complies with the Radio Equipment Directive 2014/53/EU, EMC Directive 2014/30/EU, and LVD 2014/35/EU. Indoor use only for 5150–5350 MHz band.

UK COMPLIANCE (UKCA MARK)

Conforms to UK Radio, EMC, and Electrical Safety Regulations.

ENVIRONMENTAL COMPLIANCE

Complies with EU RoHS (2011/65/EU & 2015/863) and UK RoHS. Contains lead above 0.1% (CAS No. 7439-92-1) as per REACH Article 33.

Dispose of in accordance with WEEE regulations.

WARRANTY

LIMITED 12-MONTH WARRANTY

Your Green Keeper portable karaoke speaker is covered by a 12-month limited warranty from the date of purchase, against defects in materials and workmanship under normal use.

If a defect arises within the warranty period, we'll repair or replace the product after technical assessment. Warranty claims require a valid proof of purchase.

NOTE: This warranty does not cover misuse, unauthorized modifications, accidental damage, normal wear and tear.

To request service, please contact us at: support@chlchl.com

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.