

## QUICK START GUIDE

# ROCK STONE

### Contact Us

 


Before operation, it is imperative to carefully peruse the instructional manual.


**S336**



### Product Diagram

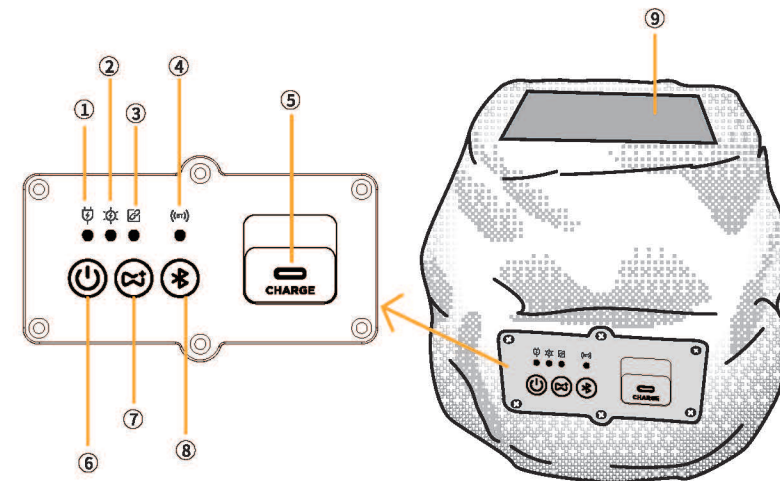

 1. Type C Charging Indicator
2. Solar Charging Indicator
3. Multi-Link indicator
4. Bluetooth indicator
5. Type C Charging Port
6. Power Button
7. Multi-Link Button
8. Bluetooth Button
9. Solar charging Panel

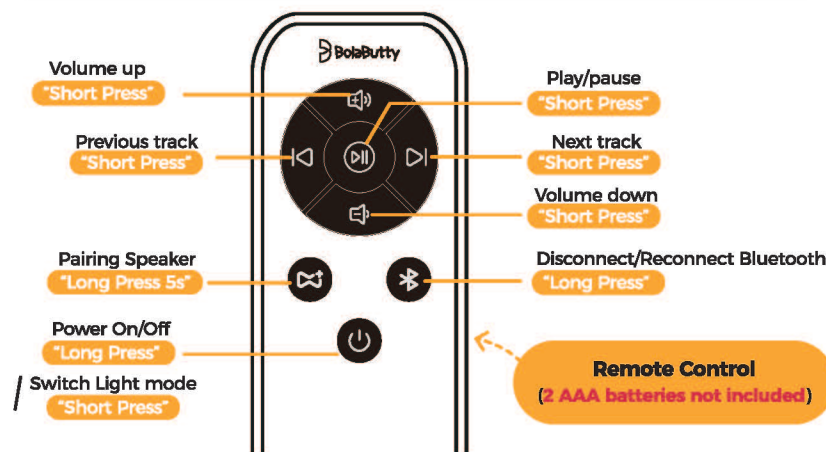


01/

| Speaker Function |                                | What to do            |
|------------------|--------------------------------|-----------------------|
|                  | Power on/off                   | Press and hold for 2s |
|                  | Light on/switch light mode     | Press Once            |
|                  | Enter/Exit Pairing Mode        | Double Click          |
|                  | Disconnect/Reconnect Bluetooth | Press and hold for 2s |
|                  | Factory settings               | Press and hold for 8s |

|  |                                                                                                                                                    |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Type C Charging Indicator (Red) : The charging red light remains on until the battery is full and turns off.                                       |
|  | Solar Charging Indicator (Red) : The charging red light remains on until the battery is full and turns off.                                        |
|  | Multi-Link Indicator (Green) : Slow flashing when not connected to the Primary speaker, constantly light on when connected to the Primary speaker. |
|  | Bluetooth indicator (Blue) : Slow flashing when not connected to the phone, constant light on when connected to the phone.                         |


### What's in the box

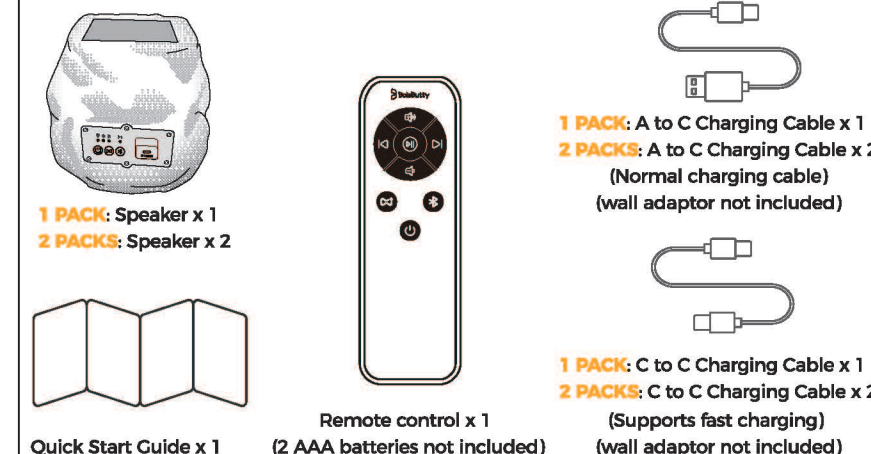 


02/

### Pairing remote control and speaker (when using for the first time)

 **Step 1:** Long press the power button on the speaker for **2 seconds**, and you will hear a "POWER ON" prompt sound. At this time, the speaker is under the power on state, and the green Multi-Link indicator light flashes slowly. Then press and hold the **MULTI-LINK BUTTON** for **5 seconds**, you will hear a "PAIRING" prompt sound.

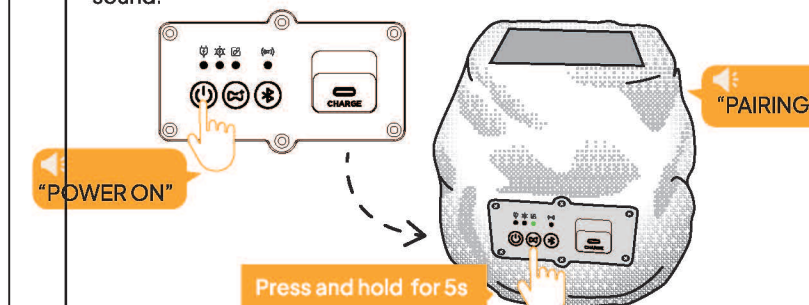

 **Step 2:** Install **2 AAA batteries (not included)** in the remote control machine. Press and hold the **MULTI-LINK BUTTON** on the remote control for **5 seconds**, and the green indicator light on the remote control will flash once. At the same time, you will hear a prompt sound "CONNECTED" from the speaker. The remote control and speaker are successfully connected.

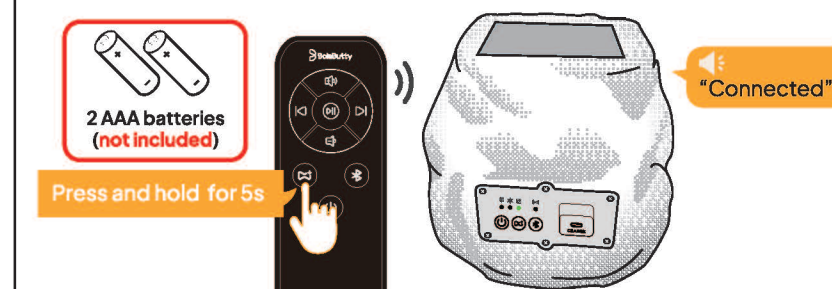


**NOTE:**  
After the remote control and speaker are paired and connected, you will be able to remotely control the speaker to turn on/off/switch light mode, previous/next track, increase/decrease the volume, play/pause, disconnect/reconnect Bluetooth

03/

### BLUETOOTH CONNECTIONS
 
#### Connect using the Bluetooth menu on your mobile device

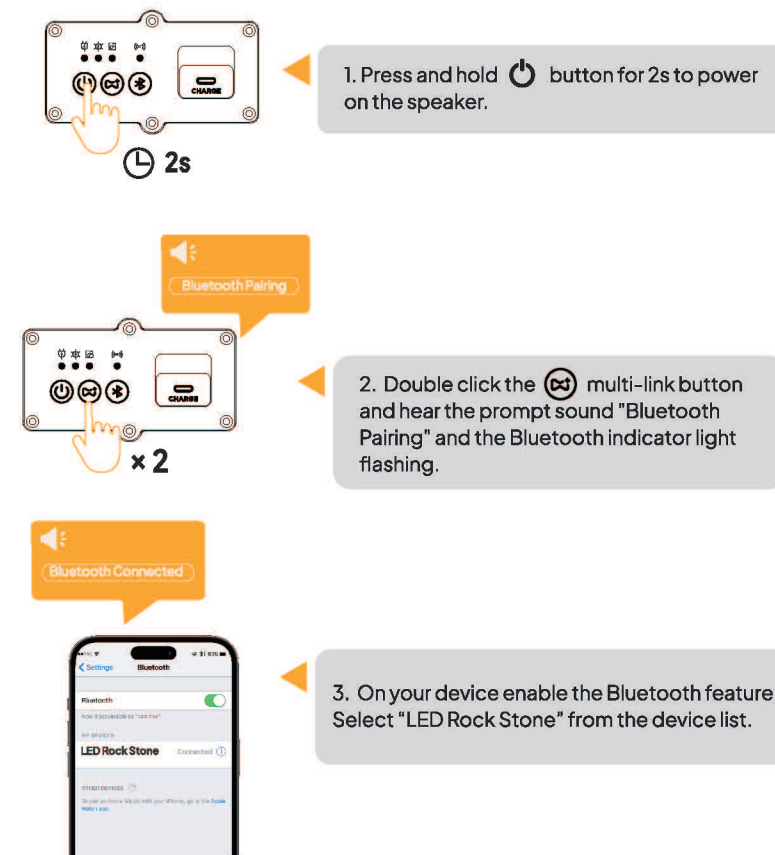


#### Hint

Upon connecting one speaker to your Bluetooth device, the other speakers will promptly enter Multi-Sync mode, either TWS or Party modes, as they power on. This will enable all speakers to play sync.

04/

 **Listening to music wirelessly with 2 speakers (TWS)**

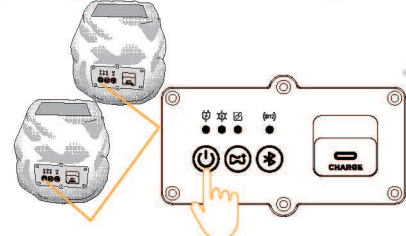

1. Make sure both speakers are powered on.

2. Double click the **Multi-Link Button** on **ONE** of the two speakers.

3. Make sure one speaker is connected to your device.

4. Stereo mode is enabled, and you are now able to play audio in unison using your mobile device.

**Note:** Performance may vary based on mobile device, distance and environmental factors.

**Enjoying wireless playback using multiple speakers (Party Mode)**

You can connect multiple speakers (up to 100 speakers) compatible with the Multi-Sync mode via BLUETOOTH connections and enjoy music playback.

 
1. Make sure one speaker is connected to your Bluetooth device.

2. On additional speakers, press and hold the power button for 2 seconds to turn them on.

3. Multi-sync mode is enabled, and you are now able to play audio in perfect sync using your mobile device.

**STEP 1**


press and hold for 2s

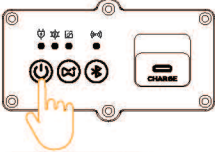


**STEP 2**

"Bluetooth pairing"

 Double Click

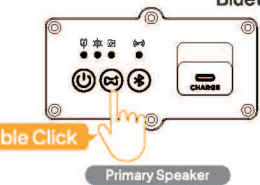

**STEP 3**

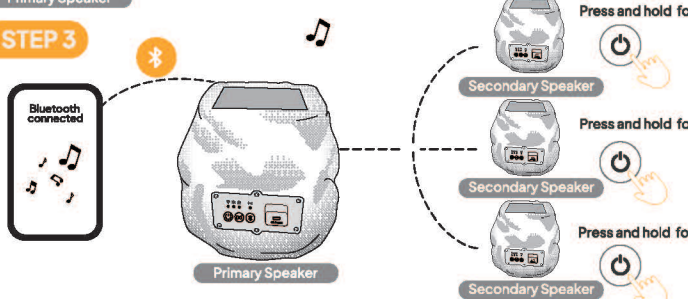 


**NOTE**

● To adjust volume, please use your mobile phone or paired remote control. When you power off the primary speaker, all connected speakers will power off.

**Switch the Primary Speaker**


**STEP 1**

 On the desired speaker, double click the **Multi-Link Button** to set that speaker as Primary speaker. On the previous primary speaker, also double click the bluetooth button into pairing mode.

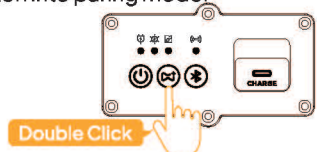


**STEP 2**

 On your device Bluetooth Settings, tap another LED Rock Stone.

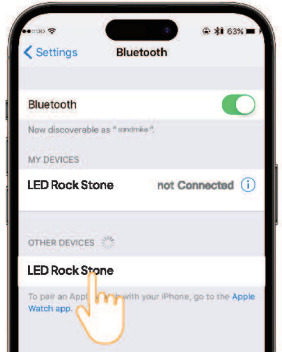

**STEP 3**

 Wait a few seconds, then press the play on your mobile to resume audio playback, at which point the Primary speaker will have switched.

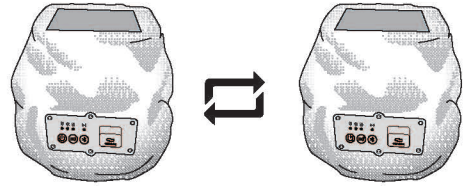

**SPECIFICATIONS**

|                   |                                 |
|-------------------|---------------------------------|
| Produce Name      | LED Rock Stone                  |
| Charging Time     | 2~3 Hours                       |
| Connection Method | Bluetooth                       |
| Waterproof Level  | IPX7                            |
| Bluetooth Version | Bluetooth 5.4                   |
| Input             | 5V= 3A, 9V=2A, 12V=1.5A, 20V=1A |

**IMPORTANT SAFETY INFORMATION**

**Important Remote Control Battery Safety Warnings**  
To prevent fire, personal injury, or product damage, please read and follow these warnings:  
**USE CORRECT TYPE:** Use only two (2) AAA alkaline or manganese batteries. The package does not include remote control batteries.  
**DO NOT MIX:** Do not mix old and new batteries, or batteries of different types (brands, chemistries).  
**INSERT CORRECTLY:** Ensure batteries are inserted with the correct polarity. Incorrect installation may cause leakage or rupture.  
**REMOVE EXHAUSTED BATTERIES:** Remove all batteries from the device if it will not be used for an extended period.  
**KEEP AWAY FROM CHILDREN:** Batteries are not toys. Keep batteries and remote controls out of reach of children.  
**DISPOSE PROPERLY:** Dispose of used batteries according to your local environmental laws and regulations. Do not dispose of in fire or household trash.  
**WARNING — RISK OF BURNS OR LEAKAGE:**  
Do not recharge non-rechargeable batteries.  
Do not short-circuit, disassemble, heat above 60°C (140°F), or incinerate batteries.  
If battery fluid leaks, avoid contact with skin or eyes. In case of contact, rinse the affected area with plenty of water and seek medical advice.  
**Usage and Care**  
Do not expose the remote control to excessive moisture, heat sources, or direct sunlight.  
Clean with a dry, soft cloth. Do not use liquid or aerosol cleaners.  
**Troubleshooting**  
Remote not working: Check if batteries are installed correctly, exhausted, or replaced with new ones.  
Weak or intermittent signal: Ensure there is a clear line of sight between the remote and the device it controls.

**CHARGING**

1. Fully dry off the speaker and the USB port before charging.
2. Unplug the USB charging cable when it is not in use. Must seal the charging port when not charging to prevent water from entering!
3. The battery may go to sleep or die if it doesn't charge/discharge for a long time. Please charge and discharge it at least one time per month.

**ONE YEAR WARRANTY**

1. Our products are covered by a 12-month limited warranty, starting from the date of purchase. This warranty is not transferable and applies only to the original consumer purchaser.
2. For quality-related issues, we will, at its sole option, repair or replace any products that malfunction due to defective parts or workmanship at no charge to you.

**Not Covered Under Warranty:**

- Damage from outside sources
- Damage from misuse of products (including, but not limited to: falls, extreme temperatures, water, operating devices improperly, incorrect connections, incorrect battery use)
- Damaga caused by accident, improper care, negligence, excessive wear and tear, or improper installation or assembly contrary to any written installation instruction
- Items that have expired their warranty period
- Non quality-related issues (after 30 days of purchase)
- Repairs through 3rd parties
- Any questions, please feel free to contact us.

**FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:** The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**NOTICE**

 This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.