 


中

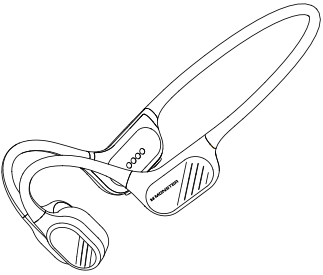

Monster Maxstar MQH17

骨传导蓝牙耳机

使用说明书

产品参数

- 蓝牙版本----- V6.0
- 传输距离----- ≥10m
- 喇叭直径----- 18mm
- 喇叭阻抗----- 8Ω±15%
- 灵敏度----- 92±3dB
- 频率范围----- 20Hz-20KHz
- 电池容量----- 140mAh 3.8V
- 充电时间----- ≈2小时
- 播放时间----- ≈7小时

包装清单

耳机

磁吸充电器

使用说明书

 
产品示意图



耳机

给耳机充电

用磁吸充电线连接。




温馨提示：充电时指示灯白灯常亮，充满亮绿灯，连接电脑时绿灯闪烁

指示灯指南

模式	描述	语音提示
开机	耳机白绿灯交替闪烁	"Power on"
关机	耳机白色指示灯长亮1秒熄灭	"Power off"
配对	耳机白绿灯交替闪烁	"Pairing"
连接	耳机指示灯熄灭	"Connected"
断开	耳机白绿灯交替闪烁	"Disconnected"
耳机低电	耳机白色指示灯闪烁	"Battery low"
耳机充电	白灯长亮（充满绿灯长亮）	—
数据传输	绿灯闪烁（满电绿灯长亮）	—

 耳机佩戴指引

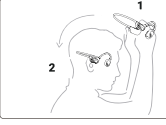

取下耳机，将其放在颈部底部后面，将耳机挂在耳朵上，然后，请享受音乐。

产品操作说明

1. 开机

长按功能键3秒开机

2. 关机

方式一：长按功能键3秒关机。
方式二：与蓝牙耳机断开连接5分钟后，自动关机。

3. 配对

步骤：耳机开机后，打开智能设备的蓝牙列表，搜索蓝牙名称进行配对，连接成功后，你会听到提示音“Connected”

* 超出范围，在新连接5分钟内，回到有效范围，自动连接设备。



注意：
* 如满产品长时间不使用，应先充满电，并确保设备处于关机状态。
* 充电完成后，请将充电线拔出，避免长时间充电造成设备损坏。

触控键操作

常规模式



语音助手：长按 功能键 1.5S “嘟”声后放手启动，单击关闭语音助手
音量加：单击 音量键+
音量减：单击 音量键-

音乐播放模式



暂停/播放：单击 功能键
上一曲：双击 音量键-切换
下一曲：双击 音量键+切换

电话免提



接听：单击 功能键
挂断：单击 功能键
拒接：长按 功能键2S拒接来电

模式切换：已连设备



游戏/音乐模式：长按 音量键-
蓝牙/本地模式：双击 功能键
本地模式下：三击 功能键切换 随机播放/顺序播放

恢复出厂设置

耳机开机未连接或连接状态，同时长按+/-键5秒后耳机关机（清除所有连接信息）

传输数据

使用数据线将骨传导耳机连接到手机上，PC端识别存储设备后，将MP3/WAV/AAC格式音频文件拖入存储设备后拔出

一拖二连接方式

1. 在关机状态下接开机键3秒，让耳机进入配对状态，然后连接第一台手机

2. 关闭第一台已连接的手机的蓝牙功能，让耳机进入配对状态，然后连接第二台手机

3. 第一台手机打开蓝牙手动操作手机来连接耳机

注意

1. 常速通，寿命长，如长期不用，建议15天充电1次，延长使用寿命，耳机需充电部分经常用棉签擦拭，能够防止电路腐蚀，避免接触不良，影响使用体验。

2. 电话电话由电话机组合环境暴露在雨淋，灼热或类似过热的环境中，禁止拆解，撞击，挤压或投入火中，若出现严重损坏，切勿继续使用，切勿将产品置于高温环境中，避免引起火灾。

3. 由于本产品采用无线连接方式，在日常使用过程中，受到环境、手机品牌、使用行为等因素影响，可能在播放音乐过程中，会出现短暂、轻微的声音卡顿属于正常现象。

警告

1. 长时间以高音量使用耳机可能会导致您的听力，建议只使用适当音量收听，请保持听音乐。

2. 请不要将本产品浸入水中，以免造成损坏。

3. 不要自行拆卸产品及配件，以免造成损坏及保修失效。

4. 请勿使产品受到剧烈冲击或震动以免造成损坏。

5. 请勿使用化学溶剂或清洗剂清洗本产品。

保修卡

尊敬的用户，本保修卡是您将来申请保修的凭证，请您配合销售商填写并妥善保管！

用户信息

用户姓名

电子邮箱

联系电话

邮政编码

通讯地址

产品信息

产品名称

产品型号

产品条码/编号

销售商信息

名称

地址

联系电话

邮政编码

销售日期

发票号码

备注

 
合格证

产品编号

生产日期

销售商

英

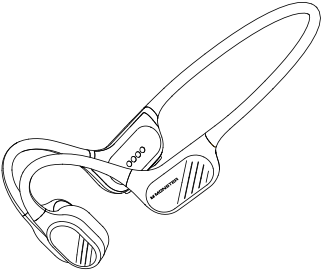

Monster Maxstar MQH17

Bone conduction Bluetooth headphones

instruction manual

Product parameters

- Bluetooth version----- V6.0
- Transmission distance----- ≥10m
- Driver diameter----- 18mm
- Driver impedance----- 8Ω±15%
- sensitivity----- 92±3dB
- Frequency response----- 20Hz-20KHz
- Battery capacity----- 140mAh 3.8V
- Charging time----- ≈2 hours
- Music playtime----- ≈7 hours

 
Product Schematic Description

Headphone

Magnetic attraction charger

Instructions Manual


Product Schematic Description

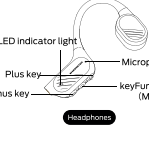

Headphones

Charge the charging case

 Connect it with a magnetic charging cable.




Warm reminder: When charging, the white indicator light remains constantly on, the green light turns on when fully charged, and the green light flashes rapidly when connected to a computer

Indicator guide

Mode	Describe	Sound prompt
Power On	The white and green lights of the headphones flashed alternately	"Power on"
Power Off	The white indicator light on the headphones remains on for one second and then goes off	"Power off"
Pairing	The white and green lights of the headphones flashed alternately	"Pairing"
Connected	The headphone indicator light goes on.	"Connected"
Disconnect	The white and green lights of the headphones flashed alternately	"Disconnected"
Low battery of the headphones	The white indicator light on the headphones is flashing	"Battery low"
Earphone charging	The white light remains on (the green light remains on when full)	—
Data transmission	The green light is flashing (the green light remains on when fully charged)	—

 Instructions for Wearing Headphone

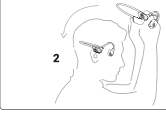

Take off the headphones and place them behind the bottom of your neck. Hang the ear hook on your ear. Then, please enjoy the music.

Product operating instructions

1. Power on

Press and hold the function key for 3 seconds to turn on the device


2. Power off

Method 1: Press and hold the function key for 3 seconds to turn off the device.
Method 2: The device will automatically shut down after being disconnected from the Bluetooth device for 5 minutes.

3. Pairing

Steps: After turning on the headphones, open the Bluetooth list of your smart device, search for the Bluetooth name to pair. Once the connection is successful, you will hear the prompt tone "Connected"

 * Headphones will try reconnecting to the device within 3 minutes when connection is lost.

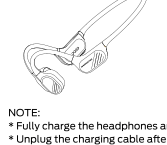

NOTE:
* Fully charge the headphones and power off before an intended not-in-use period.
* Unplug the charging cable after charging.

Operation

Normal



Voice assistant: Press and hold the function key for 1.5 seconds with a "beep" sound, then release it to start. Click to close the voice assistant
Volume increase: Click the volume key +
Volume down: Click the volume key -

Music playback



Pause/Play: Click the function key
Previous song: Double-click the volume key - Switch
Next track: Double-click the volume key + switch

Phone



Answer: Click the function key
Hang up: Click the function key
Reject: Press and hold the function key for 2 seconds to reject incoming calls

Mode switching : Device connected



Game/Music mode: Long press the volume key -
Bluetooth/Local mode: Double-click the function key
Bluetooth/Local mode: Press the function key three times to switch between random play and sequential play

Restore factory settings

When the headphones are turned on but not connected or are connected, press and hold the +/- keys for 5 seconds simultaneously to turn off the headphones (clear all connection information).

Transmit data

Connect the bone conduction headphones to your mobile phone using a data cable. After the PC recognizes the storage device, connect MP3/WAV/AAC/WM Drag the A-format audio file into the storage device and then pull it out

One-to-two connection mode

UPress the power button for 3 seconds when the device is off to put the headphones into pairing mode, and then connect it to your first mobile phone
2. Turn off the Bluetooth function of the first connected mobile phone, let the headphones enter the pairing state, and then connect the second mobile phone
3. Turn on the Bluetooth of the first mobile phone and manually operate the phone to connect the headphones

Precautions

1. Regular cleaning ensures a long lifespan. If not in use for a long time, it is recommended to charge the battery once every 15 days to extend its life. Use cotton swabs frequently for the charging part at the rear of the headphones. Alcohol wiping can help ensure smooth charging, prevent poor contact and avoid affecting the user experience.

2. Batteries (battery packs or battery combinations) must not be exposed to lighting, baking or similar overheated environments, disassembly, impact, Compression or throwing is prohibited. If severe swelling occurs in the fire, do not continue to use it. Do not place in a high-temperature environment. Do not use after soaking in water.

3. As this product adopts a wireless connection method, during daily use, it is affected by factors such as the environment, mobile phone brand, and usage behavior. It is a normal phenomenon that there may be brief and slight sound stuttering during music playback.

Warnings

1. Do not use headphones at high volume for an extended period of time.

2. Keep the headphones away from dust and water.

3. Do not disassemble the headphones and accessories, otherwise warranty will be voided.

4. Keep headphones away from any impact or vibration.

5. Do not use any chemical solvents or cleaning agent on the headphones.

Warranty Service

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User info

User name

Email

Contact number

Postal code

Mailing address

Product information

Product name

Product number

Product barcode / Serial number / Batch number

Vendor information

Name

Address

Contact number

Postal code

Sales date

Invoice number

Remark

合格证

Product No.

Production Time

QC