




VCOROS VR1 Plus
INSTRUCTION MANUAL

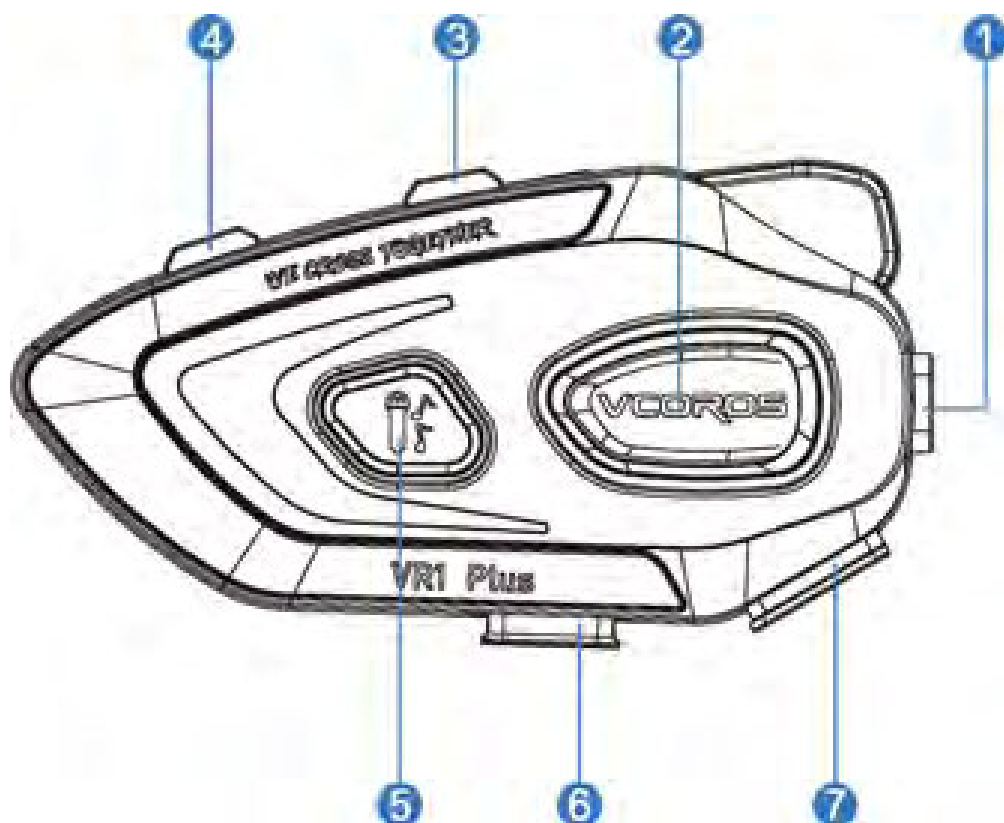

1.Power on or off button/
Music sharing button

2.Play or pause / Answer or hang up/
Decline to answer the phone/
Wireless indicator (blue light)/
Charging indicator (red light)

3.Volume up / Next song

4.Volume down / Previous song

5.M button (Voice assistant button + Intercom button)
Voice assistant light (green light) / Intercom light (green light) /
Music sharing light (yellow light)

6.Speaker&Microphone Interface

7.Charging port

Important Notice

Before installing the headphones, follow the Quick Manual instructions to connect your phone and listen to the sound and volume.


If there is a large difference in sound effect and volume after installing it on the helmet, please adjust the position of the speaker in the helmet

Power on/off

Power on: Long press 【Power on/off button】 for 3 seconds, hear the power on tone, Blue LED light flashes fast

Power off: Long press 【Power on/off button】 for 3 seconds, hear the shutdown tone, Blue LED off


Switching voice broadcasting: Power on without connecting wireless state, double-click 【Play pause button】, switch to voice announcement

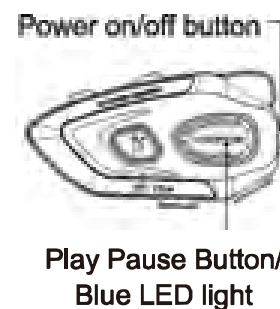

Wireless connection

Wireless connection: long press 【Power on/off button】 3 seconds to switch on the mobile phone to open the wireless, search and connect the wireless name 'VR1 Plus'

Wireless indicator status: Before wireless connection, the blue LED light flashes fast; after wireless connection, the blue LED light flashes slowly; when the music is paused, the blue LED light flashes slowly; when the music is playing, the blue LED light is on for a long time

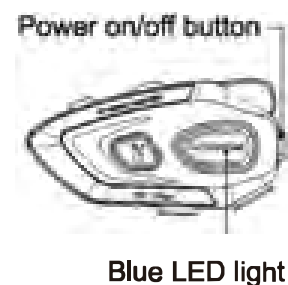

Telephone function

Switching automatic/manual answer: when not connected to wireless, double-click 【volume + button】 to switch manual answer/automatic answer.

Auto answer: wait 15 seconds for an incoming call and then answer it automatically


Manual answer: Short press 【Play pause button】 to answer the call

Refuse to answer: Long press 【Play pause button】 for 2 seconds to refuse to answer during an incoming call.

End call: short press 【Play pause button】 to end the call

End code replay: double press 【Play pause button】 to replay the end code.

Cancel call: short press 【Play pause button】 to cancel call when calling

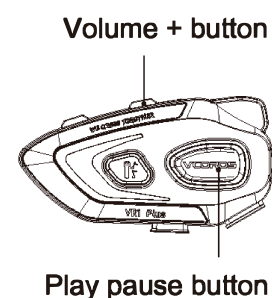


Music function

Music play and pause: When music is paused, short press 【Play pause button】 to play music; when music is playing, short press 【Play pause button】 to pause music

Previous/Volume Down: Short press 【Volume - button】 to switch to the previous song while music is playing, long press 【Volume - button】 to decrease the volume.

Next song/Volume up: short press 【Volume + button】 to switch to the next song while music is playing, long press 【Volume + button】 to increase the volume

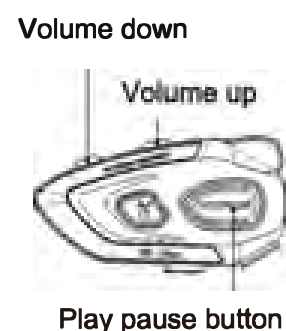


Intercom pairing

Intercom pairing: after the machine is switched on, long press the 【intercom button】 to enter intercom mode; after entering intercom mode, it will be automatically paired and connected, long press again to exit intercom mode.

Intercom indicator status: intercom is not connected before the intercom indicator green LED light flashes slowly; intercom connection is successful, the green LED light is long bright, and accompanied by intercom connection success tone, at this time you can intercom calls

Intercom button

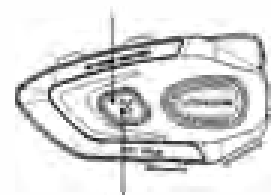

Green LED light


Music Sharing Mode and Pairing

Music Sharing Mode: After the two devices are switched on, short press 【Power on/off button】 to enter Music Sharing Mode (Music Sharing Mode Beep); short press again to exit Music

Sharing Mode Transmitter Mode/Receiver Mode: After entering Music Sharing Mode, double press 【Power on/off】 to switch the Music Sharing Transmitter Mode/Receiver Mode

Music Sharing Pairing Indicator Status: The yellow LED light status of the music sharing indicator in pairing, the yellow LED light at the transmitting end flashes fast, and the yellow LED light at the receiving end flashes slowly; after pairing successfully, the yellow LED light at the transmitting end flashes fast, and the yellow LED light at the receiving end lights up long; after the music sharing is successful, the transmitting end can long-press the 【volume up and down keys】 to adjust the size of the wireless volume and the volume of music sharing at the same time. The receiving end can long press 【volume up and down keys】 to adjust the volume of the machine, short press play pause button to mute or play.

Power on/off button

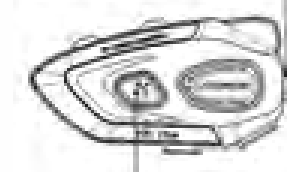

Yellow LED light

Mixing function


Mixing: Intercom and wireless can work independently without affecting each other, when the intercom and wireless are connected successfully, the two sounds can be mixed out to the speaker end, you can hear the sound of two modes at the same time (navigation/music, intercom)

Mix Output Mode: In intercom mode, double-click 【M button】 to turn on or off the mix output mode

In the mode of successful intercom connection, the volume up and down operation is as follows: ① short press the volume up and down to adjust the volume of wireless music ② long press the volume up and down to adjust the volume of intercom ③ double-click the volume up and down to switch between the next song and the previous song of wireless music.

In music sharing mode, the volume is increased or decreased as follows: Long press the volume up or down key to adjust the volume of music sharing and wireless music at the same time.

Volume up and down buttons

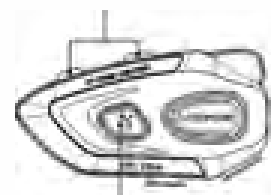


M button

Charging function/voice assistant

Charging indicator status: red light long light when charging, full off (boot state, plug in the charger, the machine will automatically shut down)

AI voice assistant: under wireless connection, short press 【voice assistant button】 to wake up the voice assistant, the green LED light is long lit; short press again to exit the voice assistant, the green LED light goes out

Charging indicator (red)

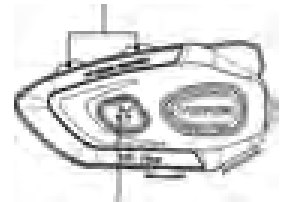

Voice assistant button/
Green LED light

Introduction to wireless intercom connection operation (intercom and music sharing are switched off by default every time you switch on the computer)

I: Two machines connected to the intercom

After the machine is switched on, the two devices long press the M key to enter the intercom mode, the intercom indicator light flashes fast, and accompanied by a tone 'intercom pairing', after entering the intercom mode, automatically paired connection

II: Talk back to connect

Two machines have been connected, after the power on, long press the M key to enter the intercom mode, the two machines will automatically intercom back to the connection (because the two have been connected to the machine, the intercom mode will be remembered)

III: Telephone Priority

After switching on the machine, the two machines talk to each other to connect successfully, and the machine is also connected to the wireless, no matter which mode the machine is in, when the machine is calling or going to the phone, it will take priority to enter the phone mode automatically, and hang up to restore the corresponding mode.

IV: Clear wireless pairing, restore factory settings

Switch on the machine without connecting to wireless, intercom, music sharing, long press the volume down and volume up keys at the same time for 5S to clear the pairing information.


V: Music Sharing

After the two devices are turned on, one mobile phone is connected to the device to play music wirelessly. Short press the on/off button on the two devices to enter the music sharing mode, accompanied by the prompt tone "Music sharing receive mode" or "music sharing transmit mode". After entering the music sharing mode, double-click the on/off button to switch the music sharing transmit or receive mode and start the music sharing pairing: One device needs to be in the transmitting mode of music sharing, and the other device needs to be in the receiving mode of music sharing. After the pairing is successful, the music sharing is successful with the prompt tone of "Music sharing connection success"; If both devices are connected to play music wirelessly, the receiving machine can only hear the music of the host's mobile phone player.

VI: Mixing Mode

In the case of two machines intercom has been connected, double-click the M button can share the machine's music to each other to listen to, but also can intercom calls

Product List

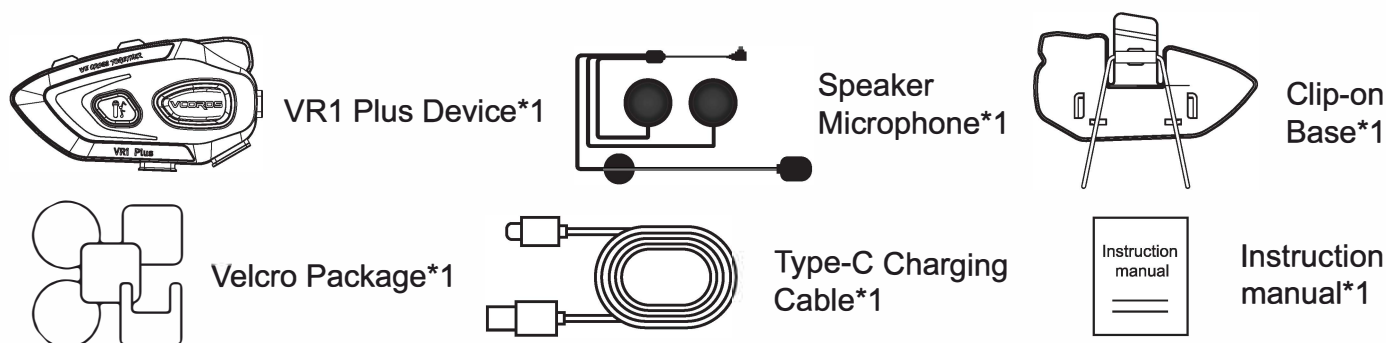

Product Parameter

Product Model	VR1 Plus	Intercom time	15H
Waterproof rating	IP56	Endurance	25H
Lithium battery	1000MAH	Standby time	270H
Charging time	≤2.5H	Charging Voltage	5V/1A
Applicable models	Motorcycle / Electric Vehicle		

Caveat

1. Do not put the product into open flame to avoid explosion;
2. Do not disassemble the product to avoid damage to the product's electronic components;
3. Please do not close to sharp objects to cause damage to the product;
4. Please place it in a dry place if it is not used for a long time;
5. Before using the wireless device, please fully charge it first;
6. If the red light does not come on when charging, the voltage may be too low;
7. In order to extend the life of the built-in polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.