 




VCOROS **VR2** *Plus*

INSTRUCTION MANUAL

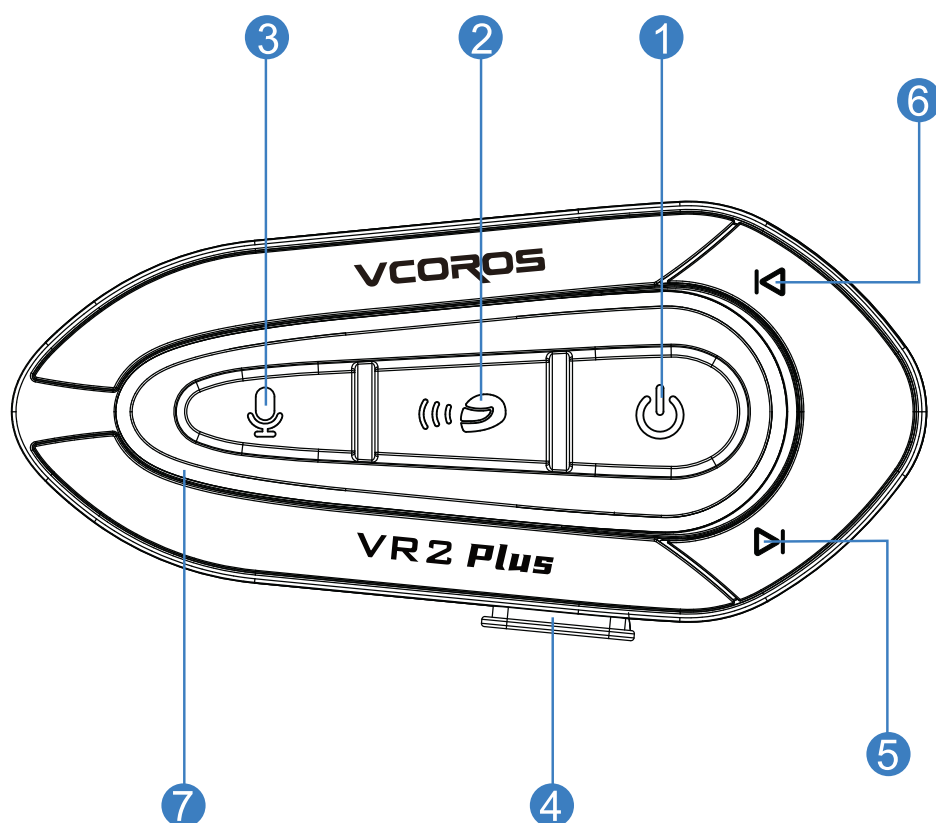

1.Power on or off button
 Play or pause
 Answer or hang up
 Wireless indicator light (blue)

2.Intercom / light button
 Intercom indicator light (blue)
 Charging indicator (red)

3.Music sharing / Voice assistant button
 Music sharing indicator (blue)
 Voice assistant indicator light (blue)

4.Speaker/Microphone interface
 Charging port

5.Volume down
 Previous song

6.Volume up
 Next song

7.Full color ambient light

Important Notice:

Before installing the headphones, follow the Quick Manual instructions to connect your phone and listen to the sound and volume.

If there is a large difference in sound effect and volume after installing it on the helmet, please adjust the position of the speaker in the helmet.

 
Power on / off

Power on: Press and hold the 【switch button】 for 3 seconds, hear the power on tone, and the blue indicator light flashes quickly;

Power off: Press and hold the 【switch button】 for 3 seconds, hear the shutdown tone, and the blue indicator light turns off;

Switching voice broadcasting: When the boot is not connected to wireless, double-click the 【switch button】, Switch voice broadcast

Power on or off button

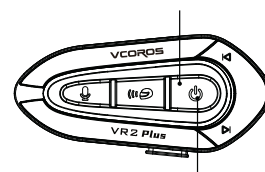


Blue indicator light

Wireless connection

Wireless connection: Press and hold the 【switch button】 for 3 seconds to turn on, the phone turns on wireless, search for and connect to the wireless name "VR2 Plus"

Wireless indicator status: Before the wireless is not connected, the blue indicator flashes quickly; after the wireless is connected, the wireless indicator flashes slowly

 Power on or off button

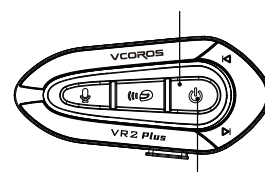

Blue indicator light

 
Intercom pairing / Music sharing and intercom mode coexist

Intercom pairing: After the two machines are turned on, press and hold the 【intercom button】 to enter the intercom mode for intercom pairing; press and hold again to exit the intercom mode

Status of intercom indicator light: Before the intercom is not connected, the blue indicator light flashes slowly; after the pairing is successful, the blue indicator light will be on for a long time at this time.

Mixing mode: When the intercom connection is successful, double-click the 【intercom button】 to open the mixing output mode. At this time, music sharing and intercom exist at the same time. At this time, you can share the wireless music of the machine to the other party to listen to, and you can talk to the intercom at the same time; double-click the 【intercom button】 again to exit the mixing output mode

Intercom button

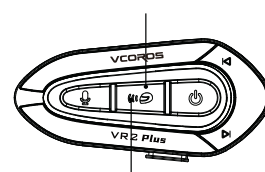

Blue indicator light

Mixing function

Mixing: Intercom and wireless can work independently without affecting each other. When both intercom and wireless are successfully connected, the sounds of the two can be mixed to the speaker end, and the sounds of the two modes (navigation/music, intercom) can be heard at the same time.

When the intercom connection is successful, the volume addition and subtraction operation is as follows:

- ① short press 【Volume plus or minus button】 to adjust the volume of wireless music;
- ② Long press 【Volume plus or minus button】 to adjust the volume of the intercom;
- ③ Double-click 【Volume plus or minus button】 to switch the next and previous songs of wireless music

Music sharing mode

 
Music sharing pairing: After the two devices are turned on, press and hold the **【Music sharing button】** to enter the music sharing mode, perform music sharing pairing, and press and hold again to exit the music sharing mode.

Switch mode: In music sharing mode, double-click **【Music sharing button】** to switch music sharing transmission mode/reception mode

Music sharing indicator status: Before the music sharing connection, the blue indicator light at the transmitting end flashes quickly, and the blue indicator light at the receiving end flashes slowly; after the pairing is successful, the blue indicator light at the transmitting end flashes quickly, and the blue indicator light at the receiving end is on for a long time.

In music sharing mode, the volume addition and subtraction button operation: the transmitter long presses the **【volume addition and subtraction button】** to adjust the wireless volume and the music sharing volume at the same time, and the receiver long presses the **【volume addition and subtraction button】** to adjust the volume of the machine at the receiving end.

Music sharing button

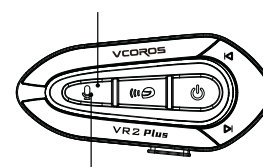

Blue indicator light

 
Music function

Music play and pause: When music is paused, short press **【Power on/off button】** to play music; when music is playing, short press **【Power on/off button】** to pause music

Previous song/Volume Down: When no intercom is connected, Short press **【Volume - button】** to switch to the previous song while music is playing, long press **【Volume - button】** to decrease the volume.

Next song/Volume up: When no intercom is connected, short press **【Volume + button】** to switch to the next song while music is playing, long press **【Volume + button】** to increase the volume.

Volume up button

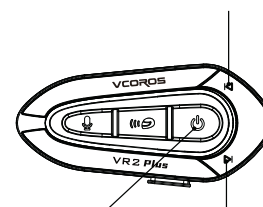

Power on or off button

Volume down button

Telephone function

Switch automatic/manual answer: not connected to the wireless, double-click the **【volume + button】** switch manual answer/automatic answer

Auto answer: wait 15 seconds for an incoming call and then answer it automatically.

Manual answer: Incoming call, Short press **【Power on/off button】** to answer the call.

 
Refuse to answer: Long press **【Power on/off button】** for 2 seconds to refuse to answer during an incoming call.

End call: Short press **【Power on/off button】** to end the call while on a call

End code replay: double press **【Power on/off button】** to replay the end code.

Cancel call: short press **【Power on/off button】** to cancel call when calling.


Volume up button

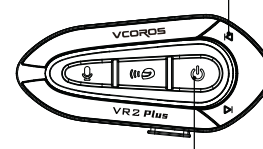

Power on or off button

Light on/off

 
Turn on/off the lights: short press **【light button】** to turn on the ambient lighting effect, short press again to switch the light mode, switch to the last mode to turn off the lights (turn off to remember the current light mode)

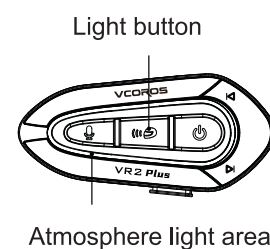

Charging function/voice assistant

Charging indicator status: The red light is on for a long time when charging, and the light goes off after it is fully charged (when the power is turned on, plug in the charger and the machine will automatically turn off)

 AI voice assistant: In the case of wireless connection, short press the **【voice assistant button】** Wake up the voice assistant, the blue indicator light is on for a long time; short press again to exit the voice assistant, the blue indicator light is off

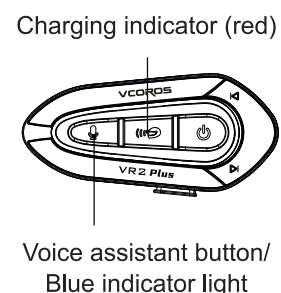

Introduction to wireless intercom connection operation (intercom and music sharing are turned off by default every time you turn on)

I: Intercom pairing/back connection

After the machine is turned on, the two devices long press “intercom / light key” to enter the intercom mode, the intercom indicator flashes slowly, accompanied by a tone “intercom pairing”, after entering the intercom mode, the automatic pairing connection. The connected machines, after power on, long press the “intercom key” to enter intercom mode, the two machines are automatically connected

Phone Answer: the two machines are connected to the intercom successfully, the wireless is also connected to the cell phone, when there is a phone call, it automatically switches to the phone to answer the call, after hanging up, the intercom is resumed.


II: Music sharing (effective distance music can be shared to N devices)

After multiple devices are turned on, press and hold the “Music sharing/Voice assistant button” to enter the music sharing mode, accompanied by a tone “Music sharing receiving mode”. After entering the music sharing receiving mode, double-click the “Music Sharing/Voice assistant button” to switch the music sharing transmitting or receiving mode; Start music sharing pairing: one device is required to be in the music sharing transmitting mode, and the other device is in the music sharing receiving mode. After the pairing is successful, the machine that enters the music sharing receiving mode will have a “Music sharing connection is successful” tone (note: There will be no successful pairing tone in the music sharing transmitting mode), and the music sharing pairing is successful at this time; You can share the wireless music of the machine that enters the music sharing transmission mode to other machines that enter the music sharing reception mode. Note: Multiple devices are connected to play music wirelessly, the machine that enters Music Share Receive Mode can only hear music from the cell phone wireless player of the machine that enters Music Share Transmit Mode.


III: Clear the intercom pairing and restore the factory settings

Clear pairing information: When turning on in any mode, press and hold the volume down and volume up keys for 5S at the same time to clear all pairing information, all indicator lights flash for 5S, return to wireless mode, successfully clear the intercom pairing, and restore the factory settings


Product List

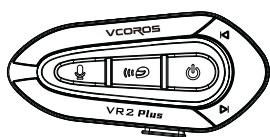


VR2 Plus
Device*1

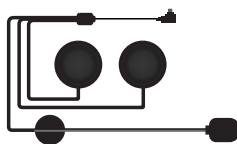


Speaker
Microphone*1

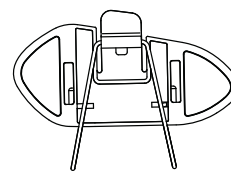 


Clip-on
Base*1

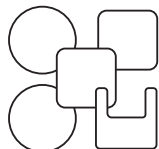 

Velcro Package*1

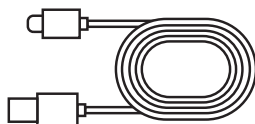 

Type-C Charging
Cable*1

 

Instruction
manual*1

Product Parameter

Product Model	VR2 Plus	Waterproof rating	IP56
Lithium battery	1000MAH	Standby time	270H
Music sharing duration	12H	Intercom duration	15H
Endurance	18H	Charging Voltage	5V/1A
Charging time	≤2.5H	Applicable models	Motorcycle / Electric Vehicle

Caveat

1. Do not put the product into open flame to avoid explosion;
2. Do not disassemble the product to avoid damage to the product's electronic components;
3. Please do not close to sharp objects to cause damage to the product;
4. Please place it in a dry place if it is not used for a long time;
5. Before using the wireless device, please fully charge it first.
6. If the red light does not come on when charging, the voltage may be too low;
7. In order to extend the life of the built-in polymer battery, please charge the device at least once a month.

Instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.