


Linkind

User Manual

Smart Ceiling Fan MultiGlow 52 Inch
Matte Black Finish CF5S

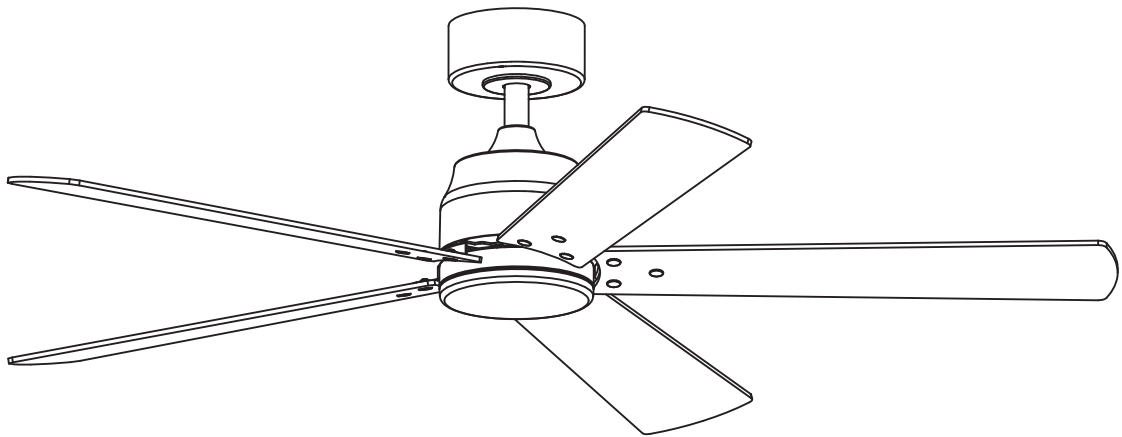

Works with 



Scan To Get Support

CONTENT English

FAN SUPPORT	01
GET SMART	01
SAFETY INSTRUCTIONS	02
WARNINGS	03
PREPARATION	04
PACKAGE LIST	04
TOOLS NEEDED	05
INSTALLATION	07
REMOTE CONTROL	11
REMOTE CONTROL PAIRING	12
CONNECTING WITH AIDOT	14
CONNECTING WITH MATTER	15
CONNECTING WITH ALEXA	16
MATTER TROUBLESHOOTING	17
FREQUENTLY ASKED QUESTIONS	17
WOBBLE	19
MAINTENANCE AND CLEANING	19

FAN SUPPORT

For all questions about your ceiling fan, please read all included safety instructions, installation procedures, troubleshooting guidelines and warranty information before starting installation.

For missing parts or general inquiries call our trained technical staff at:

1-877-770-5727 (Mon-Fri 8:00AM-5:00PM (PT))

Email: service@linkind.com

GET SMART

This Linkind Smart Fan is:



Matter enabled for seamless connectivity and interoperability



Works with Compatible with our Aidot app



Coordinate with smart devices for voice-activated control



Quiet, reliable, and up to 70% more efficient than AC motor fans



With a full-spectrum light from 1800K to 6500K, it offers ultra-wide tones from warm white to cool white, allowing you to adjust the light to your desired tone and brightness for daily needs.




Customize multiple zones with flowing colors, break through the limitation of single lamps, bring exquisite visual effects and enhance comfort and atmosphere.

The Aidot app synchronizes seamlessly with smart home devices you already own:



AiDot App

Google, Google Home and Google Play are trademarks of Google LLC.

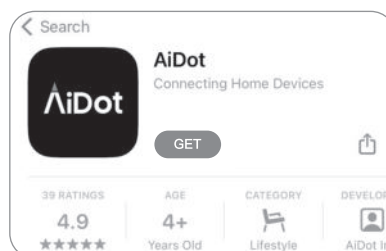

Download Interface



SAFETY INSTRUCTIONS

1. To reduce the risk of electric shock, ensure the electricity has been turned off at the circuit breaker or fuse box before you begin.
2. All wiring must be in accordance with the National Electrical Code ANSI/NFPA 70-1999 and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked acceptable for fan support of 35 lbs (15.9 kg) or less and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt. The fixing means for attachment to the ceiling such as hooks or other devices shall be fixed with a sufficient strength to withstand 4 times the weight of the ceiling fan.
4. To reduce the risk of injury to persons, install fan so that the blade is at least 7 ft (2.1m) above the floor.
5. Do not place objects in the path of the blades.
6. To avoid personal injury or damage to the fan and other items, use caution when working around or cleaning the fan.
7. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box. The ungrounded conductor on the other side of the outlet box.
8. All setscrews must be checked and retightened where necessary before installation. To reduce the risk of injury to persons, not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety. Children should be supervised to ensure that they do not play with the fan.



WARNING: To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.



WARNING: To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring. If you feel you do not have enough electrical wiring knowledge or experience, contact a licensed electrician.



WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.



CAUTION: To reduce the risk of personal injury, use only the screws provided with the outlet box.



WARNING: To reduce the risk of fire or electric shock, this fan must be installed with an isolating wall switch.



WARNING: To reduce the risk of personal injury, if unusual oscillating movement is observed, immediately stop using the ceiling fan and contact with a qualified licensed electrician.



WARNING: All replacement of parts and the mounting of the safety suspension system device shall be performed by qualified licensed electricians.

WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.
- To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.
- FCC compliance information is listed as below:

Responsible party: AiDot Inc

Responsible party address: 8605 Santa Monica Blvd #79525, West Hollywood, California 90069, United States of America

Telephone number: 1-877-770-5727 (Mon-Fri 8:00AM-5:00PM (PT))

E-mail: service@linkind.com

SPECIFICATIONS

Size	Speed	Volts	Amps	Watts	RPM	CFM	Net Weight	Gross Weight	Cu.Ft.
52in.	1	120	0.06	2.2	61	2420	11.9lbs (5.4kg)	14.33lbs (6.5kg)	1.72
	2		0.07	4.3	86	2982			
	3		0.09	6.8	107	3540			
	4		0.12	12.3	133	4410			
	5		0.17	18.5	153	4898			
	6		0.25	30	180	5710			



NOTE: These are approximate measures. They do not include the amps and wattage used by the light kit.

PREPARATION

Before beginning the assembly of this product, compare all parts with the package list, ensure all parts are present. If any part is missing or damaged, do not assemble the product.

1. The Linkind smart ceiling fan does not work with any dimmable switches

2. Choose one of the following mounting options (Figure 1.2) :

Standard Mount – Best suited for ceilings 8 feet or higher. For very high ceilings, use a longer downrod (not included).

Angle Mount – best suited for angled or vaulted ceilings. A longer downrod is sometimes necessary to ensure proper blade clearance. Ensure the ceiling angle does not exceed 15 degrees.

Flushmount Installation – not available for this model.

Closemount Installation – not available for this model.

3. Choose a suitable location – Ensure the blades will be at least 30 inches from any obstructions. Also check the downrod length to ensure the blades are at least 7 feet above the floor (see Figure 1.3).

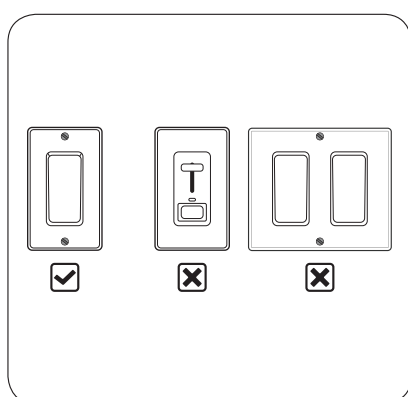


Figure 1.1

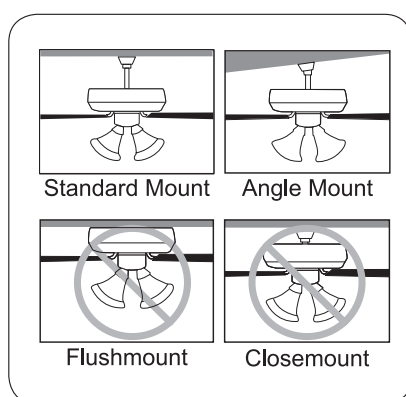


Figure 1.2


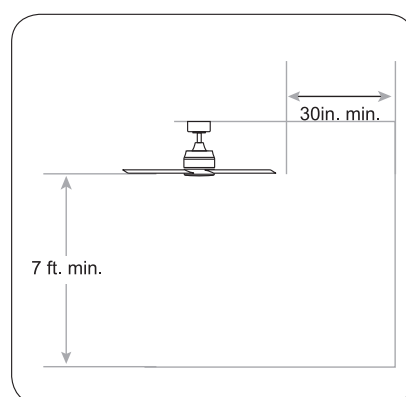


Figure 1.3

PACKAGE LIST

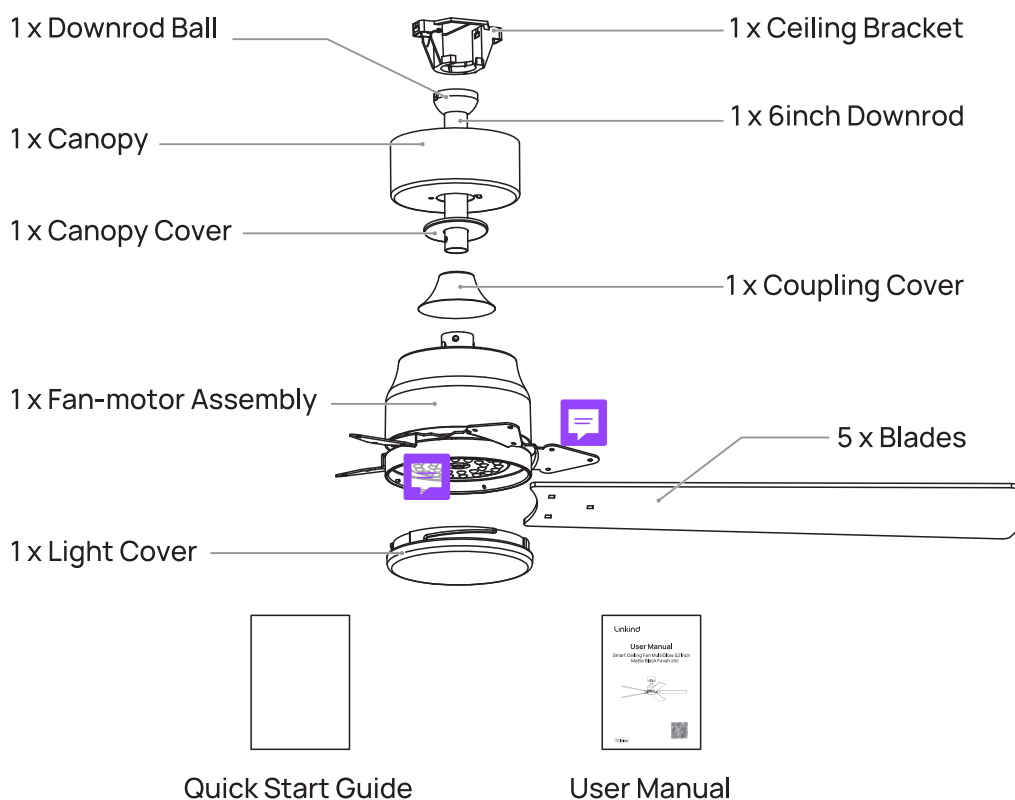



A Parts for Blades

Picture	Description	Quantity
	Blade Screw	15 + 1 Extra
	Blade Nut	15 + 1 Extra
	Balancing kit	1

B Parts for Ceiling Bracket

Picture	Description	Quantity
	Blade Screw	3 + 1 Extra

C Parts for Remote Control

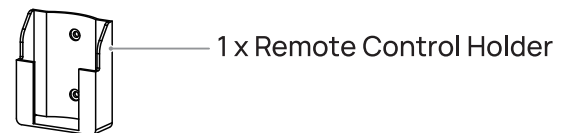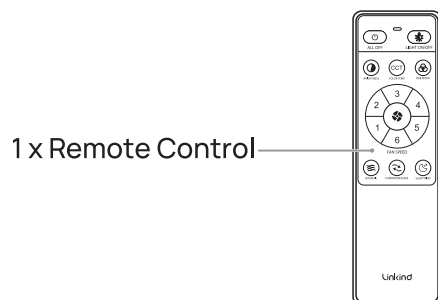

Picture	Description	Quantity
	Wall-mounted Screw	2



To ensure a successful installation, first SCAN the QR code to watch the installation video. If you need help, we also provide support at 1-877-770-5727 or visit us at www.aidot.com.


TOOLS NEEDED



Wire Cutters



Safety Goggles

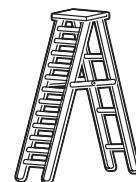

Ladder



Phillips Screwdriver



Electrical Tape



Gloves



NOTE: A partner is recommended when installing the ceiling fan.



NOTE: Before discarding packaging materials, be certain all parts have been removed.



NOTE: Place the parts from the hardware bag into a small container to keep them from being lost.

MOUNTING OPTIONS




WARNING: To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked acceptable for fan support of 35 lbs (15.9 kg) or less and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures, are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt. The fixing means for attachment to the ceiling such as hooks or other devices shall be fixed with a sufficient strength to withstand 4 times the weight of the ceiling fan.

If your ceiling fan does not have an existing UL-listed outlet box, then install one using the following instructions:


1. Disconnect the power by removing the fuses or turning off the circuit breakers.
2. Secure the outlet box directly to the building structure. Use the appropriate fasteners and materials. The outlet box and support structure must be securely mounted and capable of reliably supporting 35 lbs. (15.9 kg). Use only UL Listed outlet boxes marked "Acceptable for Fan Support of 35 lbs. (15.9 kg) or less". Do not use a plastic outlet box.

The illustrations below show two different ways to mount the outlet box:

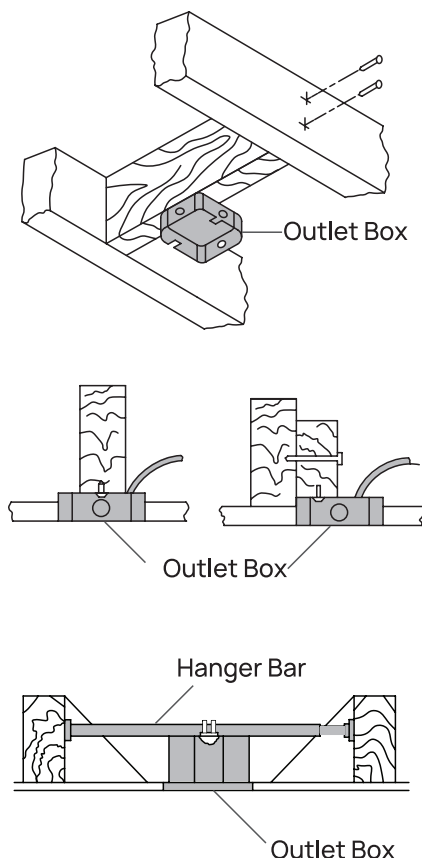


To install your fan where an existing fixture exists but no ceiling joist is present, you may need an installation hanger bar (as shown above).

Standard Mounting

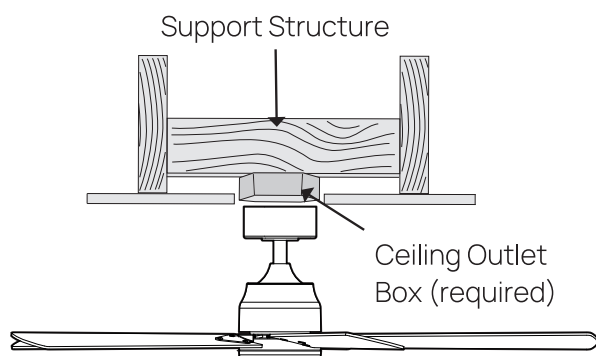

If you have a flat ceiling: Hang your fan by a standard downrod.

Angled Mounting

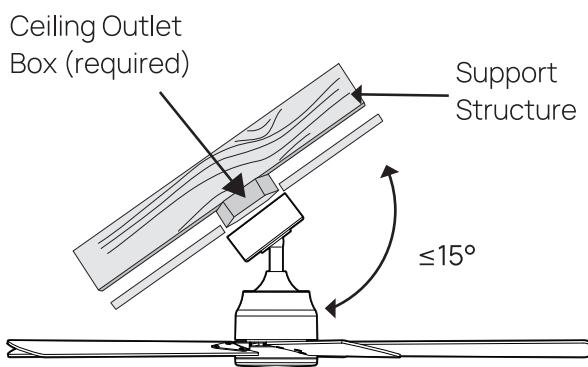


If you have an angled or vaulted ceiling, make sure ceiling angle Mounting is less than 15°.

INSTALLATION

1. Install the mounting bracket to the outlet box




WARNING: To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked acceptable for fan support of 35 lbs (15.9 kg) or less and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt. The fixing means for attachment to the ceiling such as hooks or other devices shall be fixed with a sufficient strength to withstand 4 times the weight of the ceiling fan.

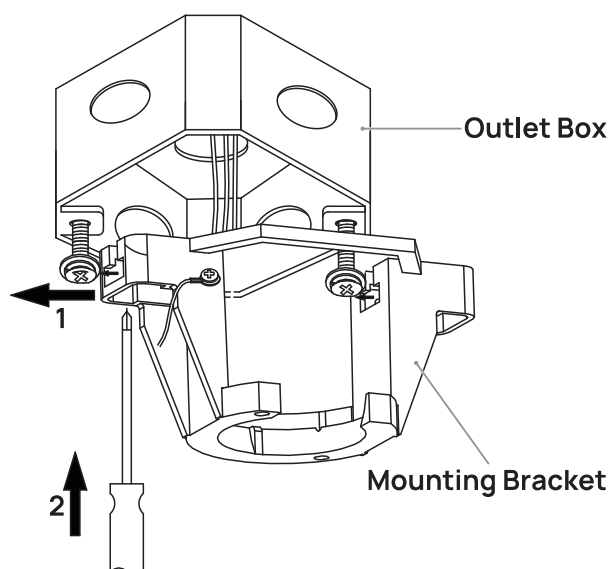

- Pass the 120-volt supply wires through the center hole of the mounting bracket.
- Attach the mounting bracket on the outlet box by sliding the mounting bracket over the screws provided with the outlet box. Note that the flat side of the mounting bracket is faces the outlet box.
- Securely tighten the two mounting screws.





2. Attaching the blades to the fan-motor assembly

- Attach the blades to the blade arm using the three blade screws and blade nuts, but do not tighten.
- Tighten each screw securely starting with the center screw. Make sure the blade is straight.
- Repeat these steps for the remaining blades.

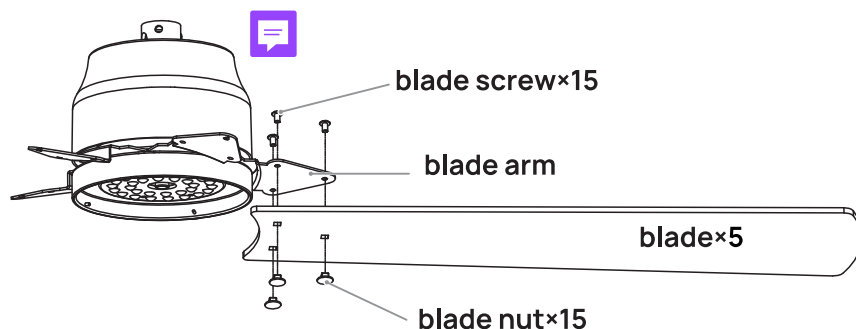

3. Attaching the downrod to the fan-motor assembly

- Loosen the two fan motor assembly coupling set screws (AA) from the fan-motor assembly coupling. Remove the hitch pin (BB) and lock pin (CC) from the down rod.
- Slip the canopy (DD), canopy cover (EE) and coupling cover (FF) onto the downrod. Carefully feed the fan wires from the fan-motor assembly up through the downrod.
- Thread the downrod into the fan-motor assembly coupling. Align the holes and reattach the hitch pin (BB) and lock pin (CC). Tighten the set screws (AA).

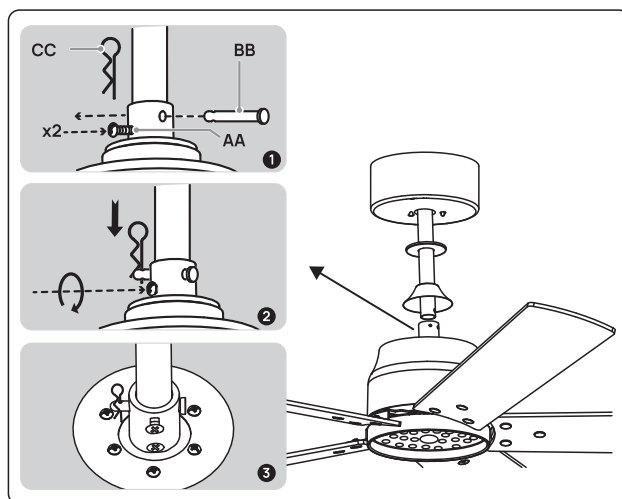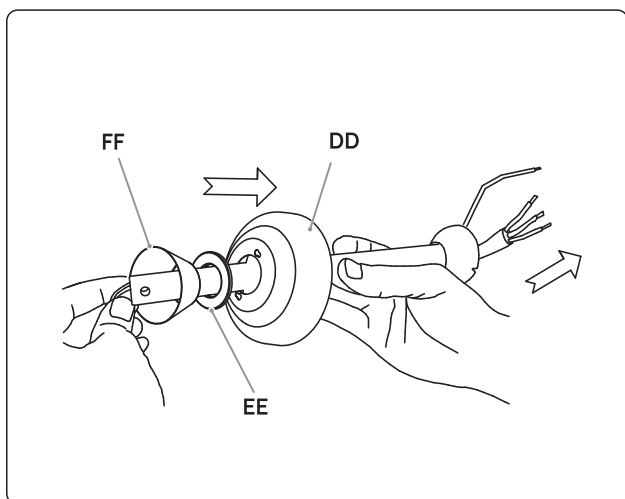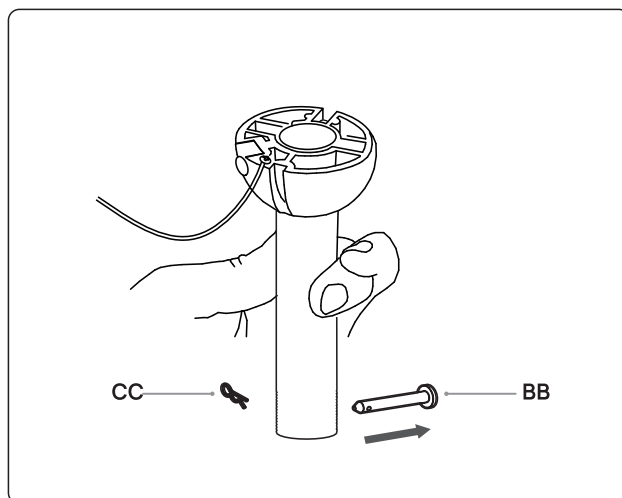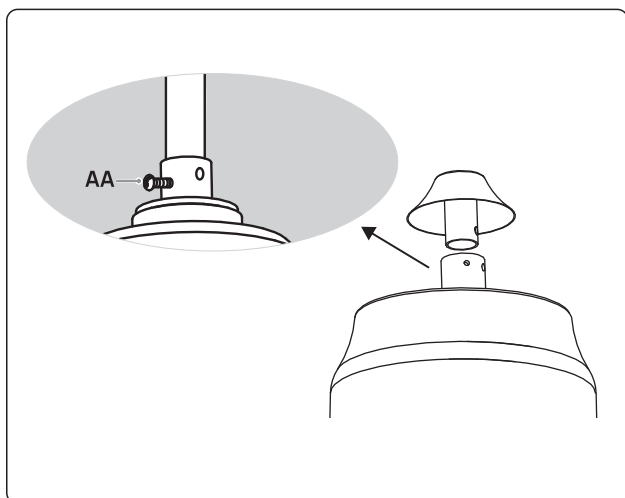

The downrod ball is pre-installed on the 6-inch downrod. if you wish to switch to a different downrod length, please follow the steps below:

1. Loosen and remove the two set screws from the downrod ball on the original 6-inch downrod.
2. Slide the downrod ball up to reveal the cross pin, remove the cross pin and detach the ball from the 6-inch downrod.
3. Slide the downrod ball onto the new downrod and securely insert the cross pin back into place.
4. Slide the ball back down over the cross pin, insert and tighten the long set screw first, followed by the short set screw to ensure a secure fit.




NOTE: a. **Minimum length:** the fan supports a minimum downrod length of 4 inches.

b. **Maximum length & wiring:** the pre-installed electrical wires support a downrod length of up to 20 inches. if a longer downrod is required, you must extend the power wires accordingly.

4. Hanging the fan-motor assembly to the mounting bracket


- Lift the fan-motor assembly into position, and place the hanger ball into the mounting bracket.

Rotate the fan-motor assembly until the groove of the hanger ball drops into the registration slot and seats firmly. The downrod should not be able to rotate if this is done correctly.

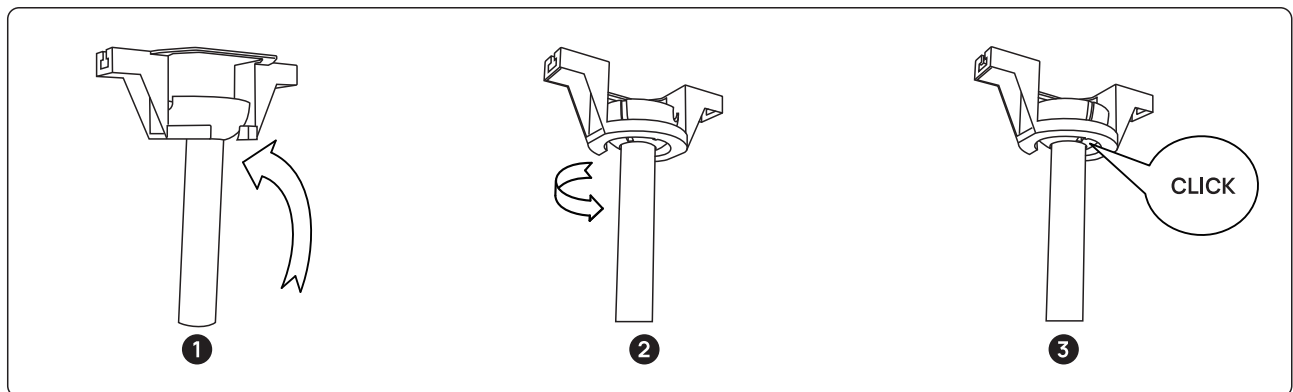


5. Making the electrical connections

- Connect the white wire from the ceiling to the white wire from the fan.
- Connect the black wire from the ceiling to the black wire from the fan.
- Connect the three ground wires (green, green/yellow stripe, or bare copper) coming from the ceiling, downrod, and mounting bracket.
- Secure the wire connection with the wire nut (GG) provided with the electrical hardware.

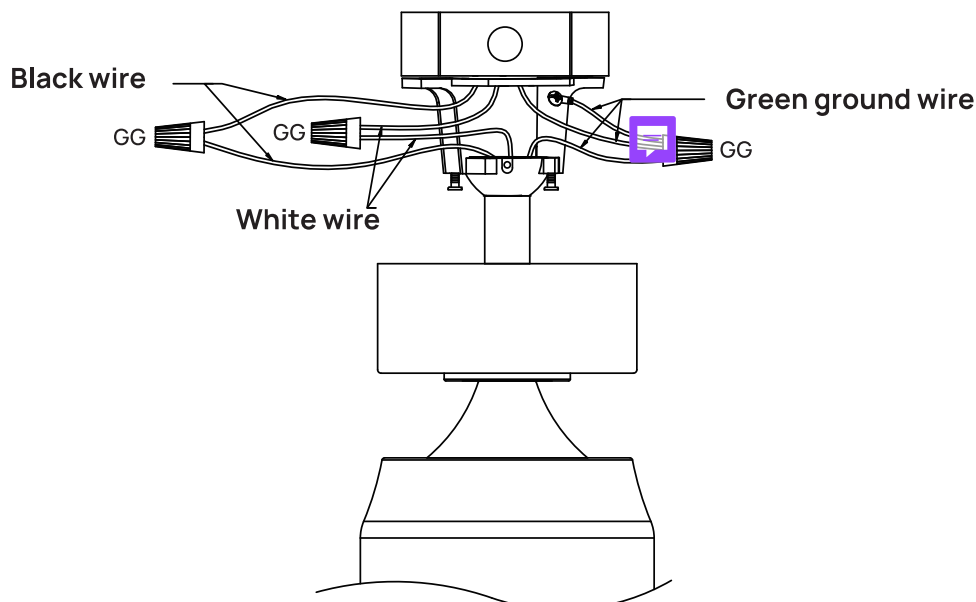


6. Securing the canopy to the mounting bracket

- Loosen two mounting bracket screws (HH) away from the mounting bracket, leaving about 3/4 inch spacing.
- Attach the canopy key shape hole to the mounting bracket screws previously unscrewed and then rotate the canopy clockwise.
- Tighten the mounting bracket screws (HH) .
- Push the canopy cover up onto the bottom of the canopy.

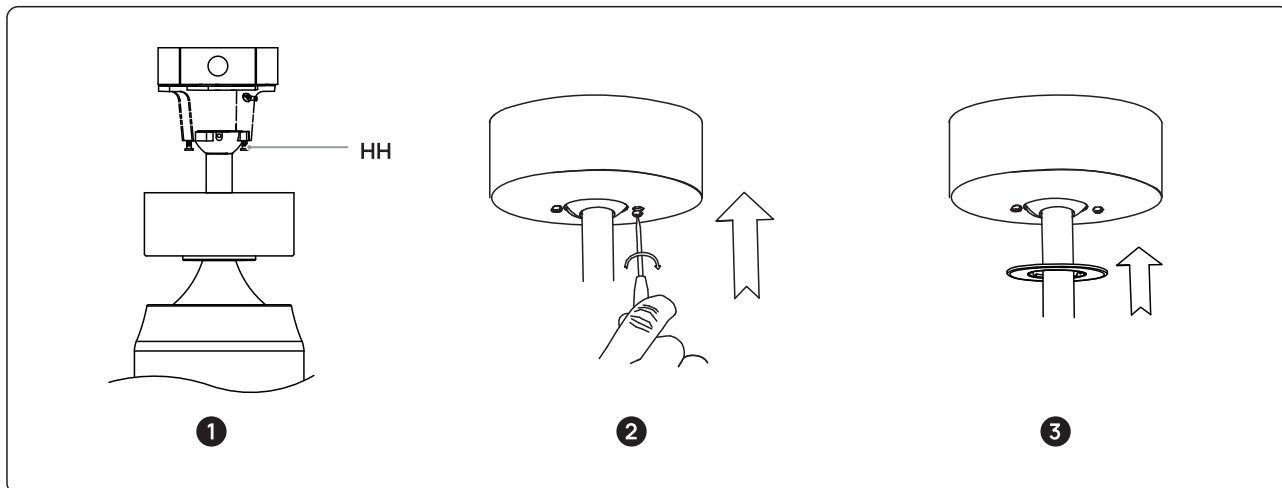

7. Install the light cover

- Rotate the light cover clockwise until it locks securely in place.

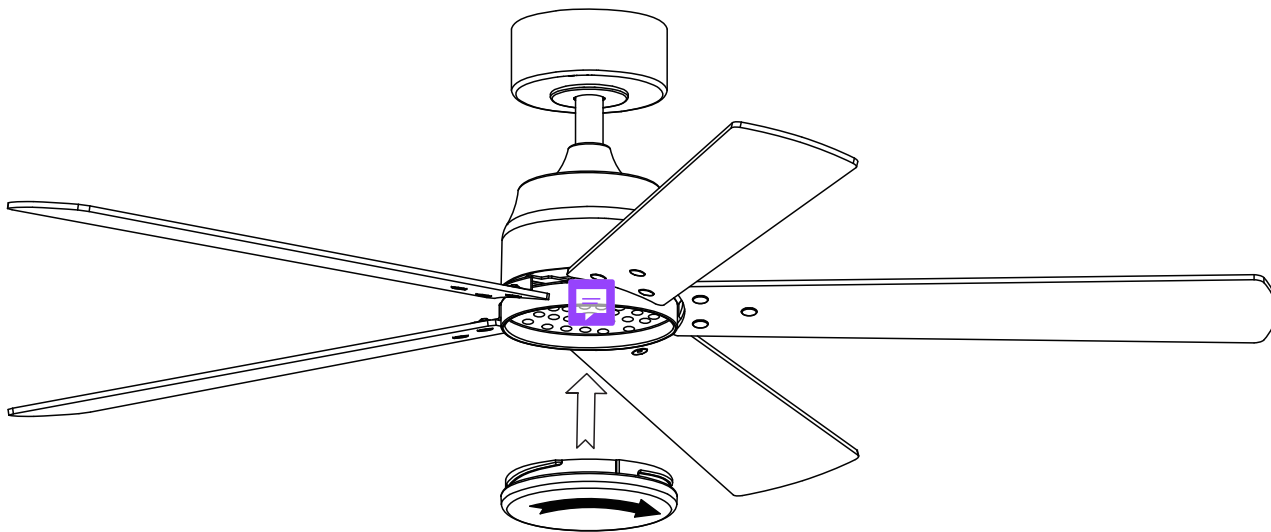

REMOTE CONTROL

Icon	Button Name	Action	Notes
	All OFF	Short press to turn the fan and light off	
	Light ON/OFF	Short press to turn the light on/off	The brightness and CCT will be the same as your last setting when turned on.
	Brightness Change	Short press cycle to adjust brightness	The default brightness is 100%. Brightness can be chosen from 10% - 20% - 40% - 60% - 80% - 100% (and cycles back to 10%...).
CCT	Color Temperature (CCT) Change	Short press cycle to adjust color temperature	The default CCT is 2700K. There are 6 selectable color temperatures: 2700K, 3000K, 3500K, 4000K, 5000K, and 6500K.
	RGB Mode	Short press cycle to adjust RGB mode	There are 7 preset lighting effects in RGB mode. If you need to change the lighting effects or their order, you can do so in the Playlist of the Aidot App.
1 2 3 4 5 6	Fan Speed	Short press the button to choose fan speed	The default fan speed is level 6.
	Fan ON/OFF	Short press to turn the fan on/off	
	DYNAMIC	Short press the button to adjust comfort breeze on/off	
	FORWARD/REVERSE	Short press the button to adjust fan direction	
	Sleep Wind	Short press the button to adjust comfort breeze on/off	





REMOTE CONTROL PAIRING

The remote control that came with your fan is already paired.



NOTE: When pairing a new remote control, you **MUST** disconnect power (at the wall switch, breaker, or the fan from interference with other ceiling fans within range) to prevent faulty operation.


Pairing a new remote to an existing fan

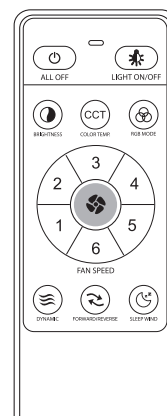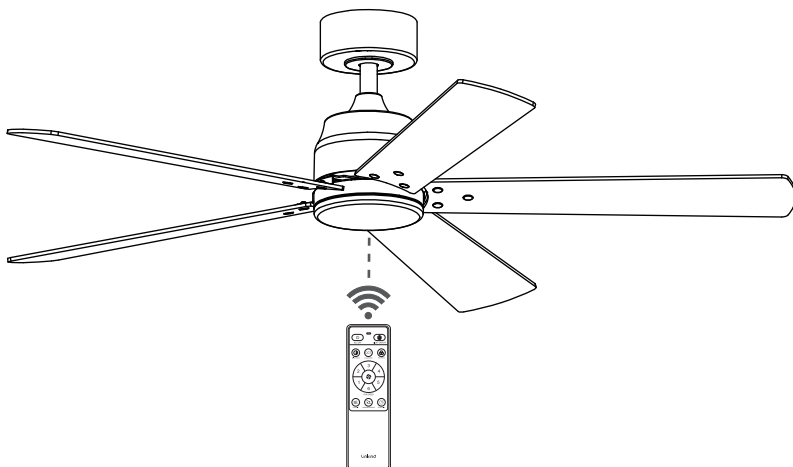

If you purchase a new remote, please follow the steps below to pair the remote to your ceiling fan.

1. Power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 30 seconds, press the REMOTE Fan ON/OFF Button  for 3 seconds to enter pairing mode.
2. Upon successful pairing, the fan's light will flash once, indicating that normal operation can resume.

Multiple remotes control one fan

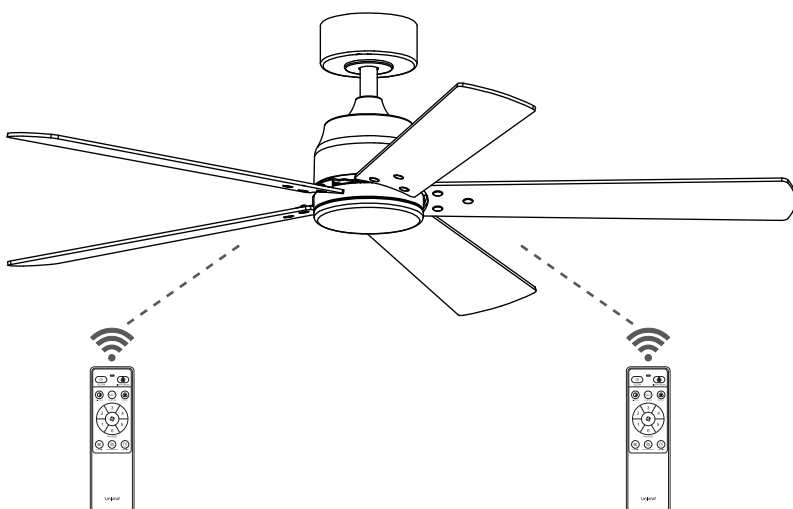


To have multiple remotes control one fan, you must pair each additional remote to the receiver in the fan. The remote and receiver that shipped with your fan is already paired.

1. For each additional control, power cycle the fan by toggling the wall switch (or circuit breaker if needed). Within 30 seconds, press the REMOTE Fan ON/OFF Button  for 3 seconds to enter pairing mode.
2. Upon successful pairing, the fan's light will flash once, indicating that normal operation can resume.



NOTE: A fan can accept up to two remotes.

Multiple fans controlled by one remote

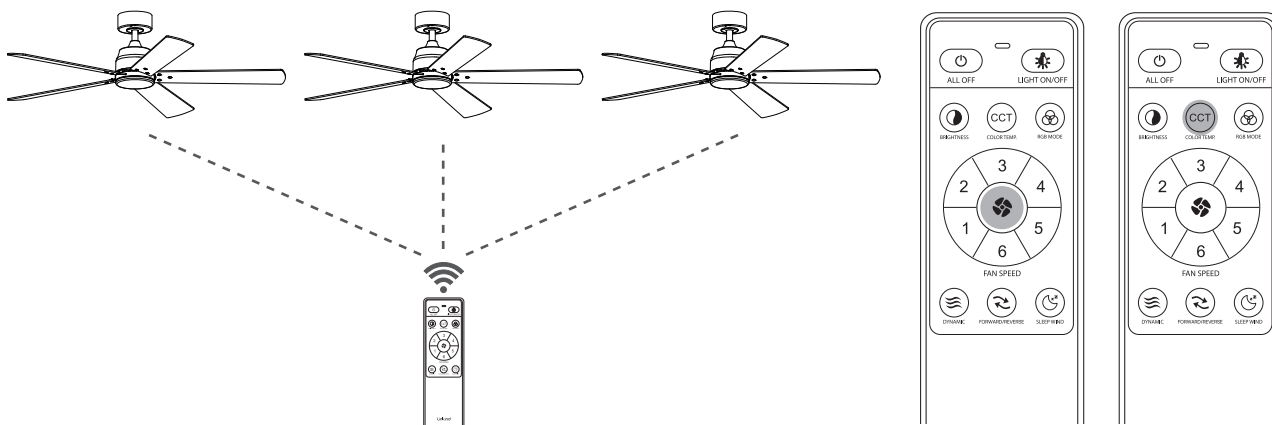


To control multiple fans with one remote, pair the remote to each additional fan (the receiver included with your fan is pre - paired).

1. For each additional fan, confirm a compatible receiver is installed. Before pairing, disconnect power to all other fans.
2. Power - cycle the fan by toggling the wall switch (or circuit breaker if required). Within 30 seconds, press the REMOTE Fan ON/OFF Button for 3 seconds to enter pairing mode.
3. Upon successful pairing, the fan's light will breathe once in warm white, indicating that normal operation can resume.



NOTE: If the fans are not working in the same mode (fan mode or light mode), press and hold the CCT key for 3 seconds, and the lights of all the fans will turn warm white, indicating that all the fans are synchronized successfully.

Release a fan from remote control

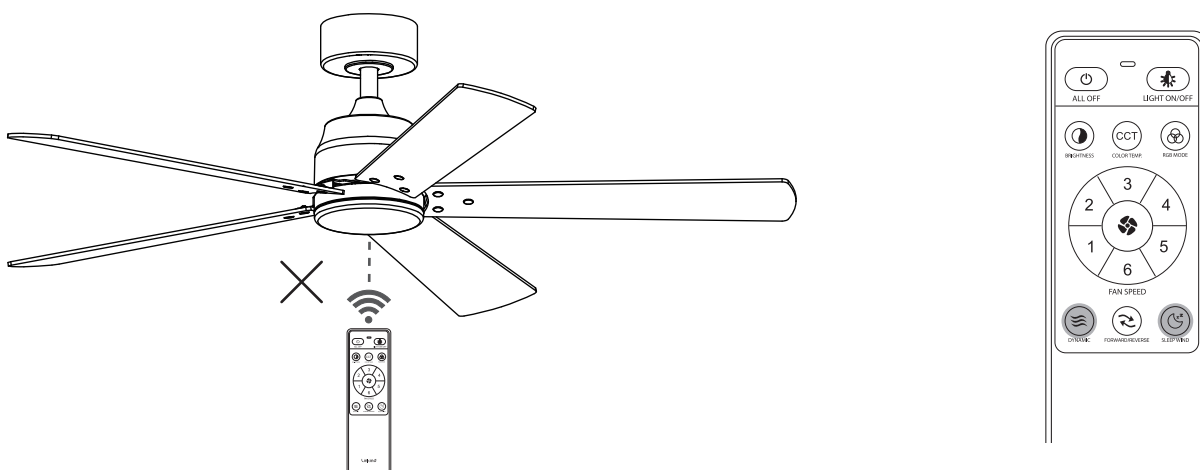

To release a fan from remote control, follow these steps.

1. Before releasing, disconnect power to all other fans.
2. Power - cycle the fan by toggling the wall switch (or circuit breaker if required). Within 30 seconds of power - on, long - press the DYNAMIC and Sleep Wind Buttons for 3 seconds to release the fan from remote control.
3. The fan's light will breathe once in warm white, indicating that the release was successful.



Fan Wi-Fi connection

Factory reset: After power - on, long press the FORWARD/REVERSE button for 5 seconds. The light will blink red - green - blue, then breathe twice in warm white. After that, you can use the AiDot app or Matter ecosystems to connect your fan to the new network.




CONNECTING WITH AIDOT

1. Get the AiDot app by searching "AiDot" on the App Store, Google Play, or simply scan the QR code below.





AiDot App

Google, Google Home and Google Play are trademarks of Google LLC.

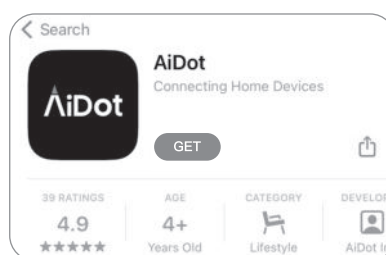

Download Interface

2. Sign in or create a new account.
3. Ensure Bluetooth and location services are enabled on your mobile device. Press and hold the Brightness Change Button and the RGB Mode Button for 5 seconds. The light will breathe once in warm white, and you can then use the AiDot app to connect your fan to the network.
4. Tap "Add Device" or the "+" button. You can also use the "Nearby" option, which will search for nearby AiDot products in pairing mode.
5. Follow the remaining instructions in the AiDot app.

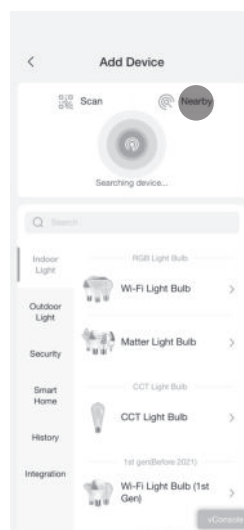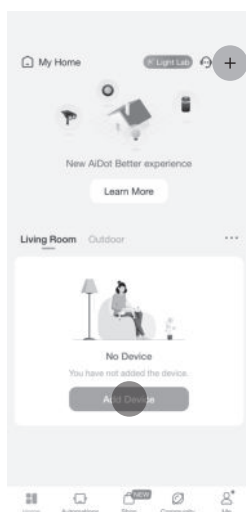

CONNECTING WITH MATTER

To connect your ceiling fan to a Matter smart home ecosystem, you need a Matter Controller (hub) and the corresponding app. For example, to connect to Apple Home, you need a device like a HomePod and the Apple Home app. Before you start ensure your Wi-Fi network is 2.4GHz, and that your mobile device and Matter Controller are connected to the Wi-Fi network you will connect your ceiling fan to.




NOTE: According to the requirements of the , connection mode automatically turns off 15 minutes after the ceiling fan is powered on. To re-enable connection mode, power cycle the ceiling fan by turning the wall switch off and on again (or use the circuit breaker if necessary). To avoid connection failure, please complete the setup process in a Matter-compatible app (such as Amazon Alexa, Google Home, or Apple Home) within 15 minutes.

1. Ensure your Wi-Fi network is a 2.4 GHz network.
2. Ensure your mobile device and Matter Controller are connected to the Wi-Fi network you will connect your ceiling fan to.
3. Ensure Bluetooth is enabled on your mobile device.
4. Open the smart home app you want to connect your fan to.
5. Within that smart home app, locate and select the option to add a device.
6. Enter your ceiling fan's Matter pairing code manually or by scanning its QR code. The QR code is located at:
 - a. Top of the motor cover
 - b. Back of the remote control

Take care to scan the correct code when adding each ceiling fan. As shown in the figure, you can match the code on the ceiling fan with the code on the back of the remote control.

7. Follow any remaining instructions in the Matter smart home app.

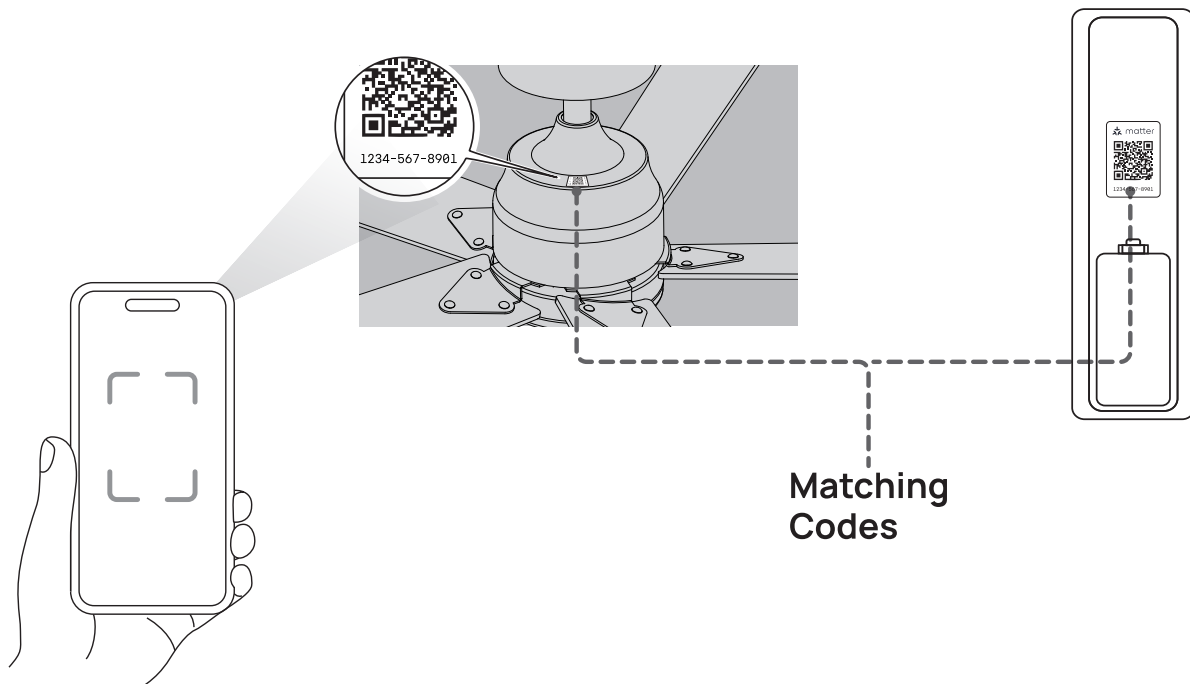


CONNECTING WITH ALEXA


How to Enter Pairing Mode:

- Your fan remains in pairing mode for 15 minutes after the first power - up.
- To add the fan to another smart home system, simply turn the power off and then back on. This re - activates pairing mode for 15 minutes, even if it's already linked to the AiDot app.


1. Open the Alexa app.
2. Click + to add a device.

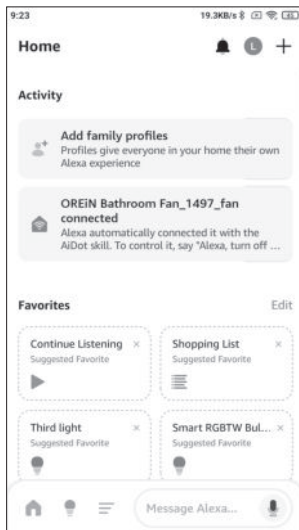


3. Scroll down to find the "Fan" option and select the "matter" logo.

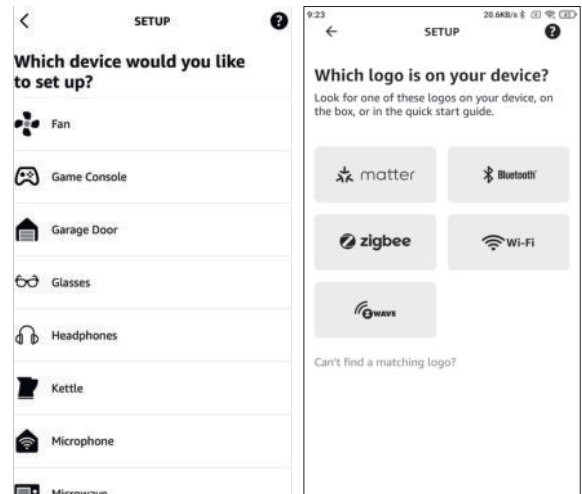


4. Follow the prompts to confirm the device has a matter logo and is powered on.

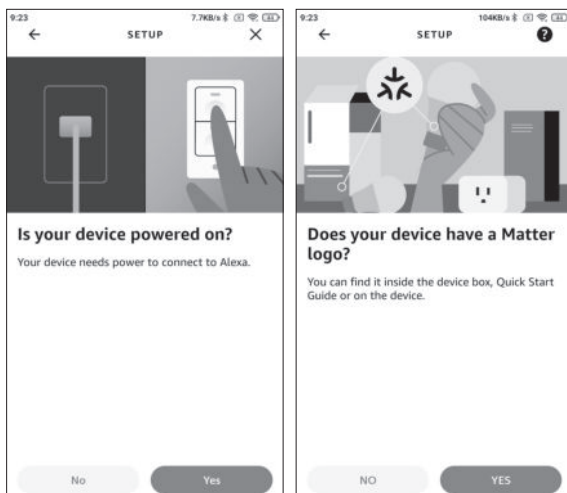

5. Scan the matter QR code to pair.

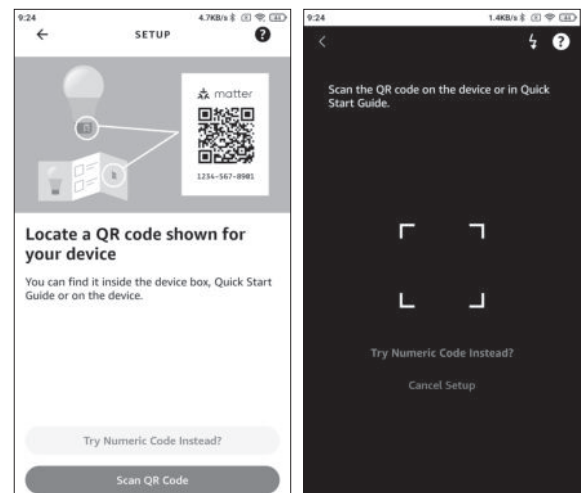

6. Wait for the pairing to complete.

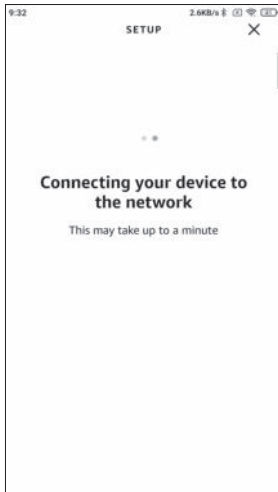

7. The ceiling fan will flash once with warm white light when it is successfully paired.



MATTER TROUBLESHOOTING

Try these tips to resolve most Matter-specific issues with your smart devices.

a. Update Firmware:

Ensure both your Matter Controller's firmware and the smart home app are updated to their latest versions.

b. Keep App Open During Pairing: Ensure the app stays open on your mobile device throughout the process of entering a Matter pairing code, scanning a Matter QR code, and completing the pairing.

c. New Pairing Code for Multiple Ecosystems: If your smart ceiling fan is already connected to one Matter ecosystem, the original pairing code will not work with another. Generate a new pairing code in the current ecosystem's app to connect your device to an additional Matter ecosystem. Use each generated code immediately, as unused codes are invalidated when a new one is generated and expire within a few minutes.

d. If Issues Persist: Clear the cache of the smart home app on your mobile device, power cycle both your Matter Controller (hub) and mobile device, then try setting up again.

FREQUENTLY ASKED QUESTIONS

My Fan Will Not Start

1. Check main and branch circuit fuses or circuit breakers.
2. Check the line wire connections to the fan and the switch wire connections in the switch housings.

WARNING: Ensure the main power is turned off before performing any checks!

My Fan is Noisy

1. Allow a 24 - hour break - in period. Most noises associated with a new fan will disappear during this time.
2. Check that the screws attaching to the blades (and blade arms, if applicable) are tight.
3. Check that all screws in the motor housing are snug.
4. Ensure the light cover is tightened.
5. Tighten the hanger bracket screws and ensure the outlet box is secured.
6. The wire connectors may be rattling against the fan's canopy.
7. Ensure you have a cUL/UL - approved outlet box and that is installed correctly.

My Fan is Wobbling

1. Make sure the fan blades are properly aligned and securely fastened to the motor housing assembly (or blade arms).
 2. Make sure the gaps between the blades are evenly distributed.
 3. Make sure you are using an approved cUL/UL - listed outlet box and that it is installed correctly.
- Note: If there is still wobbling after trying the above methods, please refer to leveling with Blade Balancing Kit.

My home Wi-Fi network is not appearing in the app's list

1. 2.4GHz Wi - Fi Only: Your fan is compatible exclusively with 2.4GHz (802.11b/g/n) networks. Please ensure your router is broadcasting on this frequency (e.g., check your router's settings to confirm it's set to 2.4GHz).
2. Check SSID Visibility: Verify that your network's SSID (Network Name) is set to "Visible" (not hidden) in your router settings.
3. Disable 5GHz for Setup: Your fan does not support 5GHz networks. If you use a dual-band router, ensure your phone is connected to the 2.4GHz band during the setup process.

My Fan failed to join the Wi-Fi network

1. Verify Credentials: Ensure you have entered the correct Wi - Fi password (note: passwords are case - sensitive).
2. Check Network Alignment: Confirm that your mobile device is connected to the same 2.4GHz network you are attempting to link the fan to.
3. Signal Strength: Ensure the fan is within the optimal range specified by your router manufacturer. Thick walls or interference can reduce this range.
4. Hardware Reset: If the connection still fails, perform a power cycle: turn off both your fan and router for 10 seconds, then power them back on and retry the setup process.

Can I use smart ceiling fan with dimmer switches?

This device is designed for use with standard switches. Do not use the Linkind Smart Ceiling Fan with any dimmable switches or variable - speed controllers.

What if I can't scan the QR code on the back of the remote control?

You can also scan your smart ceiling fan's QR code from the top of the motor cover.

What should I do if my smart light bulb is not found during initial setup?

Ensure your smart ceiling fan is in its default mode (as it is when new or after a factory reset) and powered on. Complete the setup within 15 minutes of powering on the smart ceiling fan; otherwise, you will need to power cycle the smart ceiling fan to re - enable connection mode.

Why is my smart ceiling fan showing as "Offline"?

If your fan loses connection, please try these steps in order:

1. Power Cycle: Turn off the wall switch, wait 10 seconds, and turn it back on. Wait 2 minutes for the fan to reconnect.
2. Check Infrastructure: Ensure your Wi - Fi router and Matter Controller are online. If not, power cycle them as well.
3. Factory Reset and Re - pair: If the issue persists, reset the ceiling fan (refer to the "Factory Reset" section) and repeat the setup process in your app.

WOBBLE

The fan blades are factory - adjusted to minimize wobble. To further reduce fan wobble, ensure all screws on the mounting bracket and downrod are fully tightened and secure.

Balancing a wobbling ceiling fan: A blade balancing kit is included for your convenience. Please follow this procedure to balance the fan:

- a. Verify fasteners:** Ensure all screws securing the blades and blade arms are fully tightened.
- b. Check blade alignment:** Most wobbling issues stem from unequal blade levels. To check this, select a point on the ceiling above the tip of one blade and measure the distance. Rotate the fan and measure the distance from the same point to each subsequent blade. The deviation between measurements should not exceed 1/8" (0.32 cm).
- c. Apply balancing kit:** If the wobble remains noticeable, use the included blade balancing kit to identify and correct the weight imbalance.
- d. Reposition blades:** If the issue persists, try swapping two adjacent (side - by - side) blades. This can redistribute the weight and potentially result in smoother operation.

WARNING: To reduce the risk of personal injury, do not bend the blade arms during installation, balancing, or cleaning. Never insert foreign objects between the rotating fan blades.

MAINTENANCE AND CLEANING

- a. Safety First:** Always disconnect the electrical power at the source (e.g., circuit breaker) before cleaning your fan to avoid the risk of electric shock.
- b. Cleaning method:** Periodic cleaning is the only maintenance required. Use a soft brush or a lint - free cloth to prevent scratching or damaging the paint finish.
- c. Water warning:** Do not use water or damp cloths during cleaning. Moisture can damage the motor and blades, creating a potential electrical hazard.
- d. Permanent Lubrication:** The motor is equipped with permanently lubricated ball bearings; thus, no additional oiling or lubrication is ever required.

WARNING: Always disconnect the power at the main electrical panel before attempting any cleaning or repairs to prevent electric shock.

Linkind

Our goal is to bring you the best shopping experience.

If you have any questions about our product, please feel free to contact us. Our customer service is right here to resolve the case.



Recycle



LISTED RoHS



1 (877) 770-5727

Mon.- Fri., 8:00AM- 5:00 PM(PT)



service@linkind.com



<http://www.linkind.com>



<https://www.facebook.com/linkind.lights>



<https://www.instagram.com/linkindofficial>



<https://www.youtube.com/@linkindofficial>

