

正面 成品尺寸：85X95mm

墨水屏智能定位器

Works with Apple Find My

前言

尊敬的用户，感谢您选购这款产品。为了您能更进一步地了解产品，使用前请仔细阅读本说明书。祝您体验愉快！

包装清单

墨水屏智能定位器*1、金属钥匙扣*1、说明书*1

产品展示

按键

墨水屏

充电口

1：找到产品正面的按键位置，长按按键约 5 秒。听到开机铃声后，表示产品已开机。

2：将 Type-C 充电线插入产品正下方接口。充电时指示灯亮红色。建议使用 5V/1A 标准充电器，避免使用快充头，以防产品过热。

3：恢复出厂设置：先双击按键，听到一声提示音后，继续长按按键约 8 秒。期间会先听到连续 6 声提示音，随后再听到一段提示音，表示复位成功。

4：在“查找”APP上播音声，播放5秒旋律提示音。

配对连接

重要提示：

- 产品兼容iOS14.5/iPadOS14.5及以上/Macos12.5及以上版本的苹果设备，本说明书以iPhone为例。
- 使用前请确保iPhone已开启蓝牙功能
- 产品开机后，将产品靠近iPhone，并打开“查找”APP，请在5分钟完成连接，超时间未连接将自动关机。

添加物品

首次绑定用户：
选择“物品”-“添加物品”-“其他支持的物品”，然后点击“连接”并为产品命名。

如图所示：

物品

添加新物品

SmartTag

添加物品

其他支持的物品

连接

已绑定用户添加物品：

在“物品”页面点击右侧的“+”号，选择“添加其他物品”，系统将显示产品配对信息，按照提示完成连接。

如图所示：

物品

物品

SmartTag

添加其他物品

连接

解除配对

1：将产品靠近iPhone,并打开“查找”APP。
2：点击“物品”选项，然后从列表中选择您的产品名称“Tag”
3：在页面底部，依次点击“移除物品”-“移除”按钮，即可成功解绑。

如图所示：

Daisy Queen

物品

通知

设置

移除

解除配对

使用 “InkCute” APP 上传墨水屏图片

1：打开 InkCute App 并登录。先在“我的”页面进入设备管理，添加并绑定设备；绑定成功后返回首页，选择推荐图片或从相册选择图片，点击上传。
上传时墨水屏会闪烁，等待提示上传成功即可。

2：图片切换，上传两张图片后，快速按产品按键 3 次，可在已上传图片之间切换。

重要提示：

- 长按5秒开机
- 双击后长按约8秒恢复出厂设置
- 快速按3次，切换已上传图片
- 快速按4次，处理刷图或搜索不到设备地址的问题

相册

相机

热门

卡通

动物

人像

艺术

上传

继续

AI 助手

我的

安全与使用注意事项：

- 请使用 5V/1A 标准充电器充电，避免使用快充头或高功率充电器。
- 请勿在高温、潮湿、强磁或易受冲击的环境中长时间放置产品。
- 产品充电或上传图片时，如出现明显发热、异常声音或异味，请停止使用并断开电源。
- 手机系统或 APP 版本更新后，界面可能与说明书截图略有不同，请以实际页面为准。
- 如需重新出售、转赠或换手机使用，请先在 Apple“查找”App 中移除该物品，并按说明完成复位。

保修卡/合格证

尊敬的客户,感谢您购买本公司产品.为了能更好的为您服务,在购买产品后,请您认真阅读,并妥善保管好此保修卡

产品型号: _____ 购买日期: _____

经销商: _____ 用户姓名: _____

联系电话: _____

用户地址: _____

保修记录:

购买时间	维修时间	用户发现问题	维修核实问题	经办人

本凭证为产品售后服务的重要依据，请您妥善保管！

本产品经检验合格

检

合格证

反面 成品尺寸：85X95mm

E-Ink Smart Tracker

Works with Apple Find My

Preface

Dear users, thank you for choosing this product. Please read this manual carefully before use to get a better understanding of it. Wish you a pleasant experience!

Package Contents

E-ink Smart Locator x1, Metal Keychain x1, User Manual x1

Product Display

Buttons

E-ink Screen

Charging Port

1.Locate the button on the front of the device and press and hold it for about 5 seconds. The device powers on once you hear the startup tone.

2.Insert the Type-C charging cable into the port at the bottom front. The indicator light turns red while charging. Use a standard 5V/1A charger only. Do not use fast chargers to prevent overheating.

3.Factory Reset: Double-click the button first. After hearing a beep, press and hold the button for around 8 seconds. You will hear six consecutive beeps followed by another tone, which means the reset is completed.

4.Play sound via the "Find" App: A 5-second melody alert will be triggered.

Pairing & Connection

Important Notes:

- This device is compatible with Apple devices running iOS 14.5, iPadOS 14.5 or later, and macOS 12.5 or later.
- This manual takes iPhone as an example.
- Please make sure Bluetooth is turned on on your iPhone before use.
- After turning on the device, place it near your iPhone and launch the Find app.

Complete the connection within 5 minutes; the device will shut down automatically if the connection times out.

Add an Item

First-time User Binding:
Go to Items > Add Item > Other Supported Item, then tap Connect and name your device.

As shown in the figure:

Items

Items

SmartTag

Add Item

Other Supported Items

Connect

Add an Item for Already Bound Users:

On the Items tab, tap the + icon in the top-right corner, then select Add Other Item. The system will display the pairing information for your device.

Follow the on-screen prompts to complete the connection.

As shown in the figure:

Items

Items

SmartTag

Add Other Items

Connect

Unpairing

1：Place the device close to your iPhone and open the Find My app.
2：Tap the Items tab, then select your device named “Tag” from the list.
3：At the bottom of the page, tap Remove Item followed by the Remove button in sequence, and the unpairing will be completed successfully.

As shown in the figure:

Daisy Queen

Play Sound

Load iPhone

Load Mode

Notifications

Settings

Exit

Remove

解除配对

Upload Images to the E-ink Screen Using the "InkCute" App

1:Open and log in to the InkCute App. Go to Device Management on the Profile page to add and bind your device. After binding successfully, return to the home page, select a recommended image or choose one from your album, then tap Upload. The e-ink screen will flash during the upload. Wait for the success prompt to appear.

2:Image Switching: After uploading two images, quickly press the device button 3 times to toggle between the uploaded images.

Important Tips:

- Press and hold for 5 seconds to power on.
- Double-click, then press and hold for about 8 seconds to factory reset.
- Press 3 times quickly to toggle between uploaded images.
- Press 4 times quickly to troubleshoot image refresh or device address discovery issues.

Album

Camera

Hot

Cartoon

Animal

Portrait

ART

上传

继续

AI 助手

我的

Safety & Usage Notes:

- Use only a 5V/1A standard charger for charging. Avoid fast chargers or high-power adapters.
- Do not leave the product in high-temperature, humid, strong magnetic, or impact-prone environments for extended periods.
- If the device becomes noticeably hot, emits abnormal sounds or odors while charging or uploading images, stop use immediately and disconnect the power.
- After mobile system or App updates, the interface may differ slightly from the screenshots in this manual. Please refer to the actual screen.
- Before reselling, gifting, or switching to a new phone, first remove the item from the Apple Find My App and perform a factory reset as instructed.

Safety precautions

1. Please do not use this product in high temperature or high humidity environments.

2. This product contains electronic components. Please pay attention to waterproofing and moisture-proofing when using and storing the product, and do not allow it to enter water.

Or use it in a humid environment, wipe the surface of the product with a clean and soft cloth.

3. Please insert or unplug the charging cable gently when charging to prevent excessive force from damaging the interface.

4. Please do not dismantle or repair the product without authorization, otherwise you will not be able to enjoy the warranty service.

5. This product packaging box and instructions contain important information, please keep them for future reference.

此产品已通过检验合格

Check

Certificate of Conformity

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.