 
 



Product instruction manual

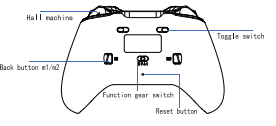

Q341 Multi-function Gamepad

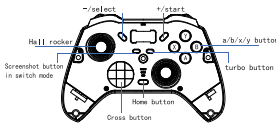

 -2-

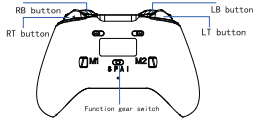

Functional specification sheet			
Platform	Connectivity	Mode	Remark
SWITCH	Wired/Bluetooth	Wired/Bluetooth	Android: Connect to PC for automatic recognition Bluetooth: S file + Home button iOS: S file + LB + LT + Home button Note: If the game mode does not connect, connect to the PC device connection to connect mode Android: S file + LB + Home button iOS: S file + LT + Home button
PC	Wired/Bluetooth	Wired/Bluetooth	
Android	Bluetooth	HID	HID A file + Home button
iOS	Bluetooth	MFI	MFI: I file + Home button
PS4	Wired/Bluetooth	Wired/Bluetooth	Bluetooth: By the upper, Press the HOME button to pair also wired is connected

-3-

英文说明书正面

■ Press and hold the Home button for 3 seconds.
The indicator light of the handle flashes quickly, and Bluetooth connects to the corresponding device; Press and hold the Home button for 5 seconds, turn off the handle and disconnect the device;
After the handle is connected to the corresponding device once, short press the home button to support the handle to reconnect

■ Xinput Mode: Suitable for most games that natively support controllers.
■ Direct mode: For emulator games that natively support controllers.
■ HID and MFI mode: the handle is adjusted to 'A' gear + home button, and the Bluetooth name of the handle is Q341, which is in the Bluetooth of the mobile phone Connect the matching handle. This connection method can connect to the Gamepad Space APP on Android and iOS. In the APP, you can calibrate the joystick, adjust the motor vibration, set macro programming buttons and other functions.
■ Note: You don't need to press the HOME button to power on in wired mode, the handle will automatically recognize the current input device
■ Press the RB button + HOME button to adjust the light color of the handle channel

The functions of the TURBO button are simplified
Press and hold the A/B/X/Y/RB/RT/LB/LT function key to be set, and then press the TURBO button (I key). You can set the TURBO function of the button.
I want to cancel the turbo button. Press and held the button to cancel the turbo function first, and then press the screenshot button
(The screenshot button is next to the turbo button)
Note: The key TURBO function can also be set in the GamepadSpace APP, and there are various BT auxiliary function settings in the APP.
Players can set up their own use
GamepadSpace app download address
(you can also search for the app name in the app store to download)
<https://www.shootimgame.com/app.html>

Handle reset function
When the product crashes or the operation is out of control, please use the reset pin to press the reset hole on the back of the product for one second. The handle can be forcibly closed and disconnected from the device. Players can reset the controller and reconnect it for use.

Power supply attributes

- 1. When the handle is charged in the power-off state (press the HOME button to power on/off), the home light indicator flashes slowly and stops when fully charged.
Then charging is in the Bluetooth connection state.
- 2. Sleep/Save function: Sleeps on to sleep when not in use for 5 minutes.
When you need to use it again, you need to press the HOME button to wake up to reconnect.
- 3. When the battery is low, the home indicator flashes quickly.
- 4. The indicator in wired mode does not indicate charging.
- 5. If the handle is connected to any device, the handle motor will vibrate to indicate that the connection is successful.

Frequently asked questions

Q: How to use Gamepad Space APP in Android HID and iOS MFI mode?
A: Note that in both modes, the app handle is in the 'A' gear + HOME button to connect to the phone. Let the handle enter HID or MFI mode and then make Bluetooth pairing and connection, and the Bluetooth device name is 'Q341'. After Bluetooth connection, the HOME button light of the handle is always on. Install the Gamepad Space app on your phone, then open the app. You can directly adjust the vibration of the handle motor or turn on the gyroscope and other functions

Q: How do I connect to a Switch console?
A: After entering the Bluetooth mode of the Switch, open the handle bar of the Switch console and select Charge Grip/Driver to pair.

Q: Is there an abnormality in the joystick/trigger/motor/unresponsive?
A: Try to press and hold the HOME button for 5 seconds to turn off and then turn it on. If it is a wired connection, please reconnect the wire.

Product parameters

Product dimensions	181*175*70.5mm
Product weight	Approximately 225g
Battery capacity	800mAh
Input voltage/current	Type-C/5V
Operating voltage/current	3.7V/22.46 mA
Charging time	ABOUT 2 HOURS FILL / MAX CHARGING CURRENT: 250 MA
Working hours	About 3-9 hours
Handle wired mode returns	800mAh

Accessories: Data cable*1 Manual*1

Precautions must be read before use

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules, there is no guarantee of interference in this particular installation.
This equipment generates, uses and can radiate radio frequency energy and, if not used and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--- Reorient or relocate the receiving antenna.
--- Increase the separation between the equipment and receiver.
--- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Product after-sales questions and operational problems can be contacted through this email: joy77@outlook.com

英文说明书反面