

四录行车记录仪  使用说明书 使用本产品前，请仔细阅读使用说明书 说明书仅供参考，具体操作以实物为准	一、产品结构 产品说明 <table><tr><td>1.镜头1</td><td>2.镜头2</td><td>3.镜头3</td></tr><tr><td>4.麦克风</td><td>5.电源键</td><td>6.上键</td></tr><tr><td>7.OK 键</td><td>8.下键</td><td>9.模式/菜单键</td></tr><tr><td>10.TF 卡槽</td><td>11.GPS接口</td><td>12.后拉接口</td></tr><tr><td>13.充电接口</td><td>14.复位孔</td><td></td></tr></table> 二、按键及接口功能介绍 1.电源键 1.长按 2 秒开机/关机; 2.开机状态下点按可息屏，再次点按亮屏。 2.OK 键 1.确认键; 2.点按可录像、拍照、播放或暂停。 3.上键 1.向上选择;	1.镜头1	2.镜头2	3.镜头3	4.麦克风	5.电源键	6.上键	7.OK 键	8.下键	9.模式/菜单键	10.TF 卡槽	11.GPS接口	12.后拉接口	13.充电接口	14.复位孔		2.拍照/录像模式中长按可打开/关闭红外灯 4.下键 1.向下选择; 2.拍照、录像模式点按切换各镜头画面; 5.模式/菜单键 1.长按可切换录像/拍照/回放模式; 2.点按调出设置菜单; 3.正在录像时点按可对当前录制视频加锁。 6.复位孔 当机器出现死机、异常死机等情况时，用针孔状的东西短戳一下可强制关机。 7.后拉接口 用于连接外接后视镜输入接口; 8.GPS 接口选配 连接 GPS；作用是提前提醒车主电子眼或测速雷达的存在，可防止因为超速或违规而被罚款和扣分。 9.充电接口 1.接口类型：Type-C; 2.用于连接外接电源给电池充电或提供工作电源; 3.用于连接 PC 可进行‘存储器/摄像头’操作。 三、基本操作说明 1.开机与关机 长按“电源键”2秒可开机或关机设备；带内存卡开机时会自动录像。 2.录像模式 1.关机状态长按“电源键”开启设备，进入录像模式; 2.点按“OK 键”可进行录像，再次点按停止录像并自动保存; 3.录像时点按“模式/菜单键”可对正在录像中的视频加锁; 4.点按“下键”可切换镜头画面; 1.长按“模式/菜单键”可切换模式；点按可调出子菜单及系统设置菜单; 2.点按“电源键”可熄屏，再次点按可亮屏。																																													
1.镜头1	2.镜头2	3.镜头3																																																												
4.麦克风	5.电源键	6.上键																																																												
7.OK 键	8.下键	9.模式/菜单键																																																												
10.TF 卡槽	11.GPS接口	12.后拉接口																																																												
13.充电接口	14.复位孔																																																													
3.拍照模式 1.关机状态长按“电源键”开启设备（带卡开机时先点按“OK 键”停止录像），长按一次“模式/菜单键”进入拍照模式; 2.点按“OK 键”进行拍照; 3.点按“下键”可切换镜头画面; 4.长按“上键”可打开/关闭红外灯; 5.长按“模式/菜单键”可切换模式；点按可调出子菜单及系统设置菜单; 6.点按“电源键”可熄屏，再次点按可亮屏。 4.回放模式 1.关机状态长按“电源键”开启设备（带卡开机时先点按“OK 键”停止录像），长按两次“模式/菜单键”进入回放模式; 2.点按“上/下键”切换文件；播放视频文件时点按可增加或减小音量; 3.查看视频文件点按“OK 键”进行播放或暂停; 4.长按“模式/菜单键”可切换模式；点按可调出子菜单及系统设置菜单。 5.点按“电源键”可熄屏，再次点按可亮屏。 注：在录像/拍照/回放模式工作中，禁止拔插卡！ 5.WiFi 模式 1.开启 WiFi：在录像或拍照界面时，长按“上键”可开启 WiFi; 2.安装与使用 WiFi：开启 WiFi 功能后，请在智能手机上下载并安装“录风者”应用程序。注意：Android 用户，请扫设备中提示的二维码，或扫下方二维码；ios 用户可在 Apple Store 中搜索“录风者”下载。  连接步骤： 1.在设备开机后长按“上键”开启 wifi，屏幕会显示设备 wifi 名称与密码表示 wifi 已开启；	2.点开下载的 APP，找到“添加设备”-进入 wifi 设置中找到设备显示的 wifi 名称XC406 并输入密码：12345678 后即连接成功。 1.关闭 WiFi：开启 WiFi 功能后，长按“上键”可关闭 WiFi。 6.USB 模式 设备使用 USB 数据与电脑连接，设备自动开机后屏幕显示“存储器/摄像头”两个选项（注：接入后拉不会进入此模式）： 存储器：在此模式下可进行视频文件或者照片文件的存取与查看； 摄像头：在此模式下可用于电脑摄像头进行使用； 四、产品参数与规格 <table><tr><td>PCB 型号</td><td>XC406-6248-v1</td></tr><tr><td>主控</td><td>GC6248</td></tr><tr><td>影像传感器</td><td>GC0308/030/2083</td></tr><tr><td>TFT 显示屏</td><td>3.0 寸彩色显示屏(640*360)</td></tr><tr><td>录像分辨率</td><td>2K, 1080p, 720P</td></tr><tr><td>录像文件格式</td><td>AVI</td></tr><tr><td>图片分辨率</td><td>12M、10M、8M、5M、3M、2MHD、1.3M、</td></tr><tr><td>照片格式</td><td>JPG</td></tr><tr><td>循环录像</td><td>关、1 分钟、2 分钟、3 分钟、5 分钟</td></tr><tr><td>曝光补偿</td><td>+2.0、+5/3、+4/3、+1.0、+2/3、+1/3、0.0、-1/3、-2/3、-4/3、-5/3、-2.0</td></tr><tr><td>移动侦测</td><td>关 开</td></tr><tr><td>录音音频</td><td>关、开</td></tr></table>	PCB 型号	XC406-6248-v1	主控	GC6248	影像传感器	GC0308/030/2083	TFT 显示屏	3.0 寸彩色显示屏(640*360)	录像分辨率	2K, 1080p, 720P	录像文件格式	AVI	图片分辨率	12M、10M、8M、5M、3M、2MHD、1.3M、	照片格式	JPG	循环录像	关、1 分钟、2 分钟、3 分钟、5 分钟	曝光补偿	+2.0、+5/3、+4/3、+1.0、+2/3、+1/3、0.0、-1/3、-2/3、-4/3、-5/3、-2.0	移动侦测	关 开	录音音频	关、开	<table><tr><td>日期标签</td><td>关、开</td></tr><tr><td>重力感应</td><td>关、2G、4G、8G</td></tr><tr><td>停车模式</td><td>关、开</td></tr><tr><td>日期时间</td><td>自定义</td></tr><tr><td>自动关机</td><td>关、1 分钟、3 分钟</td></tr><tr><td>屏幕保护</td><td>关、3 分钟、5 分钟、10 分钟</td></tr><tr><td>按键声音</td><td>关、开</td></tr><tr><td>语言设置</td><td>英、繁中、简中、土耳其、法、德、越南、意大利、葡萄牙、俄、西班牙、泰</td></tr><tr><td>光源频率</td><td>50Hz、60Hz</td></tr><tr><td>格式化</td><td>确认、取消</td></tr><tr><td>默认设置</td><td>确认、取消</td></tr><tr><td>版本</td><td>241228 V1.0</td></tr><tr><td>工作温度</td><td>≤85°</td></tr><tr><td>工作温度</td><td>-25°/+60°</td></tr><tr><td>供电</td><td>USB.5V；电池：3.7V</td></tr><tr><td>待机电流</td><td>电池 3.7V 待机 53.5uA</td></tr><tr><td>电源功耗</td><td>≤2.01W</td></tr><tr><td>低电提示</td><td>3.63V</td></tr></table> 注意：本产品保留设计和规格更改权恕不另行通知。	日期标签	关、开	重力感应	关、2G、4G、8G	停车模式	关、开	日期时间	自定义	自动关机	关、1 分钟、3 分钟	屏幕保护	关、3 分钟、5 分钟、10 分钟	按键声音	关、开	语言设置	英、繁中、简中、土耳其、法、德、越南、意大利、葡萄牙、俄、西班牙、泰	光源频率	50Hz、60Hz	格式化	确认、取消	默认设置	确认、取消	版本	241228 V1.0	工作温度	≤85°	工作温度	-25°/+60°	供电	USB.5V；电池：3.7V	待机电流	电池 3.7V 待机 53.5uA	电源功耗	≤2.01W	低电提示	3.63V
PCB 型号	XC406-6248-v1																																																													
主控	GC6248																																																													
影像传感器	GC0308/030/2083																																																													
TFT 显示屏	3.0 寸彩色显示屏(640*360)																																																													
录像分辨率	2K, 1080p, 720P																																																													
录像文件格式	AVI																																																													
图片分辨率	12M、10M、8M、5M、3M、2MHD、1.3M、																																																													
照片格式	JPG																																																													
循环录像	关、1 分钟、2 分钟、3 分钟、5 分钟																																																													
曝光补偿	+2.0、+5/3、+4/3、+1.0、+2/3、+1/3、0.0、-1/3、-2/3、-4/3、-5/3、-2.0																																																													
移动侦测	关 开																																																													
录音音频	关、开																																																													
日期标签	关、开																																																													
重力感应	关、2G、4G、8G																																																													
停车模式	关、开																																																													
日期时间	自定义																																																													
自动关机	关、1 分钟、3 分钟																																																													
屏幕保护	关、3 分钟、5 分钟、10 分钟																																																													
按键声音	关、开																																																													
语言设置	英、繁中、简中、土耳其、法、德、越南、意大利、葡萄牙、俄、西班牙、泰																																																													
光源频率	50Hz、60Hz																																																													
格式化	确认、取消																																																													
默认设置	确认、取消																																																													
版本	241228 V1.0																																																													
工作温度	≤85°																																																													
工作温度	-25°/+60°																																																													
供电	USB.5V；电池：3.7V																																																													
待机电流	电池 3.7V 待机 53.5uA																																																													
电源功耗	≤2.01W																																																													
低电提示	3.63V																																																													
Four-channel Driving Recorder  USER MANUAL please read the Instruction Manual carefully. The instruction manual is for reference only. The specific operation shall be subject to the actual product.	I: Product Product Description <table><tr><td>1. Shot 1</td><td>2. Shot 2</td><td>3. Shot 3</td></tr><tr><td>4. Microphone</td><td>5. Power button</td><td>6. Up key</td></tr><tr><td>7. OK button</td><td>8. Down arrow</td><td>9. Mode/Menu button</td></tr><tr><td>10. TF card slot</td><td>11. GPS interface</td><td>12. Rear pull-out connector</td></tr><tr><td>13. Charging interface</td><td>14. Reset hole</td><td></td></tr></table> II: Introduction to keys and interface functions 1. Power key 1.Press and hold for 2 seconds to turn on/off; 2.Click to shut down the screen when the power is turned on, and click to light up the screen again. 2. OK key 1.Confirm key; 2.Tap to record, take pictures, play or pause. 3. Up key 1.Select upward; 2.Press and hold the infrared light in the photo/recording mode to turn on/off; 4. Down key	1. Shot 1	2. Shot 2	3. Shot 3	4. Microphone	5. Power button	6. Up key	7. OK button	8. Down arrow	9. Mode/Menu button	10. TF card slot	11. GPS interface	12. Rear pull-out connector	13. Charging interface	14. Reset hole		1.Select downward; 1.Click to switch the lens screens in the photo/recording mode; 5. Mode/menu key 1.Press and hold to switch the video recording/photo/playback mode; 2.Click to bring up the settings menu; 3.Click to lock the currently recorded video while recording. 6. Reset hole: When the machine has a screen, abnormal crash, etc., use a pinhole-shaped object to force shut down the machine. 7. Rear pull interface: used to connect to external rearview mirror input interface; 8. GPS interface optional: connect to GPS; It is used to remind the owner of the existence of electronic eyes or speed measurement radar in advance, which can prevent fines and deductions from speeding or violations. 9. Charging interface: 1.Interface type: Type-C; 2.Used to connect external power to charge the battery or provide working power; 3.Used to connect the PC terminal to perform 'memory/camera' operation. III: Basic operating instructions: 1. Power on and off: Press and hold the 'Power key' for 2 seconds to turn on or off the device; it will automatically record the video when the memory card is turned on. 2. Recording mode: 1.Press the 'Power key' to turn on the device and enter the recording mode; 2.Click the 'OK key' to record, click again to stop recording and save automatically; 3.Click 'during recording Mode/menu key' can lock the video in recording; 4.Click the 'down key' to switch the lens screen; 5.Press the 'up key' to turn on/off the infrared light; 6.Press the 'up key' mode/ Menu key 'switch mode; tap to adjust the submenu and system settings menu; 1.Tap 'Power key' to turn off the screen, and tap again to light up the screen. 3. Photo mode:																																													
1. Shot 1	2. Shot 2	3. Shot 3																																																												
4. Microphone	5. Power button	6. Up key																																																												
7. OK button	8. Down arrow	9. Mode/Menu button																																																												
10. TF card slot	11. GPS interface	12. Rear pull-out connector																																																												
13. Charging interface	14. Reset hole																																																													

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment, This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.