


1. Card startup and charging

1) Single-click the card power button to turn on the device. Within three minutes, tap the [Bind Device] option in the SmartTag APP to bind the card. If binding is not completed within three minutes, the card will automatically shut down. You can single-click the power button again to turn it on and continue the binding process.

2) Align and touch the wireless charging area on the back of the card to the wireless charger. The indicator light will start flashing to indicate that charging has begun. If the indicator light turns off during charging, it means the card is fully charged.

3) The card has a battery capacity of 110mAh, and when fully charged, it can operate continuously for 120 days.

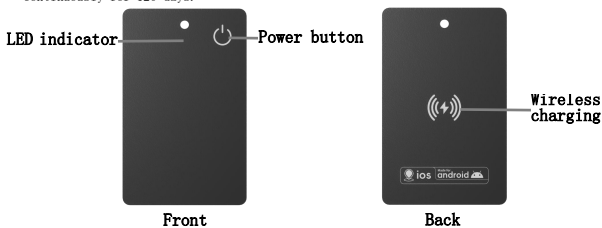

2. Install the SmartTag APP

1) Use the built-in browser on your phone to scan the QR code. If you scan the code using WeChat, click 'Open in Browser' at the top right corner after scanning.

2) Select the corresponding software based on your phone. In the pop-up prompts such as 'Warm Reminder' and when 'SmartTag' requests access to location information, select 'Agree' and 'Allow' to grant the app all necessary permissions.



Scan the QR code to install the App or view the electronic manual.



Use the browser to download the software, and select the corresponding software according to your phone model.

3. Card binding and unbinding

Before use, please turn on the phone's location and Bluetooth functions; open the SmartTag APP, then single-click the card's power button to turn it on, and bring the card close to the phone after startup. Click [Bind Device], which will redirect you to the [Add Device] page and automatically detect the card. If the card is not detected, you can single-click the card's power button again to turn it on, then click [Click to Search] until the card information appears.



Click the [...] in the top-left corner to open the device menu.



Click Bind Device to enter the binding page.



Select the device label, enter a nickname and contact information, click Bind Device, and start using it.



After the device is connected, click Unbind to complete the unbinding process.

4. More functions

For functions such as long-distance card positioning, nearby card searching, querying card trajectories, and sharing cards, please scan the QR code to view the electronic manual.

5. Frequently Asked Questions

1) Binding failed

Please check if the phone's network is working properly, and whether all permissions were allowed when opening the APP. If you accidentally disabled some permissions and don't know how to re-enable them, you can first uninstall the APP. When reinstalling it, grant all the permissions required by the APP.

2) Remote location updates slowly

The remote positioning function of this card relies on nearby electronic devices to report its location. Sometimes, there may be a certain delay, which is a normal phenomenon.

6. FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product name : Locator

Model No. :K1