

BW-HP6 头戴耳机

尺寸：100*60MM

材质&工艺：骑马钉+157G铜版纸

CE

FC

EC

REP

Name: VISHTEC Ltd

Add: 3 rd floor office 5, Plovdiv 2 Liuben Karavelov bul, 4002 Bulgaria

Email: compliance@vish-tec.com

Phone: +359 32 540 357

UK

REP

Name: VISHTEC UK Co.,Ltd

Add: 275 ISLINGTON SUITE 1405 NEW NORTH ROAD, LONDON ENGLAND N1 7AA

Email: Vincent.feng@vish-tec.com


Phone: + 44 1584 879 384

BlitzWolf

User Manual

BW-HP6

Features

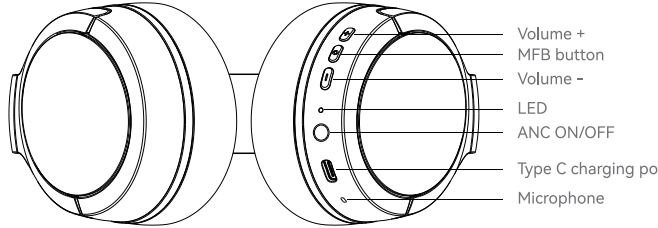

- 01 -

Pair headphone with Bluetooth devices

1.Hold MFB button for 3 seconds before you hear Power on. The blue LED indicator flashing , and then enter the pairing mode (the LED indicator's flashing blue and red)

2.When in the pairing mode, if not connect to device, the headphone will automatically turn off within 5 minutes if no action.

3.Turn on the bluetooth device you wish to pair with, and keep it within one meter range of headphone. Search for the pairing name "BW-HP6" in your device pairing list. Select/click pairing name "BW-HP6" till you hear voice "device connected"

4.Paired headphone will flash blue LED twice quickly when calling or pausing music play. No LED indicator when playing music.

Notes:

1. When the headphone already paired with a device, it will alternately connect when both devices powered on and stay within 1m. If you want to pair with another device, please disconnect the previous device first.

2. If the pairing is not successful, please switch off headset firstly and then re- pair again.

Disconnecting from the bluetooth device

Hold the MFB button for about seven seconds to turn off the power.

- 02 -

Battery charging

1.The headphone's battery must be recharged before use.

2.Headphone's battery must be charged with the Type C cable included in package as accessory.

3.Connect the Type C in the cable to the appropriate charging port of the headphone, and the USB plug on the other end to a USB port on a computer or wall charger

4.When recharging begins, the LED indicator on the headphone will light red.Full recharging requires about two hours; when recharging is completed, the Red LED indicator will turn off.When the battery is approaching depletion, will be heard "Low Battery" in the headphone at 5min intervals.

Note

1.Battery recharging time and using time may vary depend on ambient temperature and frequency of use.

2.Do not place metal objects near the headphone's charging port, since dangerous electrical shorts or abnormal heating may occur.

3.Make sure the charger voltage does not exceed 5V.

4.Please turn off your headphone after your usage to get a longer battery life.

- 03 -

5.Please don't attempt to change the rechargeable lithium battery that should last the lifetime of the headphone.

6.Please don't dispose used batteries/electronics with ordinary solid waste, since they contain toxic substances.

Functional operation

Playing Music

Functions	Status of headphone	Operation
Play	pausing	Short press MFB button
Pause	Playing Music	Short press MFB button
Previous Track	Playing	Long press Volume - button
Next Track	Playing	Long press Volume +button
Volume +	Playing	Short press Volume + button
Volume -	Playing	Short press Volume - button

Notes:

When sound volume is set to maximum or minimum levels a DIDI sound will be produced from the headphone.

- 04 -

Making calls with the headphone

Functions	Status of headset	Operation
Volume up	Conversation mode	Short press "+" button
Volume down	Conversation mode	Short press "-" button
Answering calling	Ringing	Short press MFB button
Reject calling	Ringing	Press and hold MFB button for one second, and release
Activate SIRI	Standby mode	Triply Press MFB button, and hear DIDI indicator sound.
Last number redial	Standby mode	Twice Press MFB button

Notes:

Not all the mobile phones support all the functions listed above. Please refer to the instruction of your mobile phone. Some functions and indication tones may vary with mobile phones

Noise Canceling Function

When you click the ANC button , you can hear "Noise Canceling", then you can enjoy the headphone in Noise cancellation mode. When you don't need the Noise cancellation function, please click the ANC button again, you can hear "Off", and green light will turn off.

- 05 -

Gaming Mode

When you click the ANC button twice quickly , you can switch into gaming mode, then you will hear "gaming mode".

The same operation to turn off gaming mode, and you will hear 'gaming mode off' .

Specifications

Model	BW-HP6
BT Version:	V5.2
BT Protocol:	A2DPv1.3,AVRCPv1.5,HSPv1.2, HFPv1.5
BT Code:	SBC, AAC
Operating distance:	10M
Driver Unit:	Ø40mm
Music playing time:	up to 70h (ANC OFF) /up to 42h(ANC ON)
Charging time:	about 2h
Charging voltage:	5V

- 06 -

Noise reduction performance: up to -22dB

Weight 215.8g

Troubleshooting

Problem	Remedy
Power won't turn on	Recharge the wireless headphones
The batteries will not charge	Confirm that charger is ON.Confirm that accessory USB to Type-C cable is securely connected to both the wireless headphone and charger.
Can't perform pairing	Place the wireless headphones and bluetooth device closely together when performing pairing

- 07 -

Can't perform bluetooth connection	Confirm that power is turned on for both wireless headphones and bluetooth device. Confirm that bluetooth function is turned ON in the device you are connecting to
No sound when playing music	Confirm that power is turned on for both wireless headphones and bluetooth device. Confirm that connection with bluetooth device is set for profile A2DP. Confirm that the connected music playback device is set for PLAY. Confirm that sound volume controls on both wireless headphones and music playback device are set to appropriate levels.

- 08 -

Sound is distorted when playing music	Check that no other devices utilizing the 2.4GHz wavelength are nearby, and that no obstructions black the signal path.
Can't use the hands-free operation	Confirm that wireless headphones and bluetooth device are connected using the profile HFP or HSP. If connection that to the bluetooth device is in profile A2DP, it may be necessary to change connection profiles (depending on the specifications of the bluetooth device).
Communication distance is short, sound is garbled.	Check that no other devices utilizing the 2.4GHz wavelength(including microwave ovens, wireless radios, etc.) are nearby. and that no obstructions block the signal path.

- 09 -

Important safety information

Adjust the headphone sound to the proper volume. Loud sound may damage your hearing. Don't turn the volume so high that you can't hear what's around you.

Use cautiously or temporarily discontinue use in potential hazardous situations. Do not use the headphone while ridding a bicycle, motor bike, or driving a car. The use of headphone may cause a traffic hazard and is illegal in many areas.

Not exposure or toss headphone into a fire. It will probably caused an accident

Don't disassemble headphone if you are not an expert.

Place out of reach of small children to prevent accidental ingestion of small parts.

WARNING

*This headphone is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near it (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

*To prevent a fire hazard, do not place any naked flame sources (such as lighted candle) on the headphone.

*Charging battery in a place where the temperature is between 5°C-40°C. Less or higher temperature atmosphere will effect the battery life.

- 10 -

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.