

White Sound Machine

User Manual



FR

ÉLÉMENTS D'EMBALLAGE
À SÉPARER ET À DÉPOSER
DANS LE BAC DE TRI



FR

Cet appareil
et ses piles
se recyclent

À DÉPOSER
EN MAGASIN



ou

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



UN38.3

Made in China

File version: V1.2.3



HE-B009

App Control Interface

- White Noise Tracks: 32
- APP Smart Control: CloudRest
- Custom Music: Bluetooth Playback
- Lighting: 8 colors + colour cycle

Warranty

We will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials. This guarantee does not cover damage caused by improper use, normal wear, or defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are carried out by unauthorized persons or if original parts from our company are not used. To obtain service within the guarantee period, please contact us at **aftersales-help@outlook.com** to reach customer service. The purchaser is responsible for all postage, freight charges, and any other expenses incidental to claiming against this warranty.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Greeting

Thanks for your purchase of White Sound Machine. Please read this user manual carefully and keep it in a safe place for future reference. If you need any help, please contact us.

Instructions Before Use

To reduce the risk of burns and electrocution, especially when children are present, always follow basic safety precautions, including the following:

1. Prior to using the White Sound Machine, make sure to fully charge it.
2. Refrain from charging the device with wet hands to reduce the risk of electrocution.
3. Keep the charger and White Sound Machine away from water or any other liquid. Do not submerge or drop them into liquid.
4. Only connect the White Sound Machine to a voltage system consistent with the specifications mentioned on the device or charger. Using improper voltage may cause damage void the warranty, and compromise safety.

5. Prior to charging, inspect the charger cord for any signs of damage. Do not use if the cord is compromised.
6. Keep the charging unit and its cord away from heated surfaces to prevent potential damage or hazards.
7. Do not attempt to open or disassemble the White Sound Machine, as this action will void the warranty and pose safety risks.
8. Exclusively use accessories endorsed by the We family to ensure optimal performance and safety.

Quick Start

Step 1: Connect to Power

1. Connect the white noise machine using the provided USB power cable.
2. Plug the power cable into a USB power port (such as a phone charger or computer USB port) to start the charging process.

Step 2: Download the App (The app is safe and free to download, has no ads and does not require any personal information)

1. Scan the QR code below using your phone's camera.
2. Download the App to your phone from the provided link.

Friendly Reminder:

We recommend searching for and downloading CloudRest via the app store on your mobile device to avoid pop-up ads on the web version.

 


Step 3: Connect Your White Sound Machine

1. Turn on Bluetooth and personal location services on your phone.
2. Turn on the power of the white noise machine.
3. Click on the scanning device button on the app.
4. Check the device list, you will see the available devices.
5. Find the device you want to connect to from the list and click on the connect button.
6. The battery icon "🔋" on the app indicates the device's battery status.


Note:

For Android OS, ensure you also allow location permission to connect to Bluetooth as the Android OS rules.

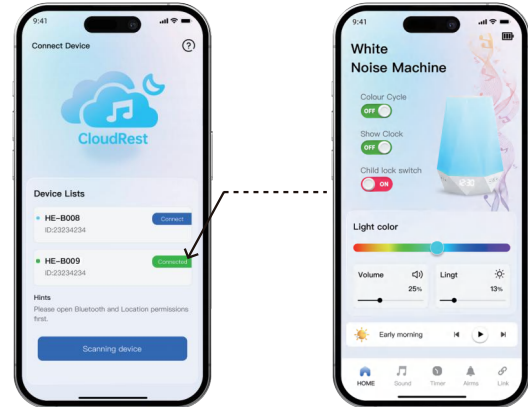

Click the "Connected" button to enter the main control page

 Product Features

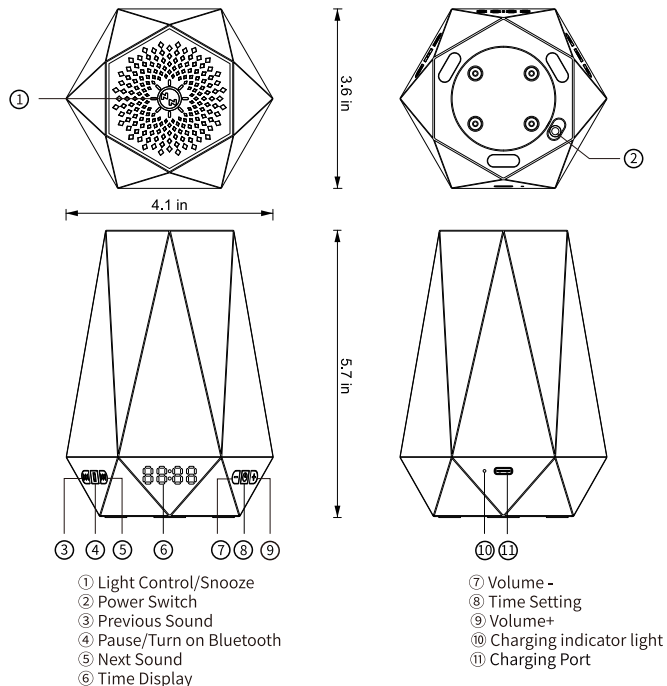

Instructions

① ☀ Light Control/Snooze

Short press the "☀" button to cycle through light colors: White 30%/50%/100%, Red, Green, Dark blue, Pink, Yellow, Sky blue, Purple, Colour Cycle
Long press the "☀" button to turn off the light.

When the alarm rings, short press to snooze for 9 minutes.

② Power Switch

③ ⏮ Previous Sound

Press and hold the "⏮" button to skip to the previous track.

④ || Pause/Turn on Bluetooth

Short press the "||" button to pause

Press and hold the "||" button to enable Bluetooth functionality.

⑤ ⏭ Next Sound

Press and hold the "⏭" button to skip to the next track.

⑥ Time Display

⑦ Volume -

Short press the "-" key to decrease the volume.

⑧ ⌚ Time Setting

Press the "⌚" button briefly to adjust the brightness of the time display by 10%, 50%, 100%, OFF, for a total of four levels.

Press the "⌚" button for a long time to enter the alarm setting mode.

Then, press the "⌚" button for a longer period to adjust the hour format of the alarm, and press the "⌚" button briefly to adjust the minute format.

⑨ Volume +

Short press the "+" key to increase the volume.

⑩ Charging indicator light

⑪ Type C Charging Port

Charging

If the device fails to turn on or automatically powers off shortly after turning on, it indicates that the battery is depleted and requires recharging.

1.Connect the USB Power Cable

- Utilize the provided USB power cable to connect the Sound Machine.
- Plug the cable into a USB power port,such as a mobile phone charger or a computer USB interface,to initiate the charging process.

 
You can check the "  " battery level icon in the upper right corner of the app to determine whether charging is needed.

2.Charging Indicator

- A red light will illuminate during the charging process.
- The charging indicator light will turn off once the device is fully charged.

Note:

It is necessary to charge the device more than 1 meter (3 ft) away from children to avoid danger.

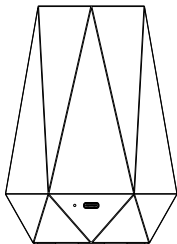

Specifications

Model: HE-B009

Input Voltage: DC 5V/1A

Battery: 1500mAh/3.7V

Working Power: 3W

Speaker: 52MM-4Ω-5W

White Noise Tracks: 32

Custom Music: Bluetooth Playback

Lighting: 8 colors + colour cycle (White 30%/50%/100%, Red, Green, Dark blue, Pink, Yellow, Sky blue, Purple, Colour Cycle)

JieLi Bluetooth 5.3 Smart Chip with Ultra-Low Power Consumption

APP Smart Control: CloudRest

Timer: 30min/60min/90min/120min/240minCharging

Time: 2 hours

Usage Time: 12 hours

Material: ABS+PP+Silicone

LED: 5050 RGB Light

Charging Port: Type-C

Product Weight: 0.65 lb

Product Dimensions: 4.1 × 3.6 × 5.7 inch

Gross Weight: 0.89 lb

Gift Box Dimensions: 4.3 × 4.3 × 6.0 inch

Quantity per Carton: 32 pcs

Outer Carton Gross Weight: 33 lb

Outer Carton Dimensions: 17.9 × 17.9 × 12.8 inch

Bluetooth

How to Connect Bluetooth Audio Playback?

 
(You can play your favorite music or audiobooks via a Bluetooth audio connection)

Step 1: Turn on the power switch of the white noise device.

Step 2: Press and hold the "II" button to enable Bluetooth functionality.


Step 3: Open the Bluetooth settings on your phone, search for Bluetooth devices, find the model HE-B009, and click to connect.

Steps 1

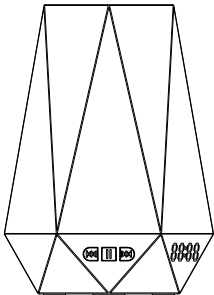


Press and hold the "II" button to enable Bluetooth functionality.

 Steps 2

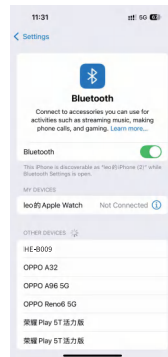

Open the phone's Bluetooth connection interface, search for devices, find the model HE-B009, and click to connect.

 Steps 3

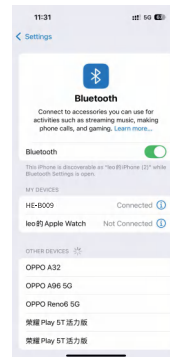

When successfully connected

Packing List

White Sound Machine x1 USB Power Cable (80cm) x1 User Manual x1

Troubleshooting

1.Alarm is set in the app, but the device didn't activate?

- ① Please check if the alarm date has been selected (unselected background is white, selected background is dark gray).
- ② Check if the "Date Repeat" switch for the alarm is turned on.

2.Noise during playback?

Ensure the device has enough power. The charging indicator light will turn off when fully charged.

3.The device shows a countdown icon?

Yes, if it's not displayed, check if the countdown setting is enabled.

4.Mobile app connection failed?

- ① Confirm that Bluetooth and location services are enabled on your phone.
- ② Open the app's device search screen, delete all previously connected devices, and search for and reconnect to the device.
- ③ Check if the device is connected to another phone.

5.No response from the app after connecting?

Power off and restart the device, then reconnect to the app.

6.The device frequently shuts down after powering on?

Check if the countdown timer in the app or on the device is enabled. If you're not using this feature, turn it off immediately.

7.No response when pressing buttons on the white noise device?

Open the app and check if the child lock is enabled.

8.How to turn on Bluetooth and connect the white noise Machine ?

- ① Press and hold the "II" button to enable Bluetooth functionality.
- ② Open the Bluetooth settings on your phone, search for Bluetooth devices, find the model HE-B009, and click to connect.

9.How to set the time on the white noise Machine ?

- ① Turn on Bluetooth and connect the device to your phone. The system will automatically sync with the phone's time.
- ② For manual operation, press and hold the time button on the device until the time digits flash on the screen, then adjust the time using the "+" / "-" buttons.

10.Why is the volume sometimes too loud or too soft at startup?

Our white noise Machine has a memory function, so it will return to the settings used during the last shutdown each time it is powered on.

11. Why can't I connect to play custom music via Bluetooth?

To play audio via Bluetooth, you need to first pair the device in your phone's settings.

If issues persist, refer to the user manual or contact customer support at aftersales-help@outlook.com