


MZS-19T

OPERATION INSTRUCTIONS

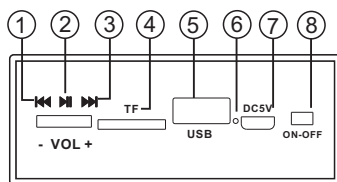

- 1. Short press previous song/previous station, long press volume down**
- 2. Short press to pause the play, long press to switch mode, BT mode two consecutive pairs of the same model two product,**
- 3. Short press a song/next station, long press volume plus**
- 4. Micro SD input**
- 5. USB port input**
- 6. The charging light is on, full light is off**
- 7. The DC 5V power input/Audio input**
- 8. Power switch**

BT MODE

Turn on the speaker, Once powered on it is already in BT mode. Turn on your device's BT and then scan for new devices and look for Model name Once found, pair with it. After pairing, devices can connect with each other automatically.

Charging

Please use the included charging cable to charge.

Red led is on when charging the unit. When the power is full, the led will be off.

Power: 5W

Playing time: 3 hours

Lithium Battery: 3.7V 500mAh

Charging via USB port (PC): up to 4 hours

Wireless range: 10 meter

USB charging: DC 5V

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.