 


Wired PTZ WiFi Camera

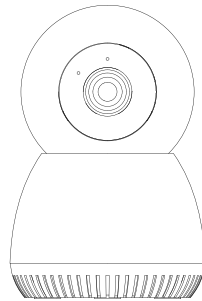

Email: usservice@isecugroup.com

WiFi 2.4G / 5G

Before operating this unit, please read these instructions carefully, and save them for future use.

 
Quick Guide

Interface description

This manual is suitable for various types of cameras.

(The appearance may be different due to different batches. The details are subject to the receipt. This manual is only for the installation instructions of this series of equipment)

Wireless Pan-tilt IP Camera

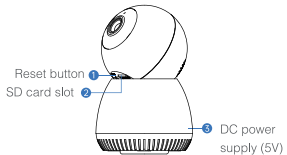

Description

 
- 1. Reset button**
The working state of the device, long press 5 seconds to restore the factory settings, the camera will have a voice prompt broadcast.
- 2. SD card slot**
TF card, storage video and playback video.
- 3. Power supply**
Power input.

Installation and placement

Wireless Pan-tilt IP Camera



- ▶ **Table placement**
Place on a desk or table.

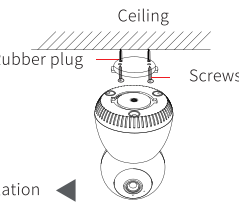

Ceiling installation

- 1.1 Drive the expansion rubber plug into the ceiling, and use screws to fix the base of the bracket to the ceiling;
- 1.2 Install the device on the stand.

Software Installation

APP Download and Installation

Users can search "EseeCloud (IP Pro, VR Cam)" on APP store or Google Play, or scan the QR code below to install the APP.

Note: For iOS system, it requires iOS 9.0 version or above. For Android, Android 5.1 or above.



EseeCloud APP



APP download

Step 1

If you are prompted to open certain permissions (such as location, message notification, etc.) during APP installation, click Allow (agree).

Step 2

Account register: Open the APP, click "Register", enter your email or phone number to create an account.

Account login: On the login interface, enter the account/phone number/email, and the corresponding password, and click the "OK" button to log in.

Third-party login: APP supports third-party login. Click the third-party social software icon, jump to the APP to complete the authorization and log in.

 


Step 2

The APP will automatically search for a new device and click the Add button when it finds the device.



(If you do not see the pop-up device box, please click "scan to add" to scan the QR code on the camera body)

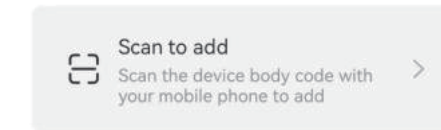

If you can't find the device in the above steps, press and hold the reset button for 5 seconds, restore the camera to factory settings, and try again.

Step 3

Enter the WIFI name and password on the distribution network screen.



Step 4

After the network is configured successfully, the system prompts you to enter the device name. Click Next.



Step 5

Users can choose to enable or disable message push according to their own preferences (generally recommended to enable)



Step 6

Congratulations, you have successfully connected the device.

Or you can add camera by WiFi configuration

Step 1

Open the APP, click the "+" icon in the middle of the interface to enter the scan code interface;



Step 2

Click "Camera scan code add" method



Step 3

Check whether the camera light is blinking



Step 4

Select the WiFi that the camera needs to connect to, enter the password, and click Next;



 
Step 5

Point the camera at the QR code that appears on the screen of the phone



Step 6

After the network configuration is successful, set a name for the camera.

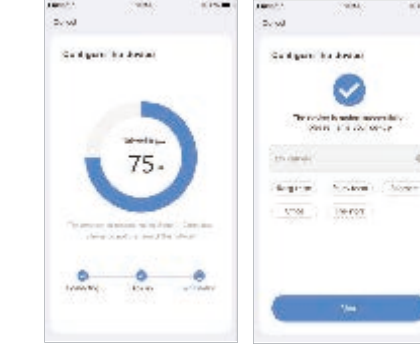

Help FAQ

Q1: Why is the pairing network unsuccessful?

1. Please make sure that the distance among the camera, the router and the mobile phone should be close enough when configuring the network.
2. Please make sure that the WIFI signal connected to the mobile phone 2.4G Wifi and 5G WIFI are both ok.
3. Please check whether the WIFI name and password are correct.
4. Please long press the reset button for 5 seconds and try again after restoring the camera to the factory settings.



Q2: Why is there no playback?

1. Make sure that the TF card has been inserted into the camera and try to turn on/off the camera.
2. Enter the camera settings menu to check the storage status 'in good condition' (if the status is abnormal, click to "Format the memory card".)



Q3: Why is the camera offline?

1. It may be caused by router WIFI signal interference or network reasons. Power off and restart the optical modem, router or camera.
2. The camera may be too far away from the WIFI router, try to get the camera next to the WIFI router.
3. Whether the WIFI password has been changed, try to reset the camera and try pairing again.

Q4: Why my phone does not have an alarm push function or two way audio?

1. Check your mobile phone permission settings, and make sure that enable the notification permission of "EseeCloud" App.
2. Open your phone's Settings > Apps and Notifications, select Apps and Notification Management respectively, find the "EseeCloud" app, and turn on all permissions.



After Service

1. Thanks for your purchase and support, we appreciate all your valuable feedback.
2. If you have any questions about our products, please feel free to contact us.

Email: usservice@isecugroup.com

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Statement

English: This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radiation Exposure Statement

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de 20cm entre le radiateur et votre corps.