

15.6-inch

AI Digital Frame User Manual



Model: ADF1001

NOTE: 1. Please read this manual carefully before using the product.
2. Images and illustrations in this manual are for reference only and may differ from the actual product.

Contents

Product Overview	01
Packaging List	01
Device Connection and Power-On	01
Wi-Fi Setup and Device Binding	02
Main Feature Description	07
AI Voice Interaction	08
Calendar Functions	10
Tasks	12
Other Features	13
Quick Reference for Common Operations	14
Usage Recommendations	14
Safety Precautions	15
Specifications	15
FCC Statement	16

I. Product Overview

The 15.6-inch AI Digital Frame is built for family calendar and schedule management. It supports viewing family calendars, task planning, voice interaction with the AI assistant, and managing rewards, lists, meals, and photo albums. The user interface consists of a top AI Assistant bar, a left navigation bar, and a center content area. Use the left icons to change pages, or tap the top microphone to talk to the AI.

II. Packaging List

No.	Item	Quantity
1	15.6-inch AI Digital Frame	1
2	Power Adapter	1
3	User Manual	1
4	Desktop Stand	1
5	Wall Mount Bracket	1

III. Device Connection and Power-On

1. Connect the power adapter to the power port on the smart calendar.
2. Plug the adapter into a power outlet.
3. Wait for the device to power on automatically and enter the initialization page.
4. When using the device for the first time, follow the on-screen instructions to complete Wi-Fi setup and account binding.
5. Download the VTimes Smart app
Scan the QR code in this manual to download the VTimes Smart app. You can also download it from the App Store or major Android app stores.



VTimes Smart App



Note: App Store is a service mark of Apple Inc.
Google Play and the Google Play logo are trademarks of Google LLC.



Scan the QR code to download the APP

IV. Wi-Fi Setup and Device Binding

When using the device for the first time you need to set up the Wi-Fi connection and bind the device to your account via the VTimes Smart app.

 
1. First-use

- The smart calendar is powered on and stays on the initialization page.
- Your home Wi-Fi is working properly, and you have the Wi-Fi password ready.
- The VTimes Smart app is installed on your phone, and you have logged in with your account.
- Camera permission is enabled on your phone so you can scan the QR code on the device.
- Keep your phone and the device close to the router to avoid weak network signals.

2. Device Initialization


Step 1: Enter the Initialization Wizard

Once the device powers on, the “Welcome” screen appears. When the device enters the initialization process, tap Next in the bottom-right corner to continue.

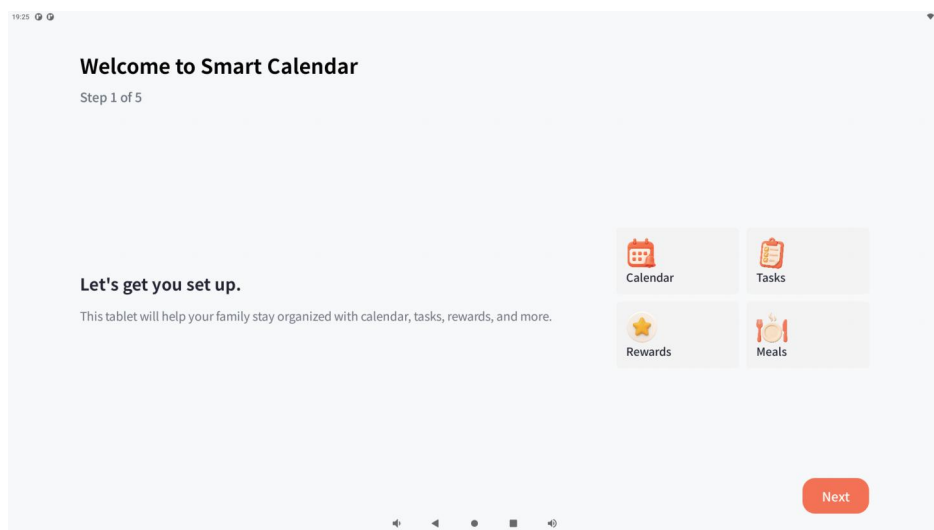


Step 2: Set Your Language

 Select your preferred language from the list, then tap Next in the bottom-right corner to proceed.

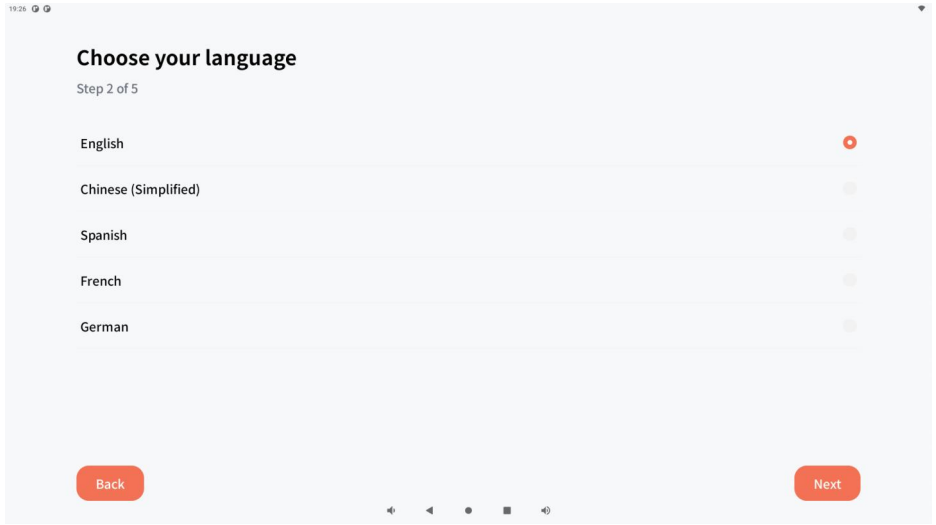


Step 3: Connect to Wi-Fi

 Choose your home network, enter the password, and wait for the connection. The network name will show once connected. Confirm it's working and tap Next. To adjust system settings, tap "Open System Wi-Fi Settings."

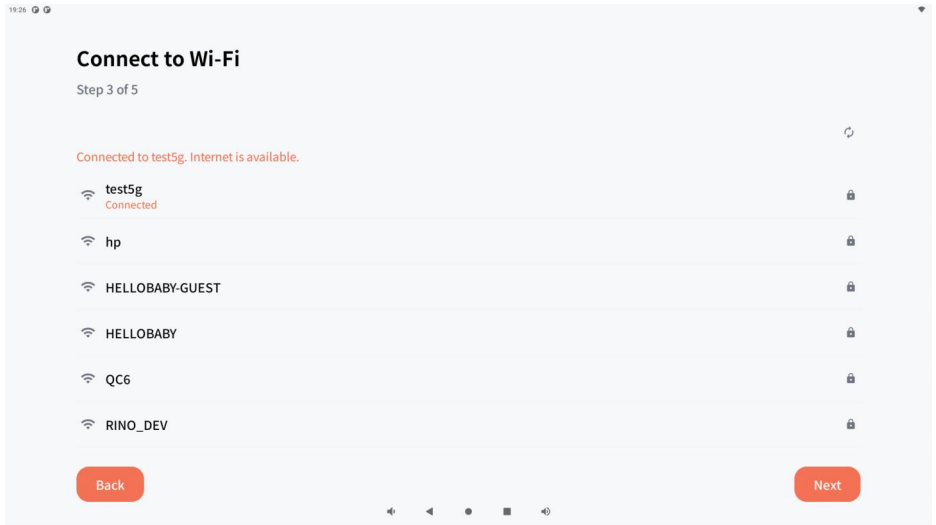


Step 4: Bind Your Device

 The device will now display a Bind Device screen with a QR code and a pairing code. Keep this screen visible, then open the "VTimes Smart app" on your phone and scan the QR code to complete the binding. If the QR code or pairing code expires before you finish, tap Refresh Code to generate a new one.

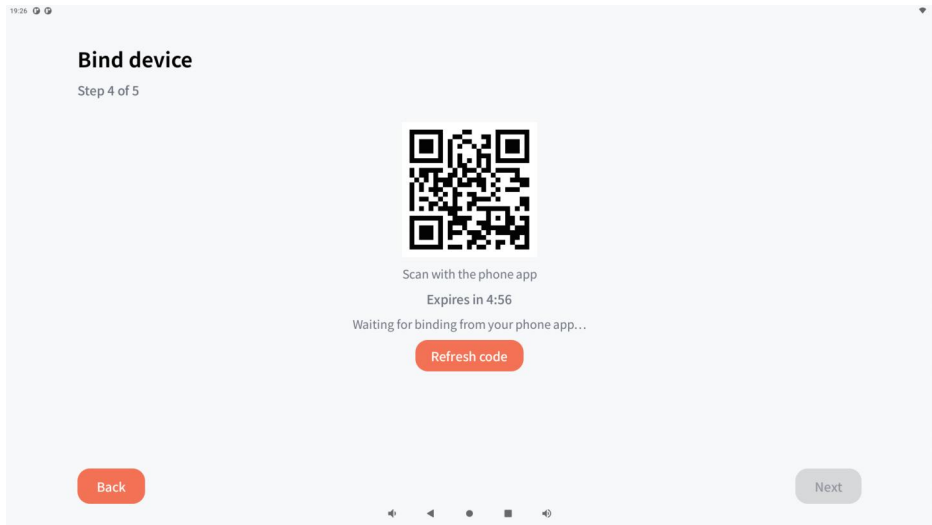

Step 5: Bind Device with App QR Scan

 
- Open the VTimes Smart app and sign in to your account.
- On the app home page, tap Add (upper-right corner), then choose Scan.
- Scan the QR code displayed on the device.
- Upon successful scan, the device will appear on your app home page.

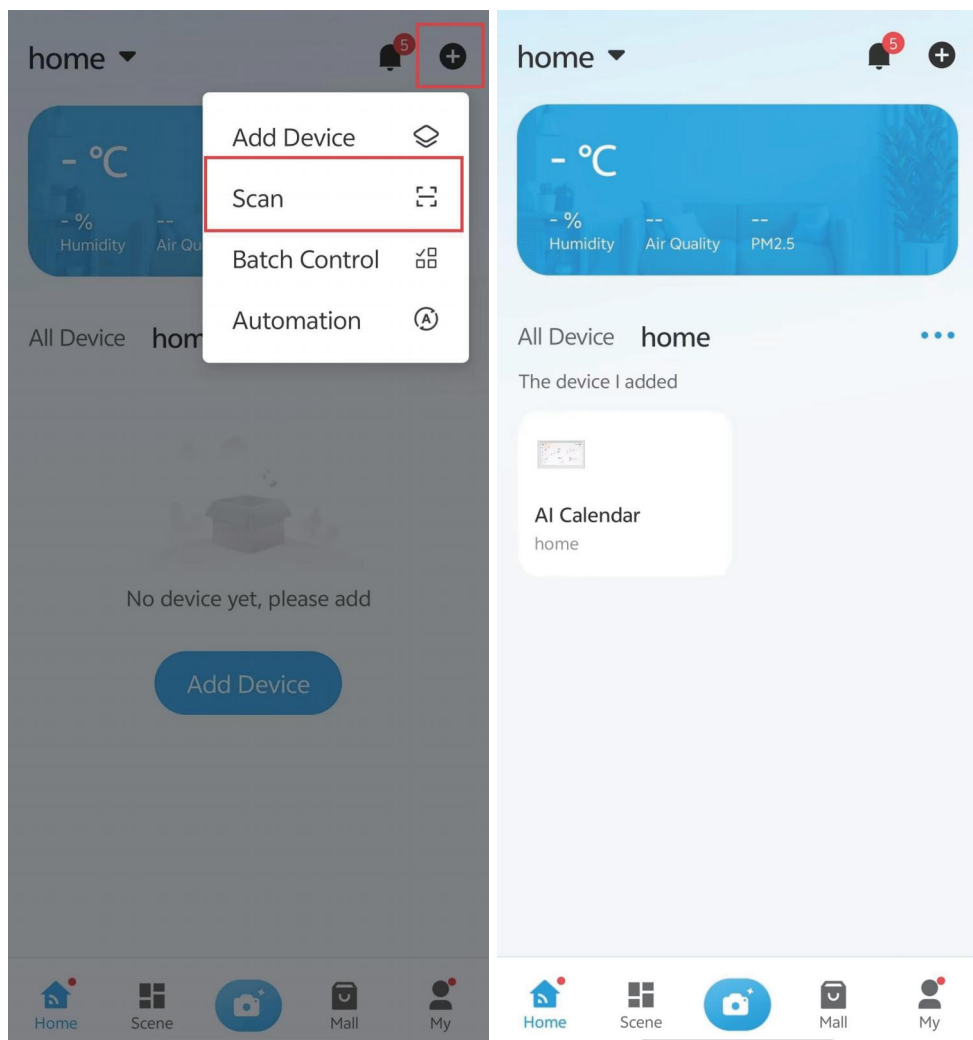


3. Confirm on the Device

After the Wi-Fi setup is complete, the device will normally enter the home screen automatically. If it doesn't, wait a few seconds or tap Complete / Enter Device on the screen.

 Once you have bound the device in the app, return to the device to continue. On the Confirm your timezone screen, check that the displayed time zone is correct. To change it, tap Select timezone and choose your region, then tap Finish in the bottom-right corner.

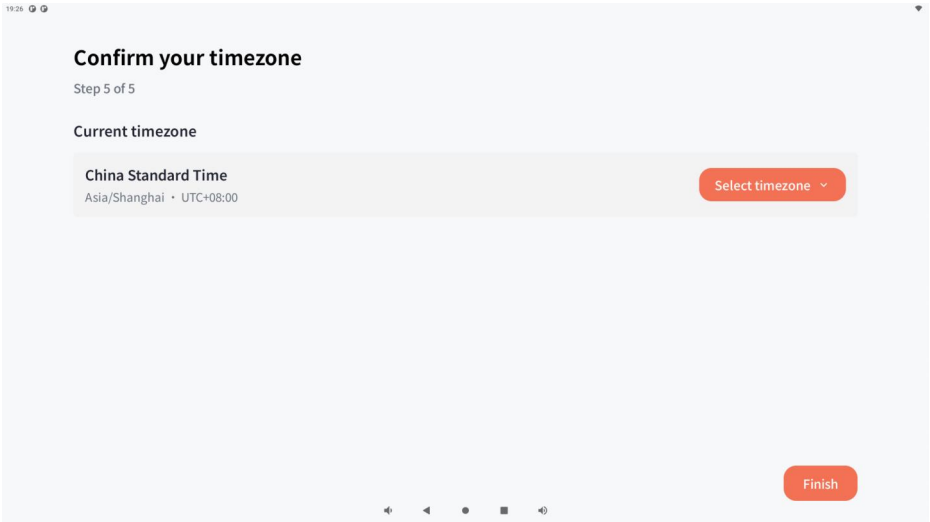

 After the settings are completed, the device will enter the main interface. You can then start using functions such as the calendar, tasks, and conversations with the AI.

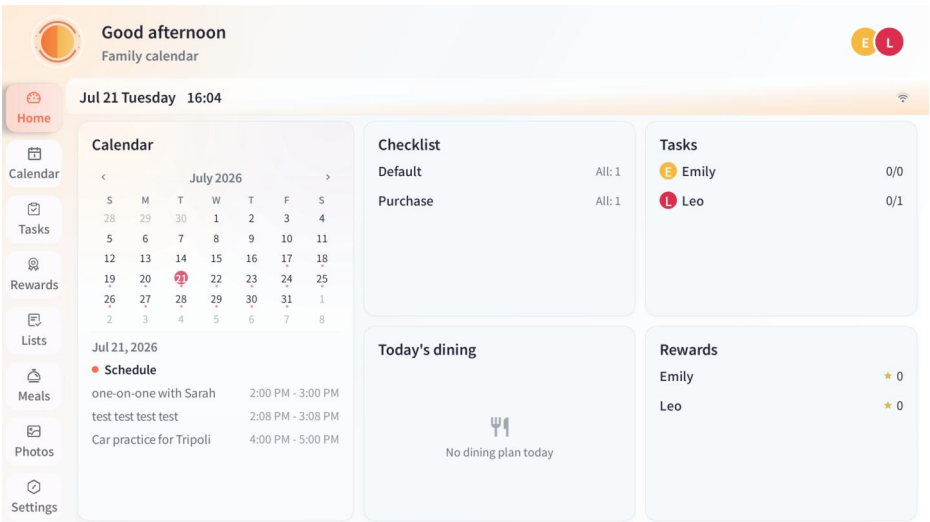

4. Trouble with Wi-Fi Setup

If the connection fails, go through this checklist:


- Double-check that you've entered the right Wi-Fi password.
- Move your phone and the device closer to your router.
- Make sure your router is online and working.
- Go back and restart the "Add Device" flow in the VTimes Smart app.
- If this device was used with a different account before, you'll need to remove it from that account, or tap the reset option on the device to clear the old network settings.

V. Main Feature Description

Area	Description
AI Assistant Bar	Role switching, pick the assistant mode, display the current AI character and the current prompt, and provide voice interaction functionality.
Date Status Bar	Shows the current date, time, and network status.
Navigation bar	Switches between Overview, Calendar, Tasks, Rewards, Lists, Meals, Photo and Settings.
Content Area	Shows the content of the currently selected feature page.

NOTE:

 To use the AI assistant function, you must subscribe this function through the VTimes Smart APP.

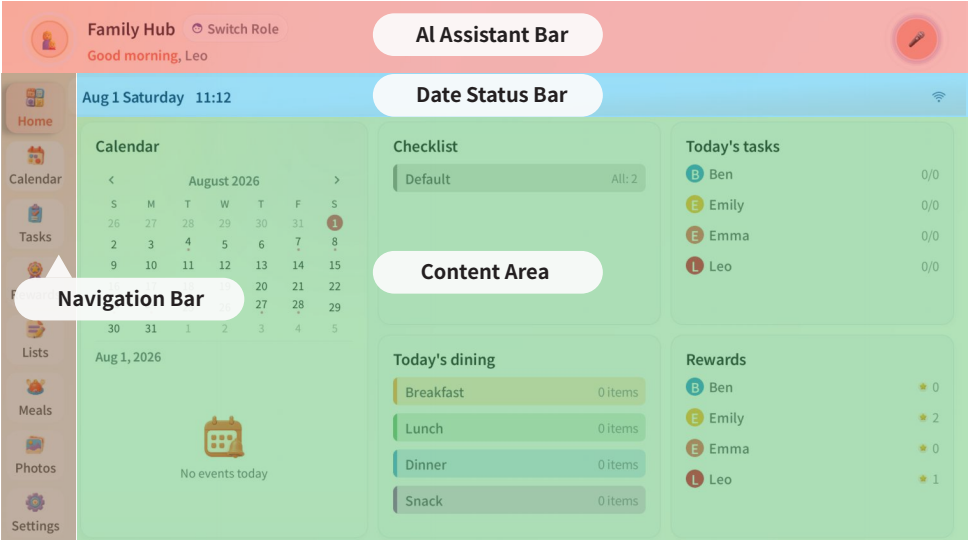


VI. AI Voice Interaction

AI voice interaction is one of the core features of the device's smart calendar experience. You can set reminders, schedule tasks, and check family plans by talking to the AI assistant. You can also switch the functions corresponding to different roles for a more personalized experience.

NOTE: AI Responses:

 The AI assistant generates responses using automated models. While designed to assist with family schedules and reminders, answers provided by the AI may occasionally be inaccurate, incomplete, or incorrect. Please verify critical schedule information, dates, or task details manually.

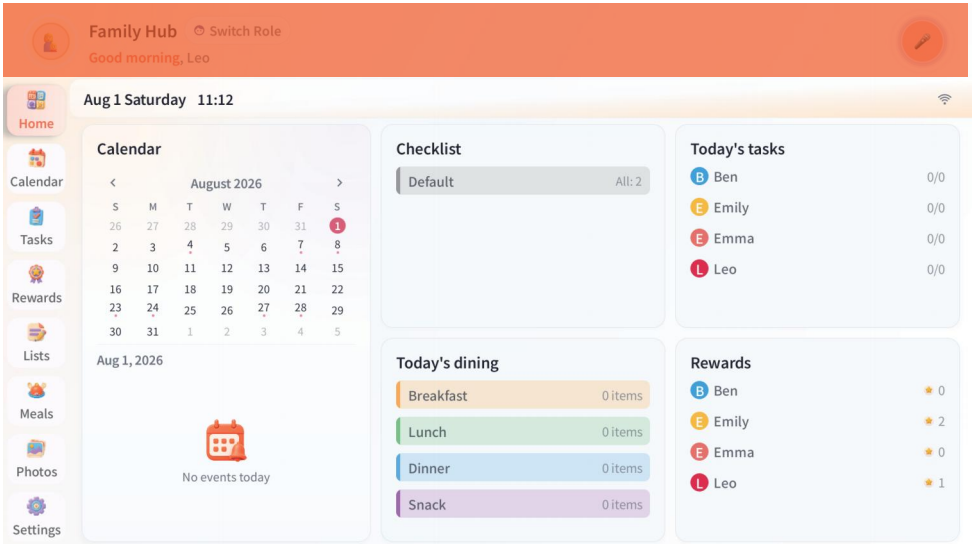


1. Start an AI conversation

- Tap the microphone button in the upper-right corner of any page.
- When you hear a prompt tone or see the conversation status, speak what you want to ask or schedule.
- The AI assistant will respond based on your family calendar, tasks, and other information.
- Tap the microphone button again to end or exit the conversation.


Example of possible conversation:

 - What is my schedule today?
- Remind me to pick up the package this afternoon.
- Ask the child to complete the task of packing their schoolbag.
- What important activities are planned for this week?

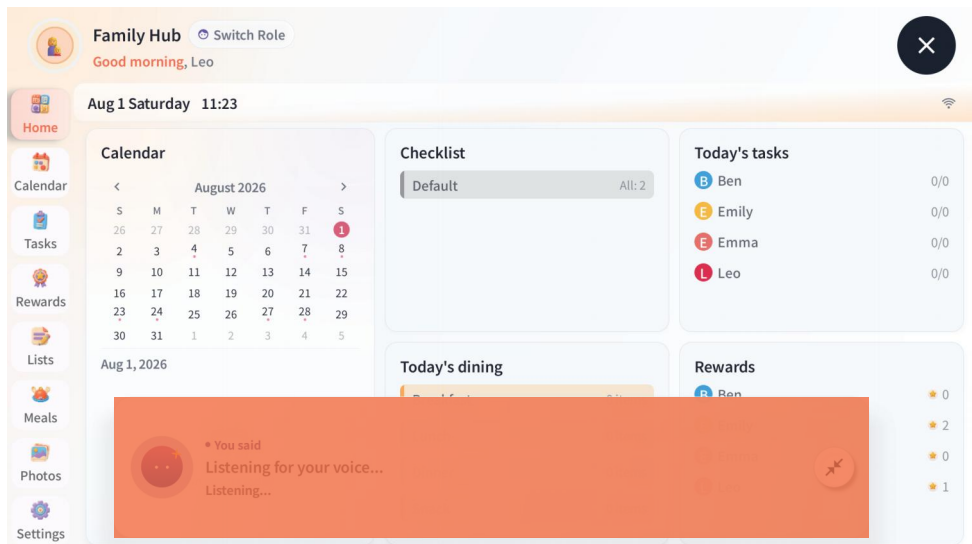

2. Switch AI Role

 - In the AI assistant bar, tap "Switch Voice".
- The role selection page will open.
- Tap the AI role you want to use.
- After returning to the main interface, the selected role, voice style, and theme color will be automatically updated.

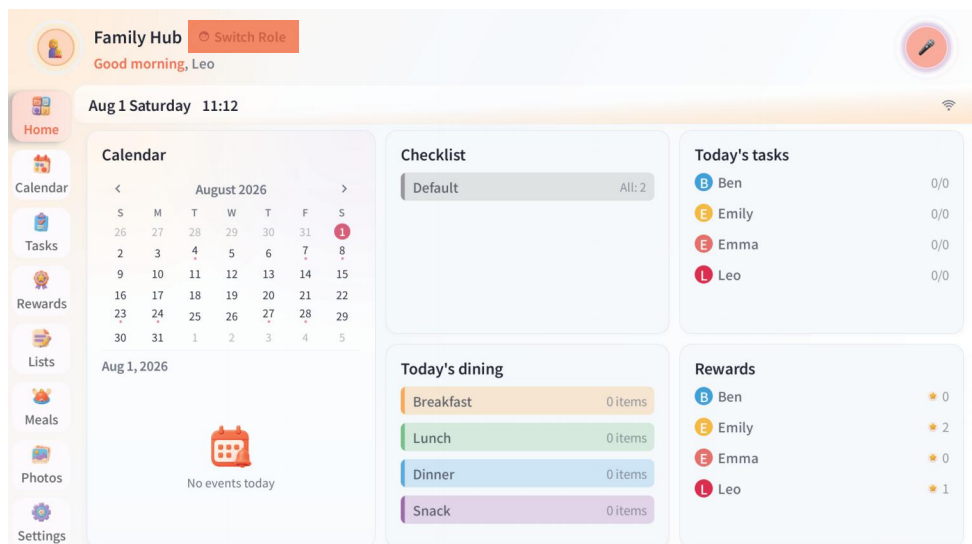


VII. Calendar Functions

The calendar is one of the core features of the smart calendar, allowing you to view and manage important schedules for family members in one place.


1. View Calendar

 - Tap the Calendar icon in the left navigation bar.
- The monthly view opens.
- The current date, selected dates, and existing events will be displayed in the calendar.
- Tap a date to view its events.

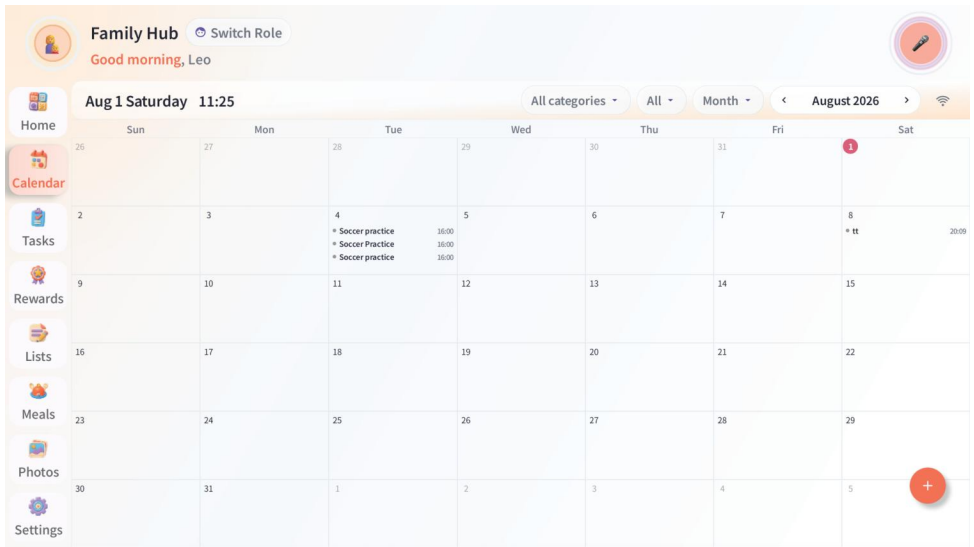


2. Add an Event

 - Tap the "+" icon in the bottom-right corner of the calendar page.
- Enter the event title, date, time, assigned family members, and category.
- Once Saved, the event will appear on the selected date.

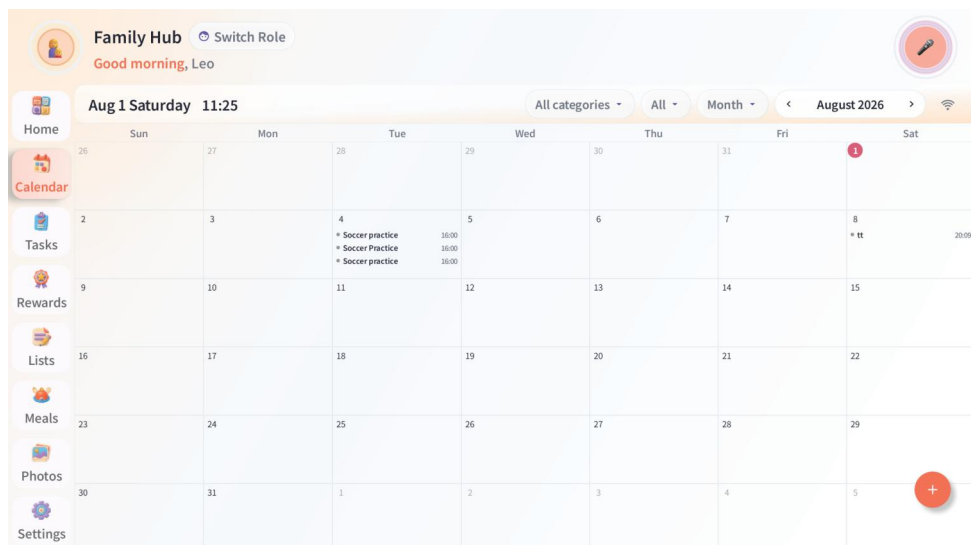

3. Browse by Month or Category

 Use the month selector at the top of the Calendar screen to move between months. Filter events by category or family member to view the plans you need.

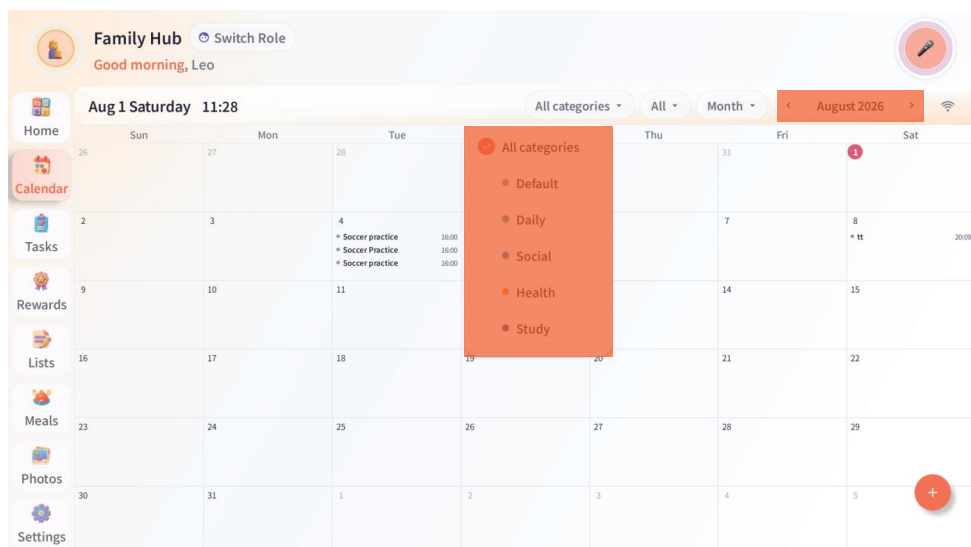


VIII. Tasks

Tasks help family members build daily routines and reward habits. Parents can assign tasks to family members, and members can earn stars after completing them.

1. View Tasks

 - Tap the Tasks icon in the left navigation bar.
- Task cards are grouped by family member.
- Each member area displays the number of completed tasks, stars, and pending tasks.

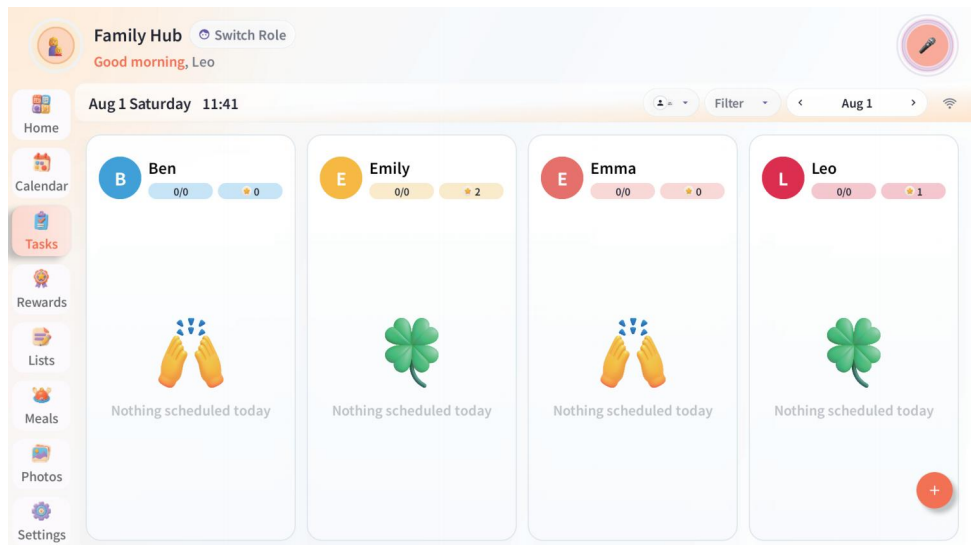


2. Complete a Task

- Find the task for the corresponding member.
- Tap the circular complete button on the right side of the task.
- Once you update a task's status, the task progress and star count will update automatically.

3. Add Task

 - Click the "+" icon in the bottom-right corner of the task page.
- Enter the task name.
- Select the family member responsible for the task, date, number of stars, or repeat rule.
- Click Add to display the task in the corresponding member's task list.

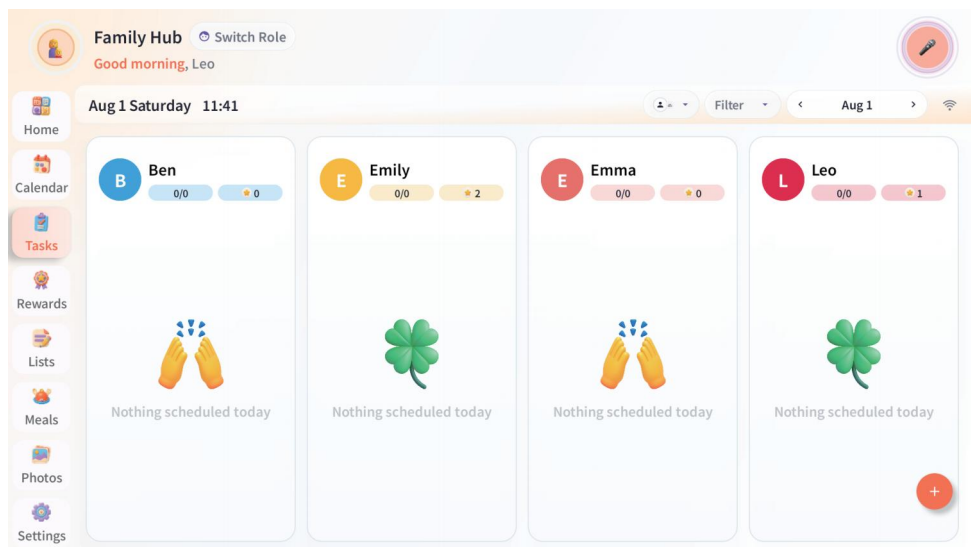

IX. Other Features

1. Home

The Home page gives you a quick look at your family's day, including calendar, tasks, lists, meals, and rewards. Use it as your daily home screen.

2. Rewards

The Rewards page shows available rewards and the number of stars required to redeem them. Family members can redeem corresponding rewards on this page after completing tasks and earning stars.

3. Lists

The List page allows you to manage household lists such as shopping lists, purchase lists, and to-dos. Users can view different list contents by category.

4. Meals

The dining page allows you to plan breakfast, lunch, dinner, and snacks weekly, helping families plan meals for the week in advance.

5. Photos

The album page serves as an entry point for displaying family photos, activity records, or memorable content.

6. Settings

The Settings page manages basic device information, including general settings, calendar settings, themes, sleep mode, sidebar and navigation, family members, Wi-Fi, and more. You can change the device name, time zone, language, date and time, and other settings here.

X. Quick Reference for Common Operations

Operation	Method
Switch Pages	Tap an icon on the left navigation bar.
Start AI Voice Interaction	Tap the microphone button in the top-right corner
End AI Voice Interaction	Click the microphone button again or follow the on-screen prompts to exit
Switch AI Role / Character	Tap Switch Role at the top
View Events	Go to the Calendar and Tap a date
Add an Event	Go to the Calendar and Tap the "+" icon in the bottom right corner
View Tasks	Go to the Tasks to view member task cards
Complete a Task	Tap the circular button on the right side of the task
Add Task	Go to Tasks and Tap the + icon in the bottom right corner
Redeem a Reward	Go to Rewards and tap Exchange on the reward item
Manage Device	Go to Settings and select the desired setting

XI. Usage Recommendations

- Each morning, start by viewing the Home to quickly see your daily household tasks.
- Add important family events to the Calendar for all members to view synchronously.
- Use Tasks and Rewards together to help children build good habits.
- Switch AI characters based on family members' preferences to make interactions feel more natural.

- You can plan meals in advance each week to reduce the costs associated with last-minute arrangements.

XII. Safety Precautions

- Use only the original power adapter or a compatible one that meets the device specifications.
- Do not operate in humid, hot, or strongly magnetic environments.
- Always disconnect the power before cleaning the screen.
- Do not disassemble, modify, or attempt to repair the device yourself.
- If the device does not respond for an extended period, disconnect and reconnect the power to restart it.
- Software features are subject to change with version updates; please refer to the actual device interface for the most current information.

NOTE:

AI Information Accuracy: Information, answers, or schedule recommendations provided by the AI Voice Assistant are generated automatically and are intended for general reference only. The AI may occasionally produce inaccurate or incorrect responses. Do not rely solely on the AI assistant for critical health, safety, financial, or time-sensitive matters.

Specifications

Size	Display Area	344.16(H)×193.59mm(V)
	External Dimensions	394.49 mm (length) × 243.89 mm (height) × 28.40 mm (thickness)
Display screen	Screen	15.6-inch Full HD LCD display
	Resolution ratio	1920*1080
	Luminance	700: 1
	Contrast ratio	16:9
	Display Ratio	250cd/m²
	Display Mode	IPS display
	View Angle	85/85/85/85 (Top/Bottom/Left/Right)
System	Memory	32GB
	Touch screen	10-point capacitive touch
	System	Android 11

Network	WiFi	WiFi 2.4GHz&5GHz
	PDA	Bluetooth 5.2
Interface	Type-C	Type-C*1 (Data transmission)
	Source	1 × 12V DC power socket
Multi-media	Video frequency	MPEG-1, MPEG-2, MPEG-4, H.263, H.264, VC1, RV, etc., supporting resolutions up to 1920x1080p
	Audio frequency	MP3/WMA/AAC etc.
	Picture	JPEG
Configure	Lampshade	2*2W
	Wall mounting hole	Standard 100x100 wall-mounted VESA mount
	RTC/ Startup & Shutdown	Support
	OSD language	Multi-language OSD operation support, including Chinese and English
	Working temperature	0°C — 40°C
Appendix	Operating instruction	Standard configuration
	Adapter	DC 12V/3A Power Adapter

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by

the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter. "To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

Manufacturer: Shenzhen Vtimes Intelligent Technology Co., Ltd.

Address: Room 2104, Building 11, Tianan Yungu Phase II, Gangtou Community,
Bantian Street, Longgang District, Shenzhen, Guangdong, China.



Made in China/Ver1.1