


6KU

GlideWiz™ Momo 11 PRO Electric Wiggle Car

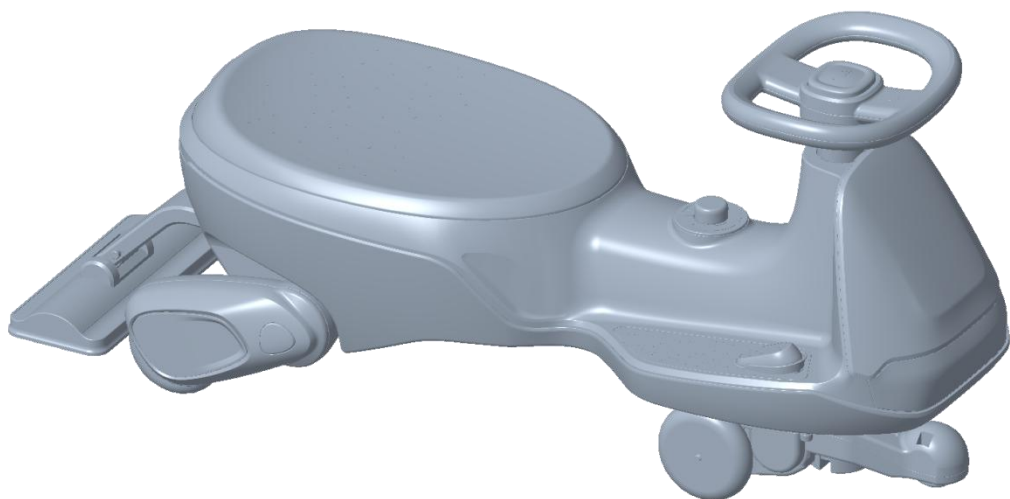

ASTM F963,CPSIA



**WARNING: CHOKING
HAZARD—Small parts. Not
for children under 3 years.**

Read this manual carefully before use and keep it for future reference.

Catalogue

Safety Notice	1
Product Information	5
Parts List	6
Parts Diagram	7
Assembly Step	9
Instructions For Use	12
Fault Analysis	15

Safety Notice

WARNING!

-CAUTION--ELECTRIC TOY

- As with all electric products, precautions should be observed during handling and use to prevent electric shock.
- Adult assembly required. Keep small parts away from children during assembly.
- This product is intended for children aged 3 years and older only.
- Adult supervision is required at all times during use.
- Never allow more than one rider at a time.
- Maximum user weight: 150 lb / 68 kg.
- Always wear shoes when using this product.
- Protective equipment such as a helmet, knee pads, and elbow pads is recommended.
- This toy should be used with care. Skill is required to avoid falls, collisions, or injury to the rider or others.
- This product does not have a brake.

Safe Riding Area

- Use this product on flat, stable, dry surfaces with enough open space. An adult must choose a safe riding area and supervise the child at all times.
- Do not ride downhill or use on slopes, ramps, uneven ground, loose gravel, sand, wet surfaces, grass, or soft ground. Since this product has no brake, these areas may make the vehicle hard to stop, tip over, or collide with people or objects.
- Do not use in any area with traffic or moving vehicles. Driveways, parking areas, or other open paved areas may be used only when an adult confirms they are flat, dry, free of traffic, and safe for riding.
- Keep away from stairs, steps, swimming pools, ponds, and other bodies of water. PU wheels may mark or scratch some floors, especially hardwood floors. This product may not be suitable for carpet.

Before First Use

- Fully charge the vehicle before first use. Charging must be performed by an adult only.
- Make sure the vehicle is turned off before charging.
- Before allowing a child to ride, check that all parts are correctly assembled and securely fastened.
- Use the vehicle in low-speed mode for the first ride until the child becomes familiar with starting, steering, slowing down, and stopping.

Safety Notice

Before Each Use

- Check that all parts are correctly assembled and securely fastened before each use.
- Inspect all screws, nuts, bolts, wheels, and other fasteners. Tighten them if necessary.
- Parents should periodically examine this toy for potential hazards, including damaged parts, worn wheels, exposed wiring, or damaged charging components.
- Do not use the product if any part is damaged, loose, cracked, missing, or if any electrical or charging component is damaged.
- Any potentially hazardous parts must be repaired or replaced before further use.
- Keep hands, feet, hair, clothing, and loose items away from the wheels and moving parts.

During Use

- Children must remain seated properly while riding.
- Do not allow the child to stand on the vehicle while it is moving.
- Stop using the product immediately if it slows down abnormally, does not operate properly, or shows signs of damage.

Battery and Charging Safety

- All charging and recharging must be carried out by an adult only.
- Switch the vehicle off before charging.
- Do not use the product while it is charging. Charge the product in a dry, well-ventilated area, away from heat, sparks, open flames, and flammable materials.
- Use only the supplied USB Type-C charging cable and a suitable USB power adapter that meets applicable safety requirements.
- Do not use a damaged charging cable, USB adapter, battery, or connector.
- The battery and charging cable may become warm during charging. This is normal. Do not cover them during charging.
- Disconnect the charging cable after charging is complete.
- Recharge the battery promptly after it is discharged.
- If the product will not be used for a long period, recharge the battery at least once every month to help maintain battery performance.
- Never short-circuit the battery terminals or electrical connections.
- Keep children away from the battery and charging components.
- For best charging performance, a 5V DC USB power adapter with an output current of 2A or higher is recommended.

Safety Notice

How to Stop the Vehicle

- This product does not have a brake.
- Pressing the foot pedal will power the vehicle.
- Releasing the foot pedal will stop motor power, but the vehicle will not stop immediately.
- The vehicle may continue to roll or move for a short distance after the foot pedal is released.
- To slow down or stop, release the foot pedal in advance and allow the vehicle to come to a gradual stop.
- An adult should assist the child when stopping, especially during first use.

Care and Maintenance

- Clean the vehicle with a soft, dry or slightly damp cloth.
- Do not wash the vehicle with water.
- Do not spray water directly onto the vehicle, control panel, charging port, battery compartment, motor, or electrical parts.
- Keep the charging port dry and clean.
- Store the vehicle indoors in a cool, dry place when not in use.
- Do not leave the vehicle outdoors for long periods.
- Keep the vehicle away from direct sunlight, rain, snow, heat sources, and open flames.

Battery Service, Disposal and Recycling

- This product contains a rechargeable lithium-ion battery.
- Do not remove or replace the battery unless instructed by customer support.
- Battery service must be performed by an adult only.
- Use only the battery pack specified or supplied by the manufacturer.
- Do not use a damaged, leaking, swollen, overheated, deformed, or modified battery.
- Do not puncture, crush, disassemble, modify, or short-circuit the battery.
- Do not dispose of the battery or product in fire.
- Do not expose the battery to water, excessive heat, direct sunlight, or open flames.
- Dispose of used batteries according to local laws and regulations.
- Do not dispose of lithium batteries with household waste where prohibited.
- Contact your local recycling center or waste disposal authority for proper battery recycling instructions.

Safety Notice

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.


This device has been evaluated to meet the general RF exposure requirements. This device can be used in portable exposure conditions without restriction.

FCC ID: 2BMPX-MO11PRO


Product Information

Model number	Momo 11 Pro
Battery	Lithium battery 11.1v 2500mAh
Material	PP、ABS、PU
Suitable age	More than 36 months
Load capacity	Max 150 lbs
Size of car	76 X 34 X 41.5 cm
Speed	1.7~4 mph
Battery life	60~120 minutes (The battery life will vary due to changes in weight and environment, please refer to the actual situation)
Charging time	3~4 hours (The product comes with a USB charging cable, please bring your own qualified adapter)
Charging mode	USB charging cable Charging Input: 5V DC, 2A min / 3A max [Please bring your own USB adapter that meets safety standards]

 
Parts List

Sequence	Part name	Picture	Quantity
1	Vehicle body		1
2	Drive device		1
3	Square tube		1
	Bolt-Nut-Washer (Installed on the square pipe)		4
4	Steering wheel		1
5	Mop components		1
6	USB charging cable		1
7	Instruction manual		1

Parts Diagram


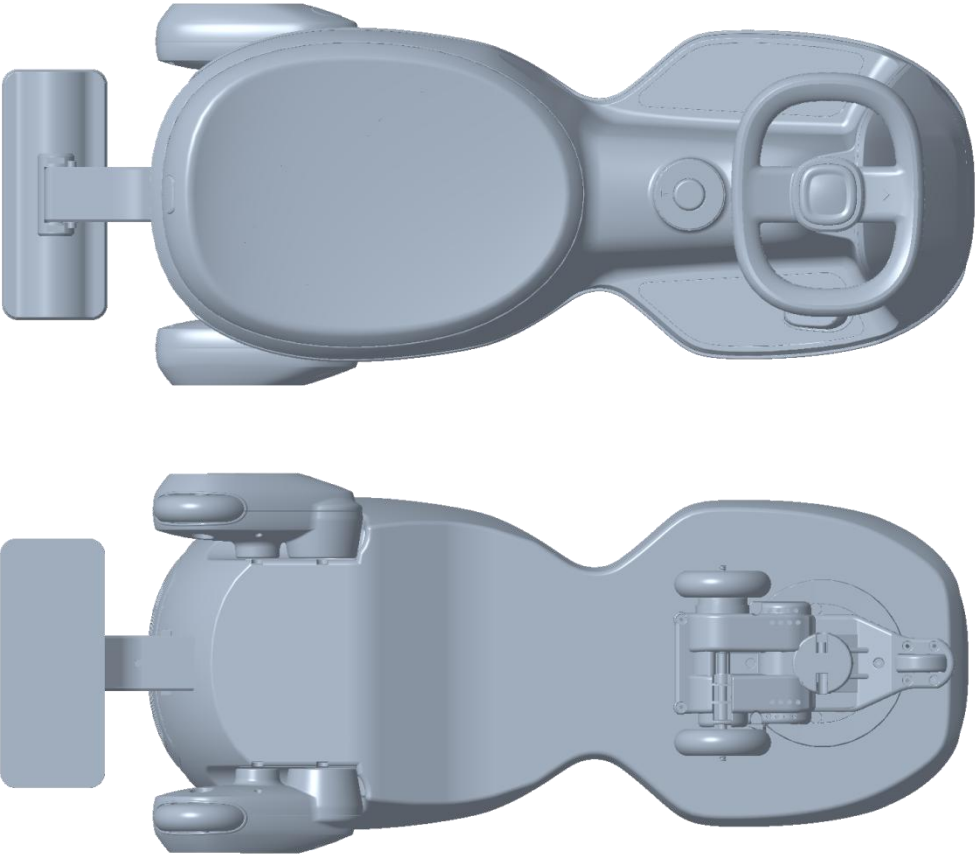


Parts Diagram

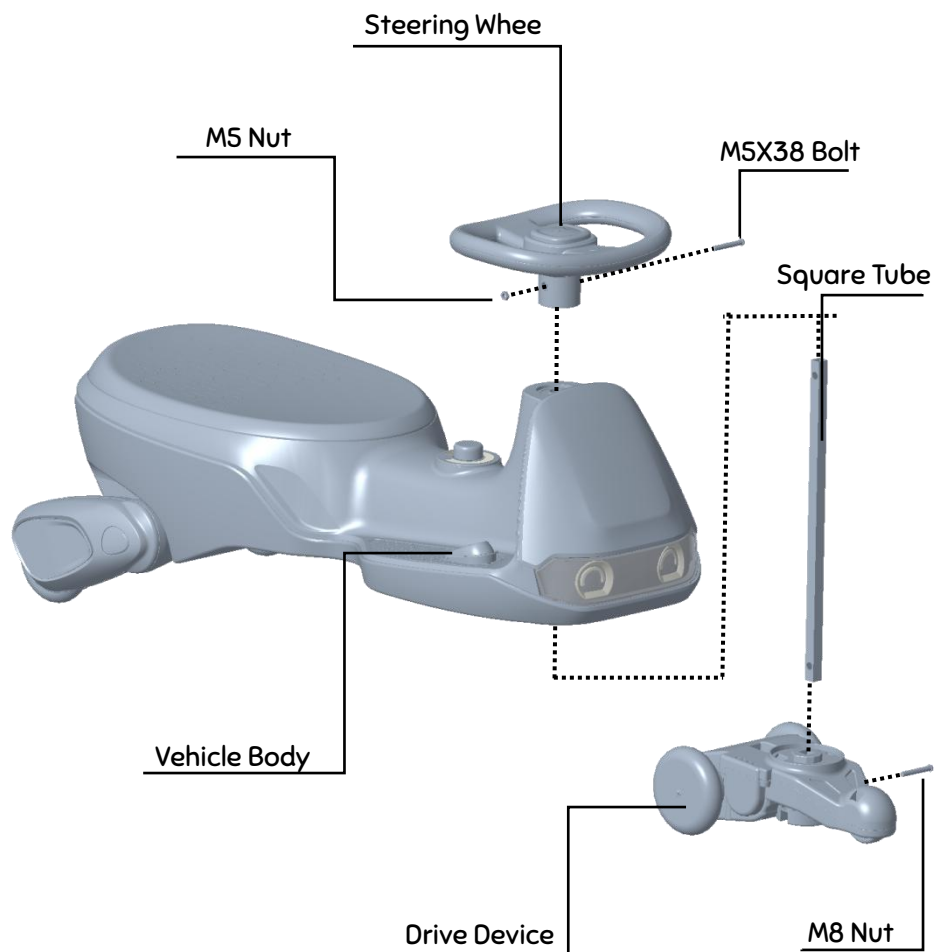

Assembly Step



1

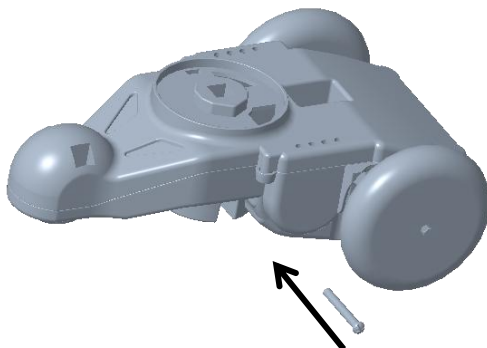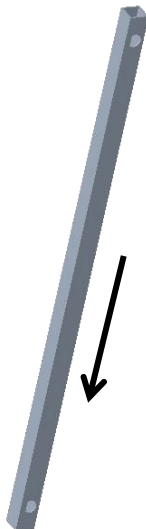

Align the square tube with the square notch on top of the Drive device and insert it. Take the included M5 bolt, use a screwdriver to tighten this bolt with the pre-installed nut on the Drive device, thereby securing the square tube to the Drive device.

Assembly Step



2

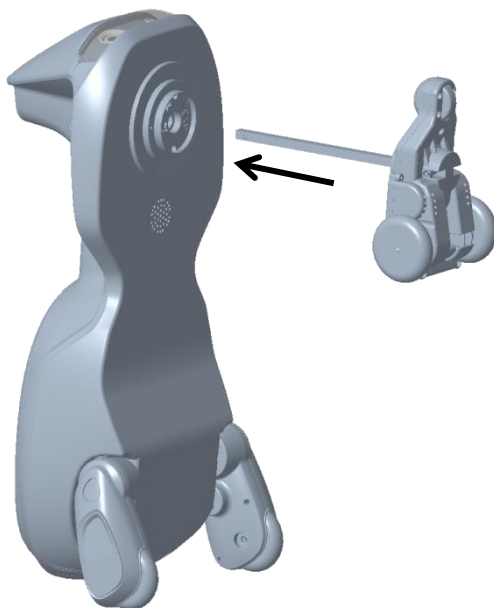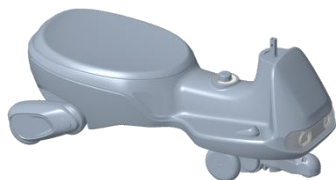

Pass the square tube that has been fixed to the Drive device through the circular hole in the bottom of the vehicle, and rotate the Drive device until it aligns with the direction shown in the diagram.

Assembly Step

3

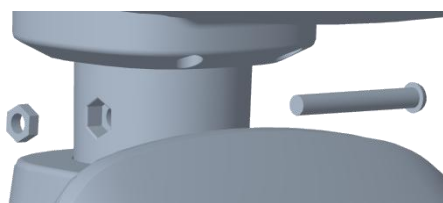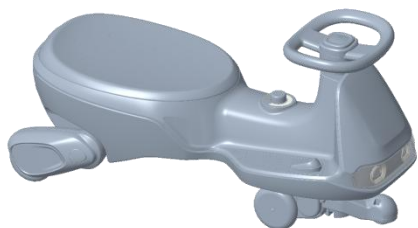

Insert the steering wheel into the square tube in the direction shown in the diagram (with the steering wheel arrow pointing toward the front of the vehicle). Use the included M5 bolt and nut to secure the steering wheel to the square tube (please place the M5 nut in the corresponding hexagonal groove).


Instructions For Use

Start the vehicle:

Long press the switch for 2 seconds in the off state. When the vehicle makes a start sound and the screen displays, it means that the vehicle is on normally.

Turn off the vehicle:

In the vehicle starting state, long press the switch for 2 seconds, the screen will be turned off, the vehicle will make a shutdown sound, then the vehicle has been closed.

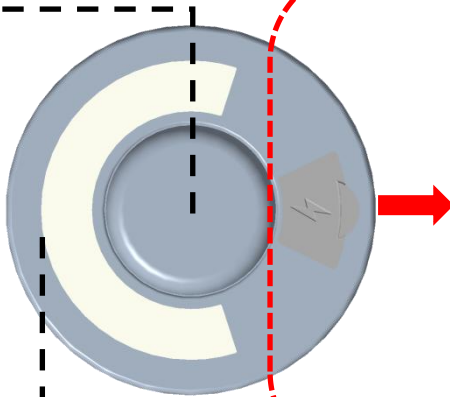

Charging Type C port

After lifting the dustproof silicone cover, you can use the complimentary USB TypeC charging cable to charge, please bring your own adapter that meets the safety specifications


Lighting effects:



Lighting status when
fully charged



Lighting status in low
battery

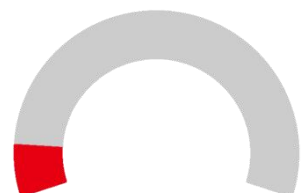

Lighting status when the
battery is about to run out

Instructions For Use

Bluetooth connection:

After powering on, Bluetooth will turn on automatically. Use your device to search for the Bluetooth name: “6KU Momo 11 Pro”. Once connected, you can play audio from your device. Each time the device is powered on, it will automatically reconnect to the last paired Bluetooth device. If your device fails to detect or connect to the Bluetooth, please check if another device is already connected, or restart the vehicle.

Adjust the volume:



Increase the volume:


When playing Bluetooth music, rotating the knob clockwise can increase the playback volume, and the light will display blue. After adjustment, the light will switch to the battery level display.



Decrease the volume:

When playing Bluetooth music, rotating the knob counterclockwise can reduce the playback volume, and the light will display blue. After adjustment, the light will switch to the battery level display.

Speed adjustment:


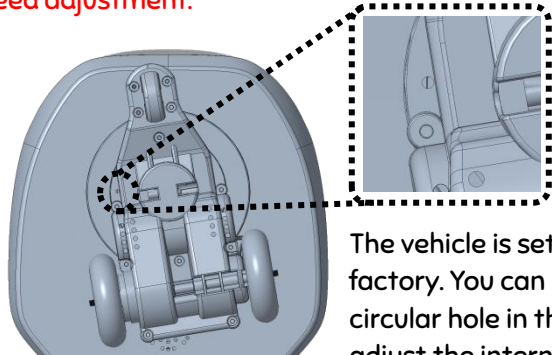


The vehicle is set to high speed by default at the factory. You can use a tool to reach into the circular hole in the bottom of the vehicle and adjust the internal switch to the low-speed gear.


Instructions For Use

Installation and use of the mop

Press and hold the quick-release button at the rear of the seat, then take out the mop handle, mop head, and disposable mop cloth from the storage compartment under the seat.

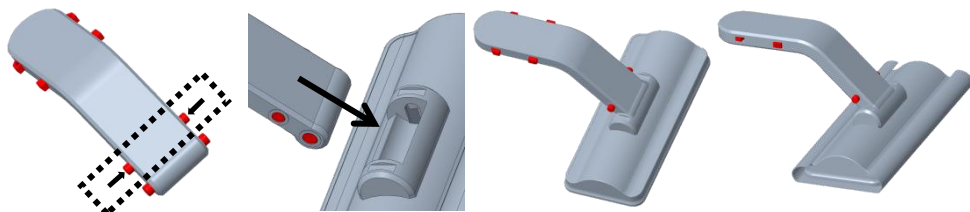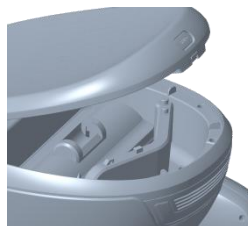

Press the cylindrical button on the mop handle in with your hand, insert the mop into the circular slot of the mop head, then release the cylindrical button to secure the mop handle and the mop head. Please ensure they are firmly fixed before use. Lay the disposable mop cloth under the mop head, and press the excess part onto the hook-type hook-and-loop fastener attached to the top of the mop head.

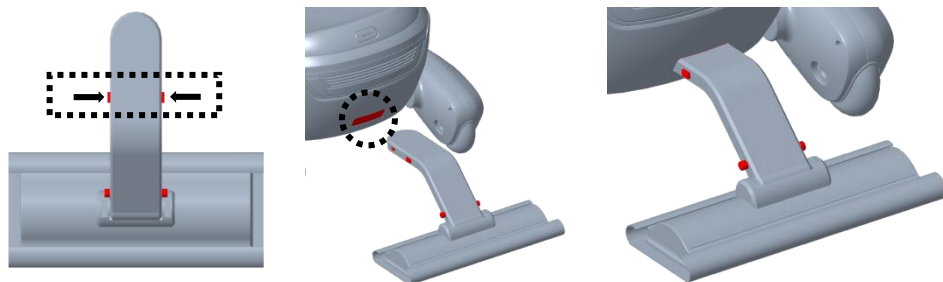

Press the square button on the mop handle in with your hand, insert the mop handle all the way into the bottom of the square slot under the vehicle body, then release the square button to secure the mop to the vehicle body. Please ensure it is firmly fixed before use. If you want to detach the mop from the vehicle body, press and hold the square button and pull the mop outwards.

Fault Analysis

Only one wheel of the product rotates	For the safety of turning, this product is designed with a single-sided driving wheel, and the other wheels are auxiliary wheels.
The product fails to power on	Please open the seat and check if the battery is connected.
Charging time is too slow	Please check if the output current of the charger being used is only 1A. You can use a USB adapter with an output current of up to 3A.

www.6ku.com

support@6ku.com

METASEE LLC

12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203

Made in China