


AI Smart Alarm

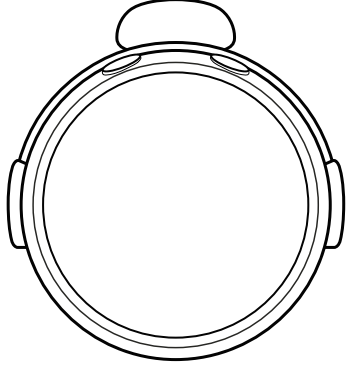

User Guide

User Instructions:

1. Disassembly and Modification Prohibition: This device is constructed with high-precision components. It is strictly forbidden for users to disassemble, repair, modify, or subject it to heavy impacts, as this may cause damage. In case of device malfunction, please promptly contact the after-sales service center for professional repair.

2. Appropriate Usage and Storage Environment: Avoid using or storing the device in environments with high temperature, high pressure, strong magnetic fields, excessive dust, or high humidity. Additionally, refrain from exposing it to direct sunlight or immersing it in water. Do not throw or subject the device to violent vibrations to prevent damage to its internal components.

3. Proper Disposal of Packaging Materials: All packaging materials, including tape, locks, plastic sheets, binding wires, and labels, are not part of the product and are not suitable for children's play. For the safety of your children, please ensure the proper disposal of these packaging materials.

4. Device Maintenance and Care Guidelines:

• Refrain from scratching the device surface with sharp objects. To safeguard the device, it is advisable to place it back in the original packaging after use.

• If dust accumulates on the device surface or water splashes onto it, gently wipe with a soft, dry cloth to maintain cleanliness. Do not use volatile organic solvents such as gasoline or thinner to clean the device surface.

• When the device is not in use for an extended period, please disconnect the power supply.

• Before and after using the device, carefully inspect each interface for foreign objects or damage. If foreign objects are detected, remove them promptly. In case of damage, consult the manufacturer for repair instructions.

Charger Usage Instructions:

1. The charger is designed only for powering the device.

2. It is strictly prohibited for children under 3 years old to use the charger.

3. Do not allow children to insert or unplug the power plug independently.

4. The device must be used with a recommended charger that complies with national standards.

5. When cleaning the device with cleaning fluid, ensure that it is disconnected from the charger.

6. Please use a safety-isolated charger for charging.

7. Regularly check the wires, plugs, casing, and other components of the device for any signs of damage. If damage is detected, stop using the device until it has been repaired.

Tips: Based on the R & D concept of this product, our company places a high emphasis on user safety. Therefore, we would like to draw your attention to the following points:

1. This product will not function while it is being charged.


2. If the device fails to respond when powered on, please turn it off and charge it for at least 20 minutes before attempting to use it again.

3. When the product is charging, the red indicator light on the back will be illuminated. Once the charging is complete, the red light will turn off.

4. If the product has not been used for a long time, it is recommended to charge it once a month to ensure its normal operation and extend its service life.

Charging Method: Please use a charger with an output of 5V - 1000MA. Connect the USB cable to the USB port of the device. The charging time typically ranges from 5 to 8 hours.

•Device Buttons

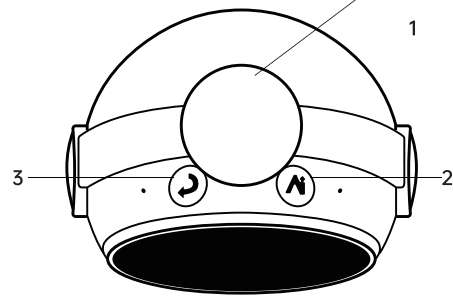

1.Knob/OK
Rotate the knob to switch focus, press to confirm.

2.Voice Chat
Tap to talk.
Wake Word: "Hello Tiny"

3.Back
Short press to return to previous page.

•Device Buttons

1.Button Guide
Rotate the Knob clockwise/counterclockwise to navigate.

clockwise/counterclockwise

Press

2. Connect to Network
Before use, connect the device to a Wi-Fi network.
Note: Do not select Wi-Fi networks with "5G" in the name—5G networks are currently not supported.

Connect to network

Test 1
Test 2
Test 3

Enter password

anybook

Test 1
Test 2
Test 3

•How to Set an Alarm

1. Set via Voice
When the device is active, say "Hey Tiny" followed by your alarm request.
Examples:
"Hey Tiny, wake me up at 8 AM tomorrow."
"Hey Tiny, remind me to go running in 10 minutes."
"

2. Manual Setup via Buttons
Press the [Knob] to enter menu, select [Alarm], then follow on-screen instructions to set alarm time, repeat schedule and region. Press [Confirm] to complete.

Alarm Time

22 : 00

Back

Adjust necessary

08:00
Workdays Wake Up

18:30

Back

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
—Consult the dealer or an experienced radio/TV technician for help.

Note: The Gsmnet is not responsible for any charges or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

•How to Use Pomodoro Timer

About Pomodoro Timer

1.By default, each Pomodoro session lasts 25 minutes. Rotate the [Knob] to customize the duration.

2.During a Pomodoro session:
Press the [Knob] to start/pause
Rotate the knob to navigate options
Press to toggle background music on/off

25:00
Helpful Pomodoro timer
Elapsed for 12 min

Stay Focused!

24:59

3.When a single focus session ends, it will automatically enter a short break period, during which you can relax appropriately.

Great job!
Time for a break

Break Time

04:59

•Countdown

1.Rotate the [Knob] to set duration (1-180 minutes).
2.Press [Knob] to start countdown.

01:00
Back

180:00
Reset

3. When time's up, an alarm will sound automatically.

Countdown Done!

Back

4.Voice commands: "Hello Tiny, start 2-minute countdown"

"Hello Tiny, set timer for 10 minutes"

•Stopwatch

1.The stopwatch starts from 0 by default. Press the [Knob] to begin counting up (maximum duration: 180 minutes). Upon reaching the limit, the device will automatically stop.

00:00
Back

00:07
Reset

2.Voice command examples:"Start timing..."

"Hello Tiny, start counting"

•How to Update?

After device reboot, if a new version is detected, an update prompt will automatically appear. Press the Knob to start upgrading.
Manually check for updates by going to [Settings] > [About]. If a new version is available, follow the on-screen instructions to upgrade.

About
Check for Update?
Restore Device
Firmware: V03080802.7261508
Software: V1.0.0

Check for Updates
New Version Available
V2.0.2
Back Upgrade

•How to Reset Device?

Go to [Settings] > [About], then select [Reset Device] at the bottom of the page. Confirm to begin resetting. Do not perform any operations during the reset process.

About
Check for Update?
Restore Device
Firmware: V03080802.7261508
Software: V1.0.0

Restoring, please wait...

Packaging accessories

Color box	machine	USB cable	instructions	Certificate of conformity
*1	*1	*1	*1	*1

User Name

Gender

Age

Mailing Address

Contact number

Postal Code

Purchase location

Purchase date

Product name and specifications

Dealer Signature

Sales order number

Serial No

User signature

Asphyxiation hazard - All packaging materials (such as tape, plastic bags, plastic sheets, bundling wires, labels) and small accessories inside the machine should be kept away from children under 3 years old to avoid suffocation hazards, and should be used under adult supervision.

When the ambient temperature is $\leq 0^{\circ}\text{C}$, the machine should be moved indoors and left at room temperature for 2 hours before use

INSPECT

QC02

QUALIFIED