 
 


Report

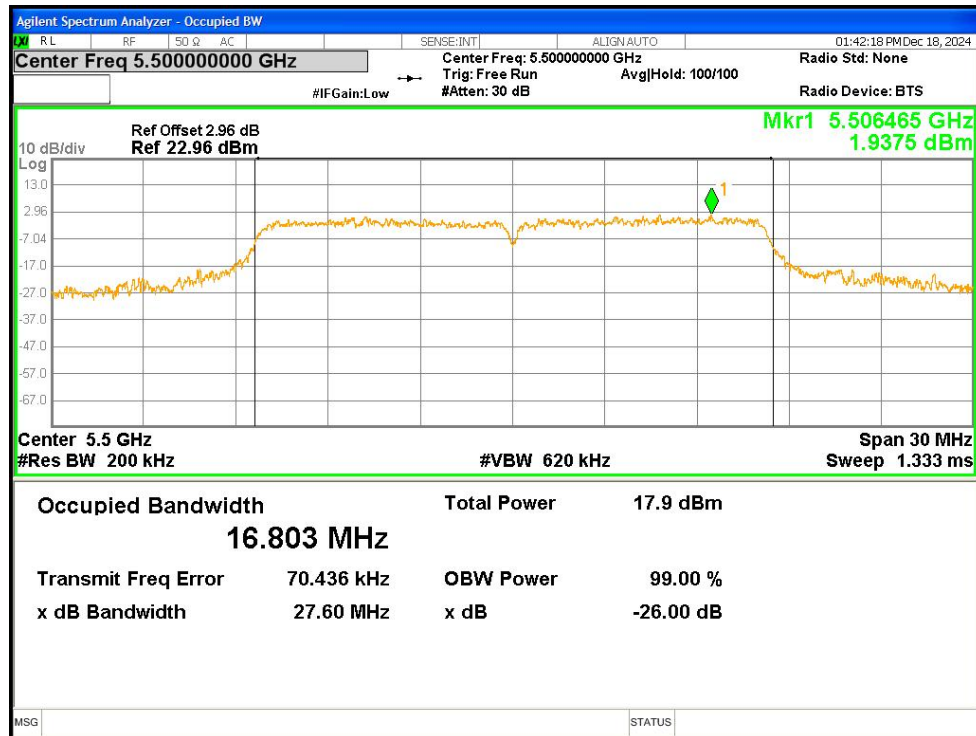 


OBW NVNT a 5500MHz Ant1

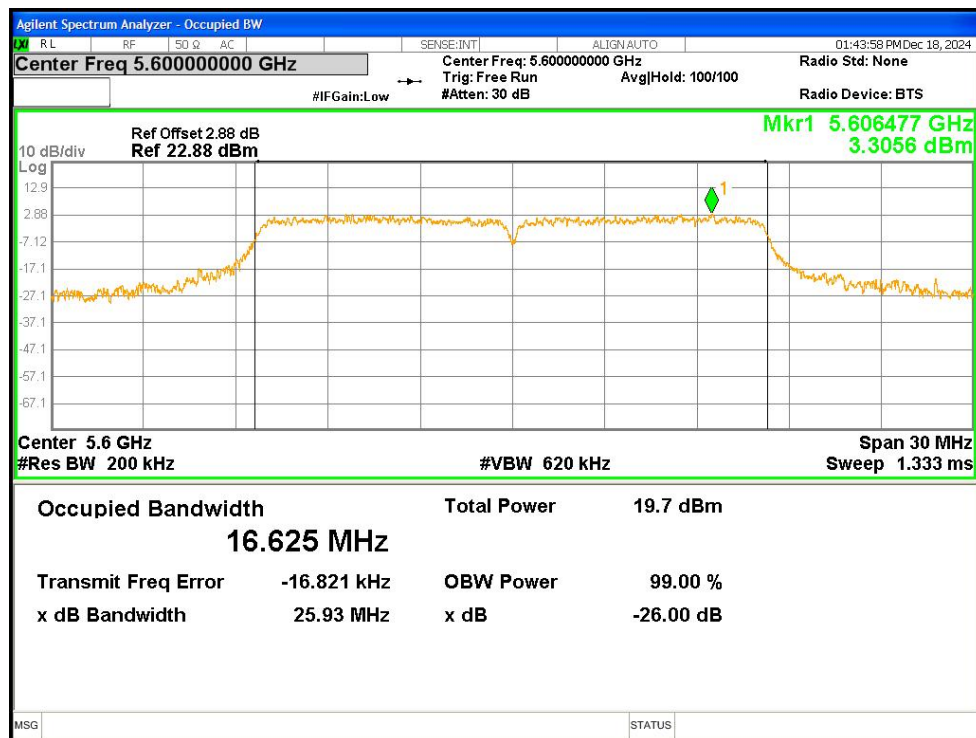 


OBW NVNT a 5600MHz Ant1

Report

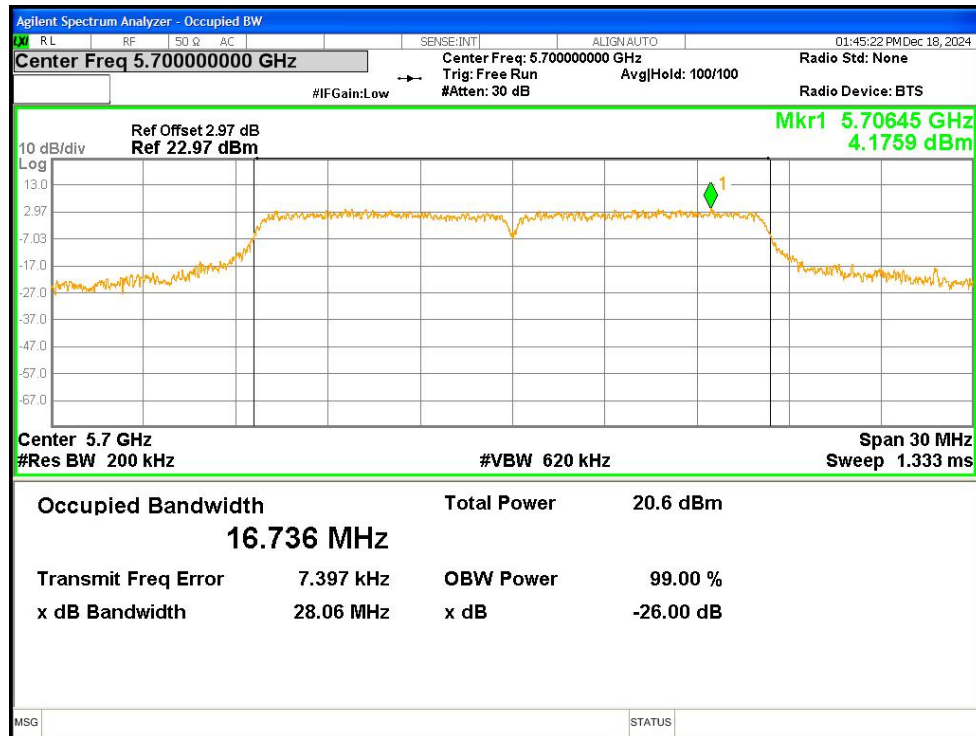 


OBW NVNT a 5700MHz Ant1

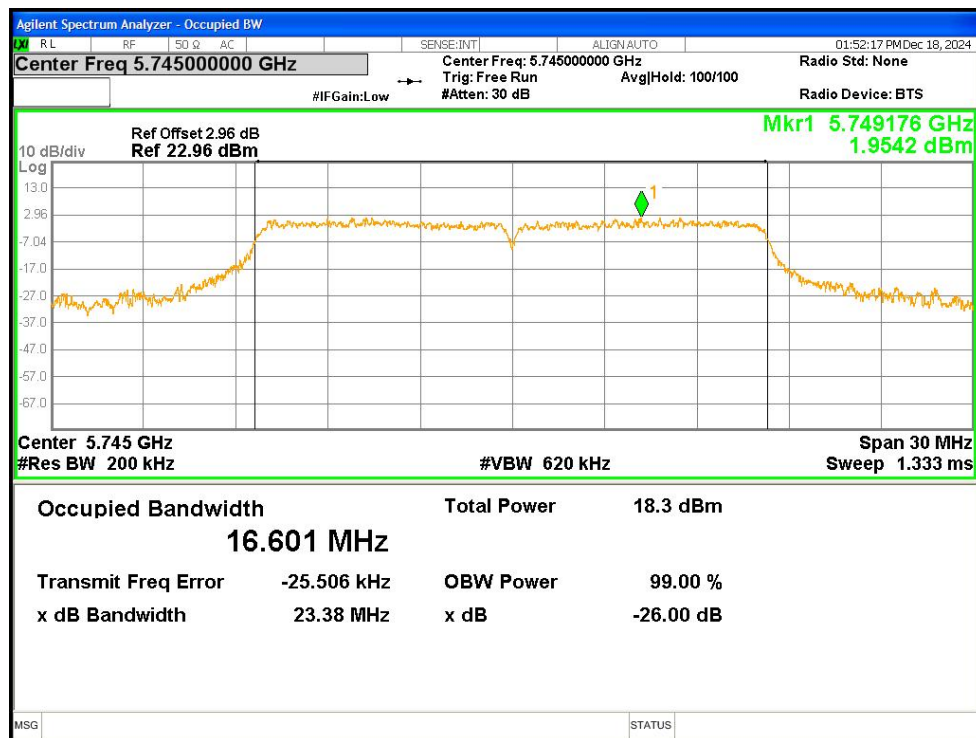 


OBW NVNT a 5745MHz Ant1

Report

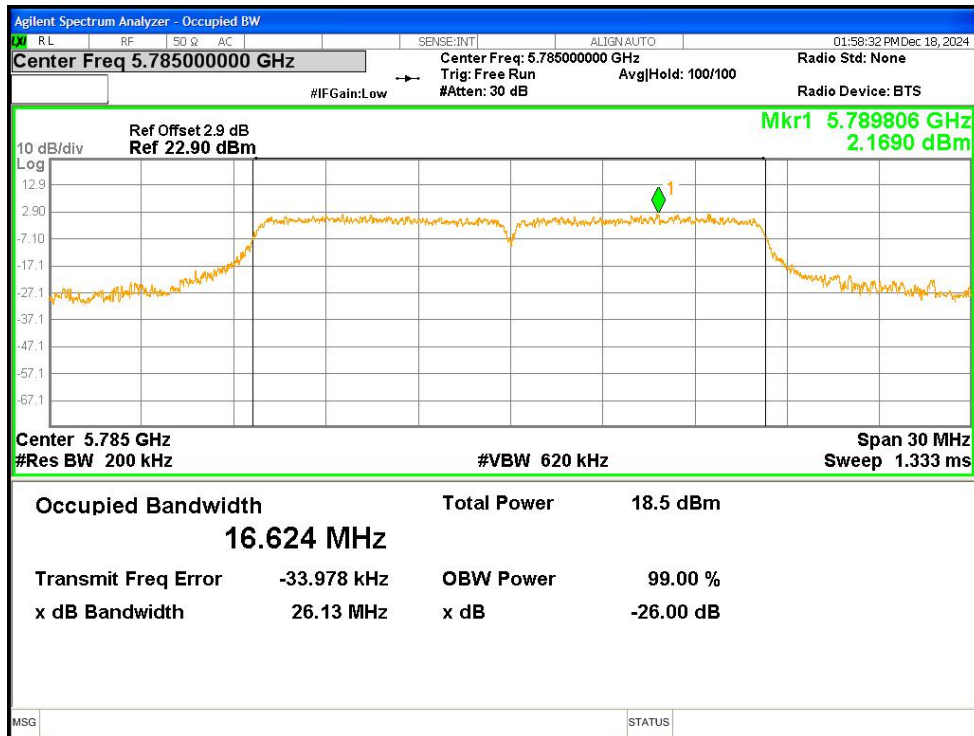 


OBW NVNT a 5785MHz Ant1

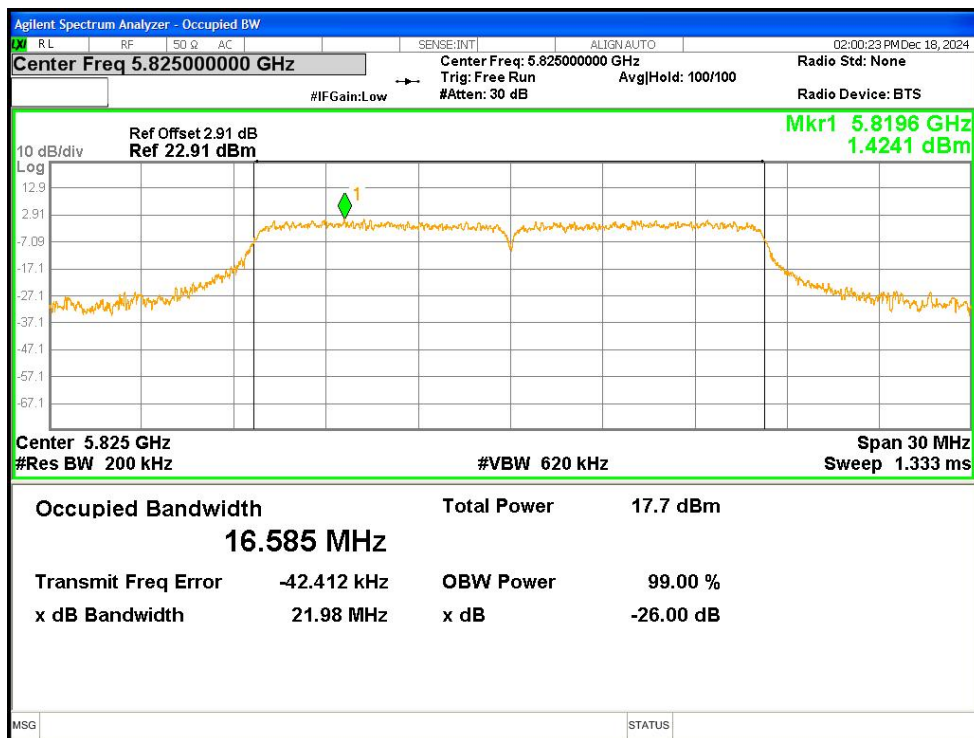 


OBW NVNT a 5825MHz Ant1

Report

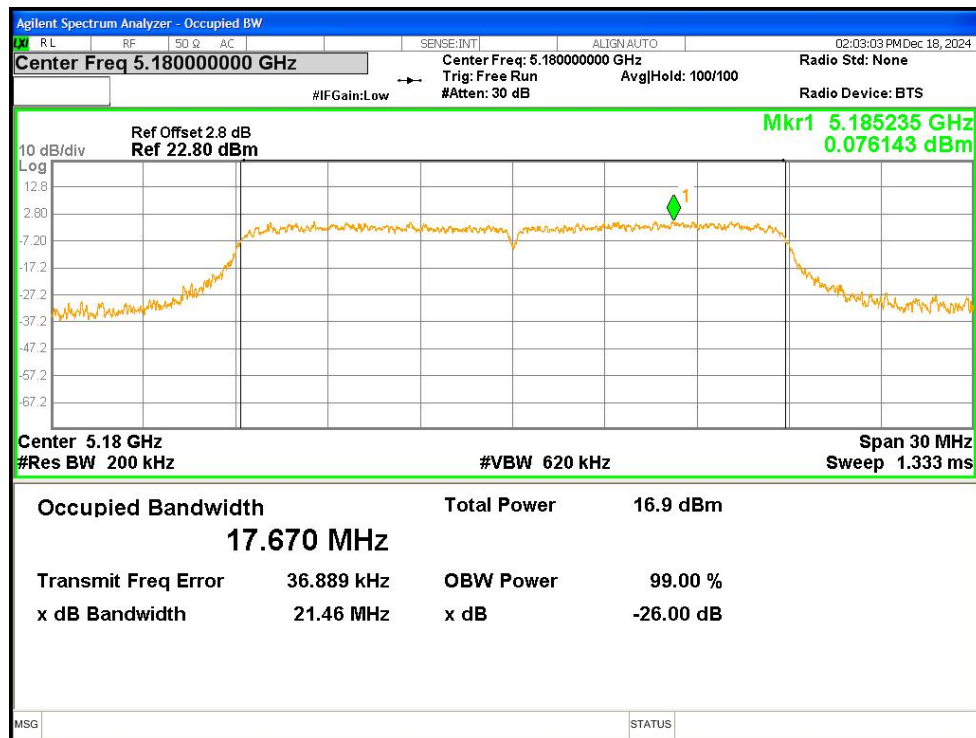 


OBW NVNT n20 5180MHz Ant1

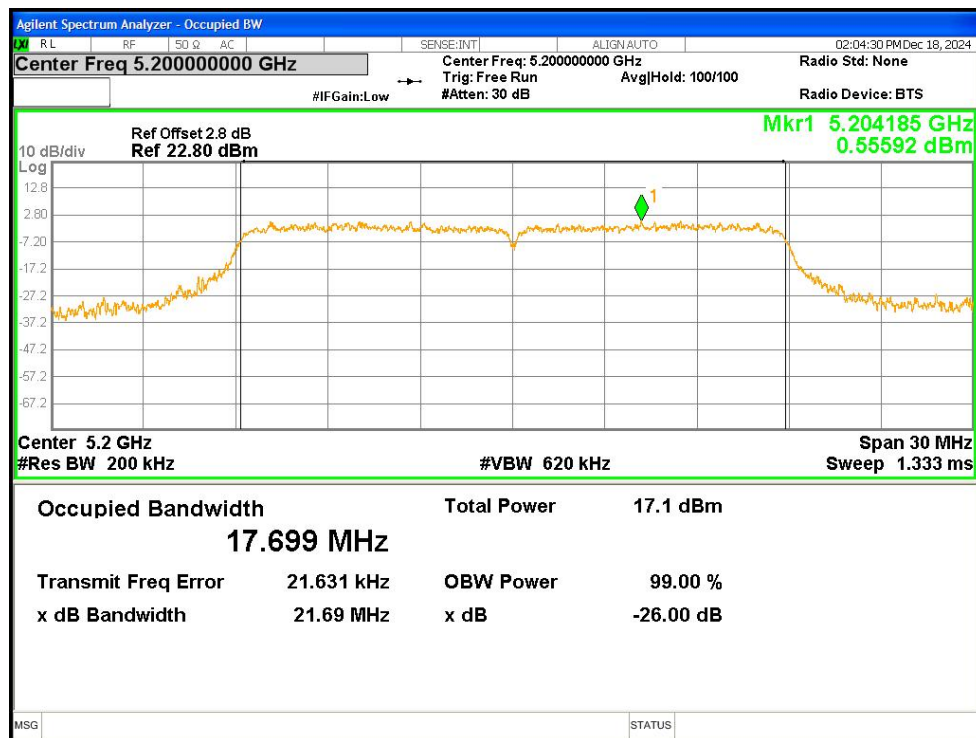 


OBW NVNT n20 5200MHz Ant1

Report

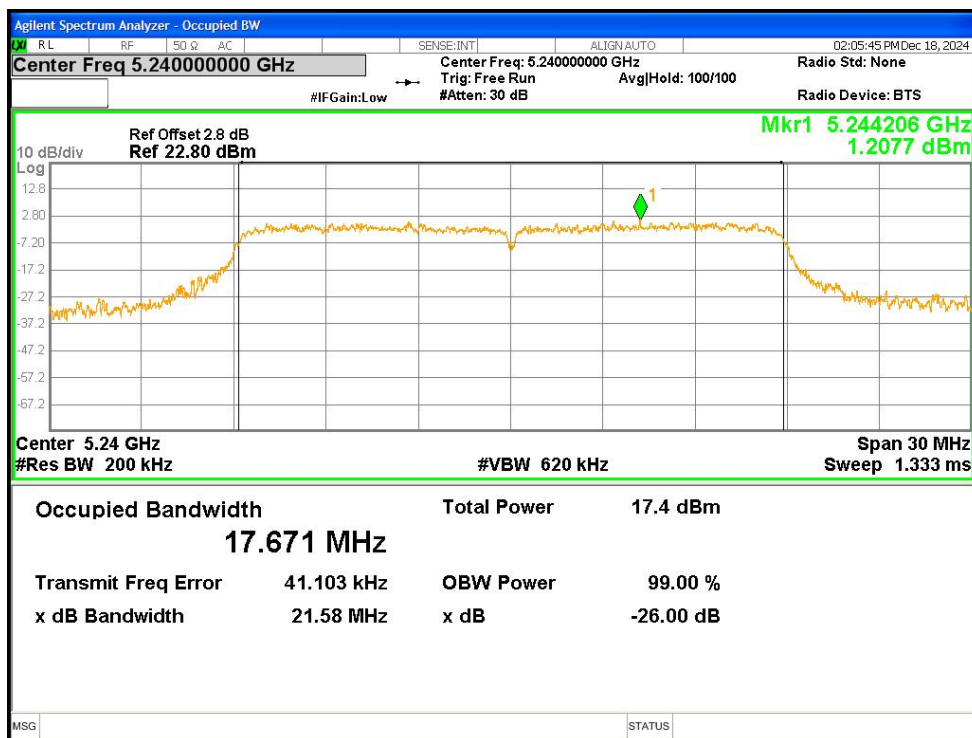 


OBW NVNT n20 5240MHz Ant1

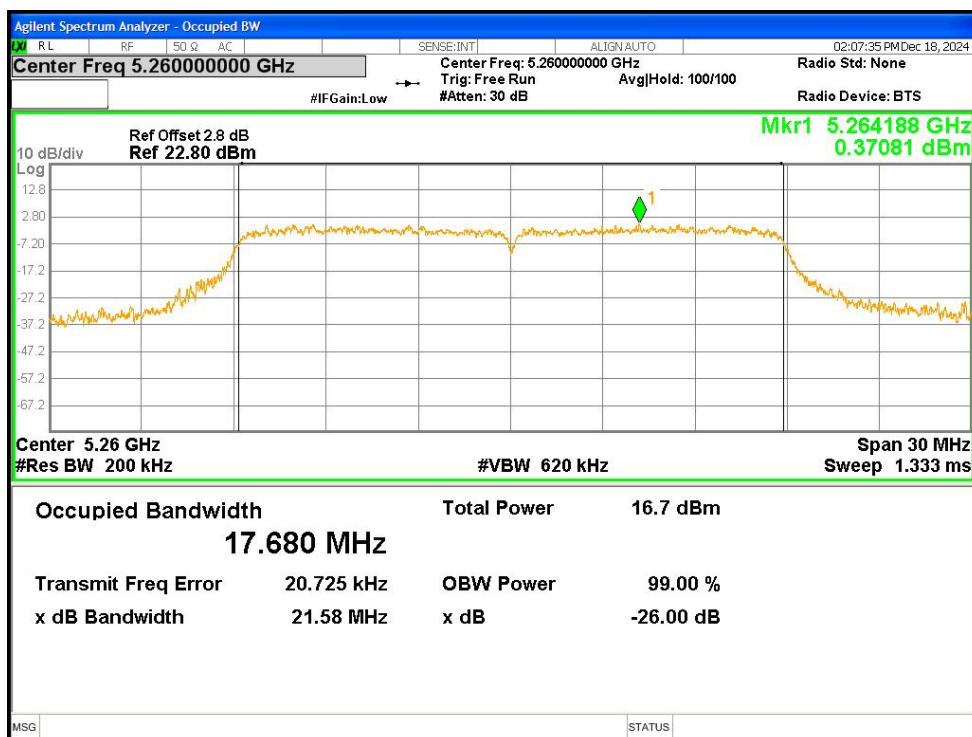 


OBW NVNT n20 5260MHz Ant1

Report

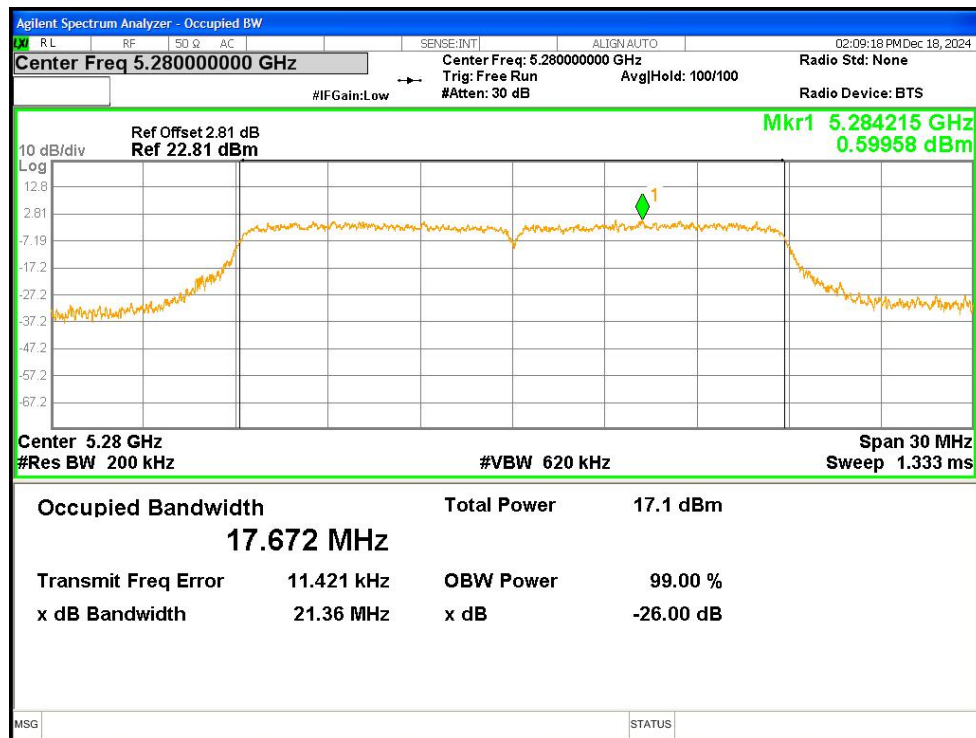 


OBW NVNT n20 5280MHz Ant1

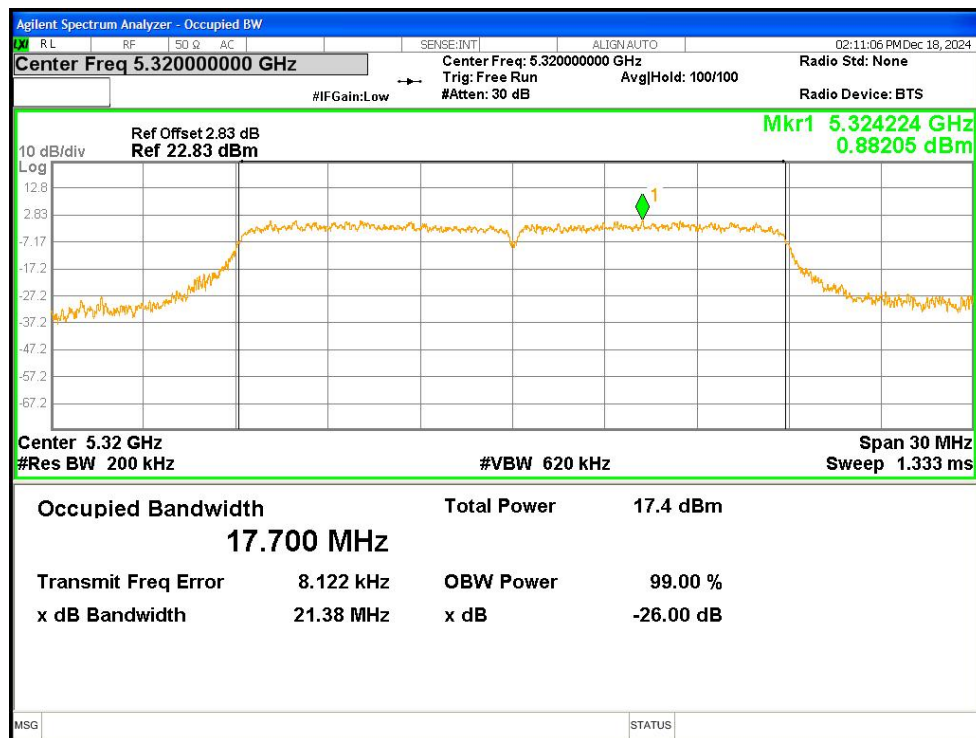 


OBW NVNT n20 5320MHz Ant1

Report

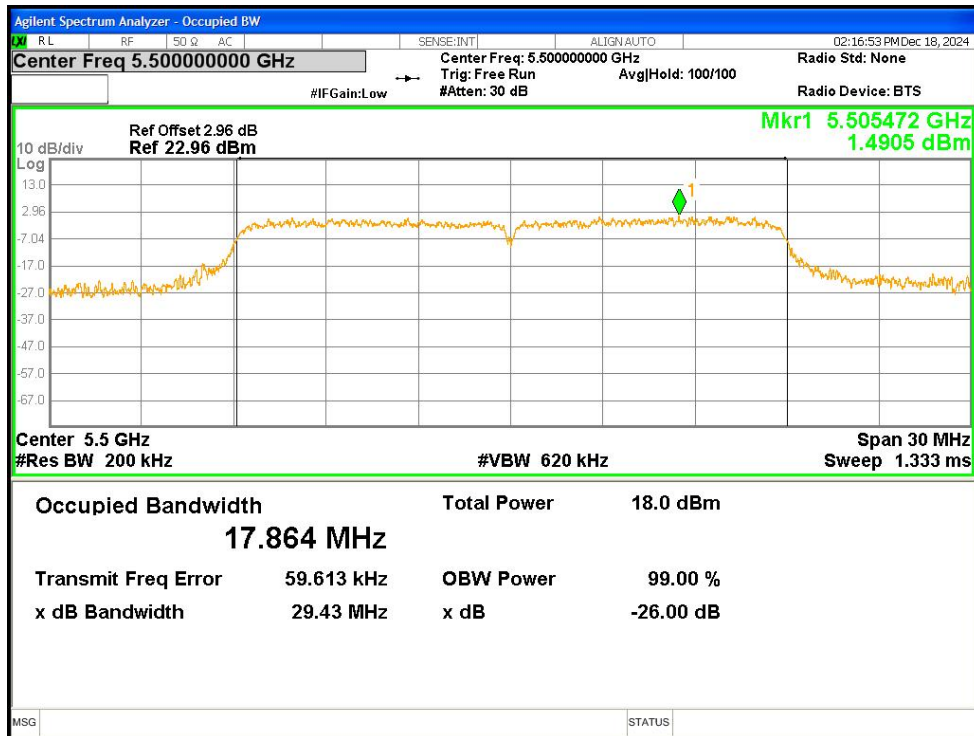 


OBW NVNT n20 5500MHz Ant1

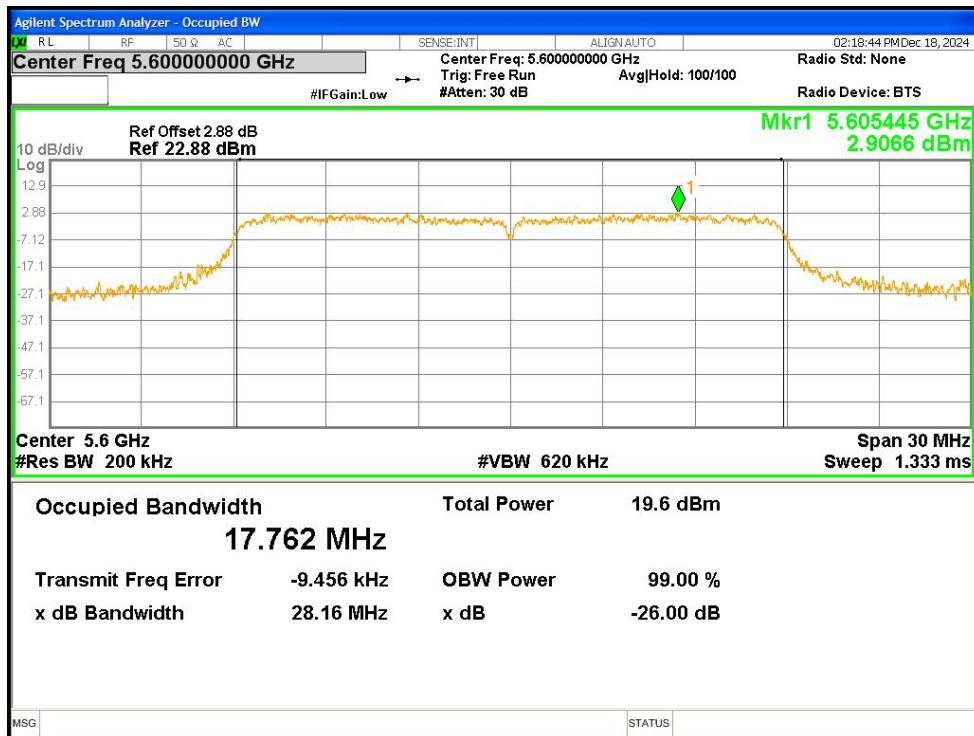 


OBW NVNT n20 5600MHz Ant1

Report

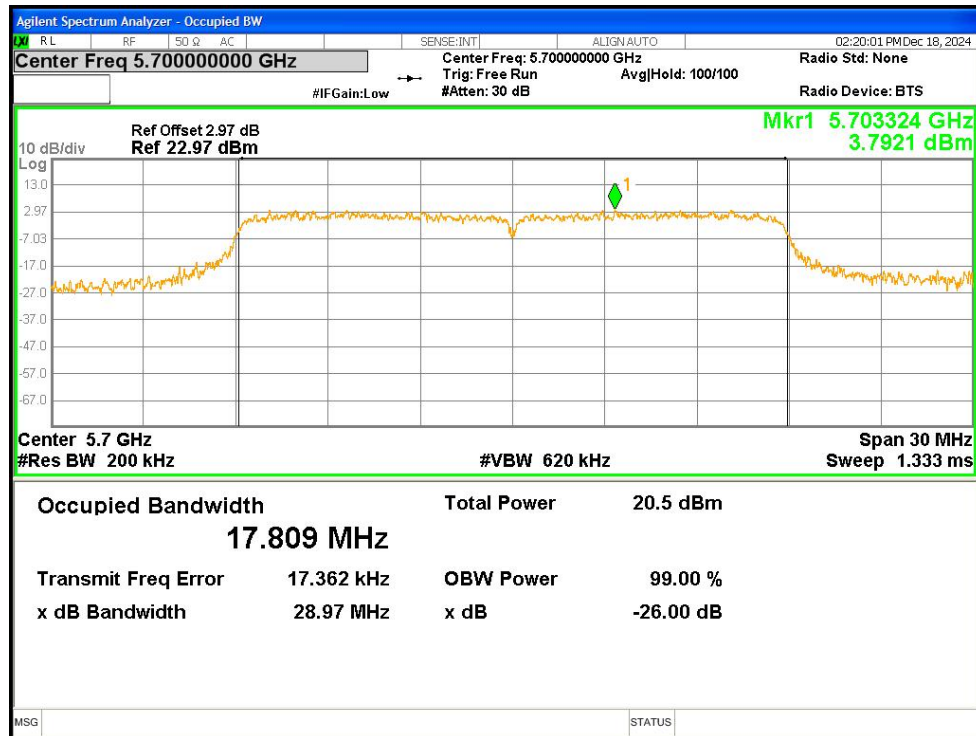 


OBW NVNT n20 5700MHz Ant1

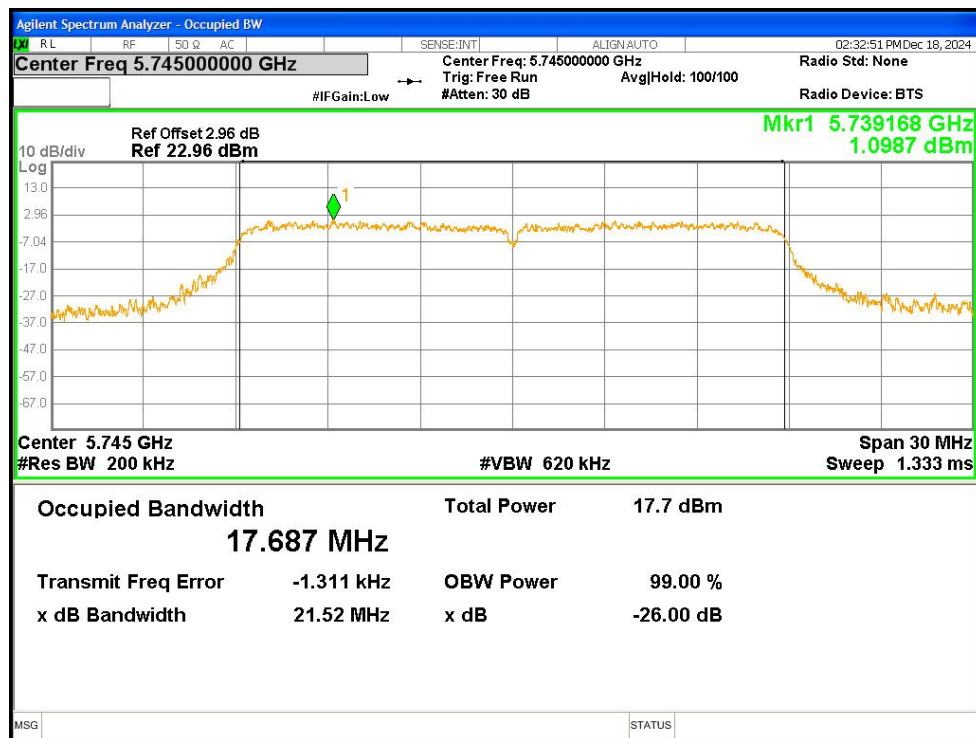 


OBW NVNT n20 5745MHz Ant1

Report

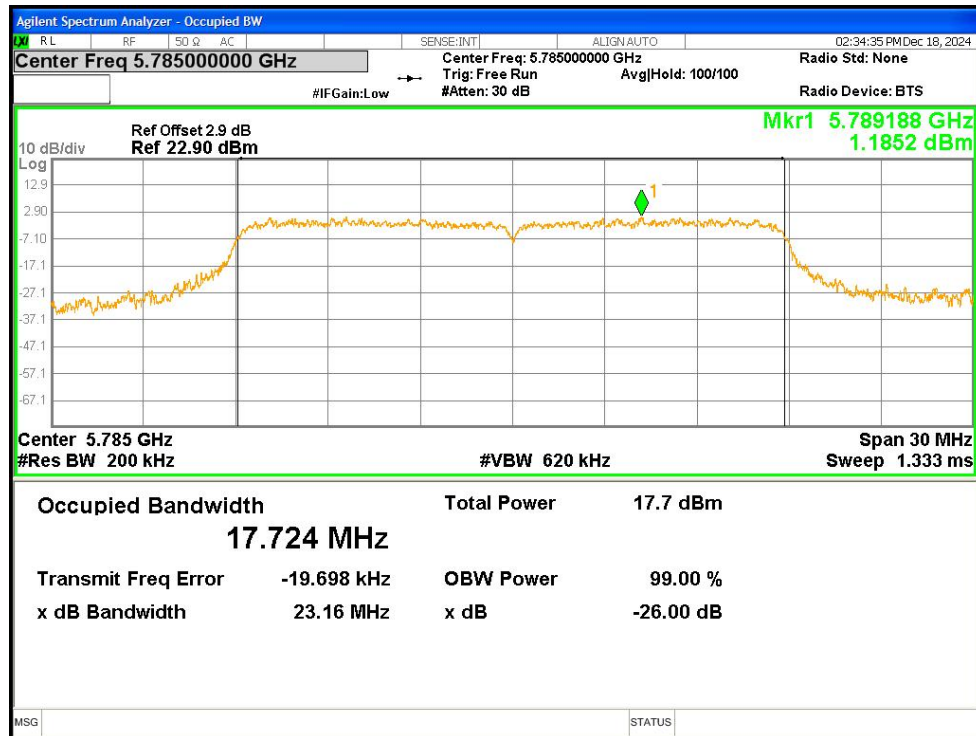 


OBW NVNT n20 5785MHz Ant1

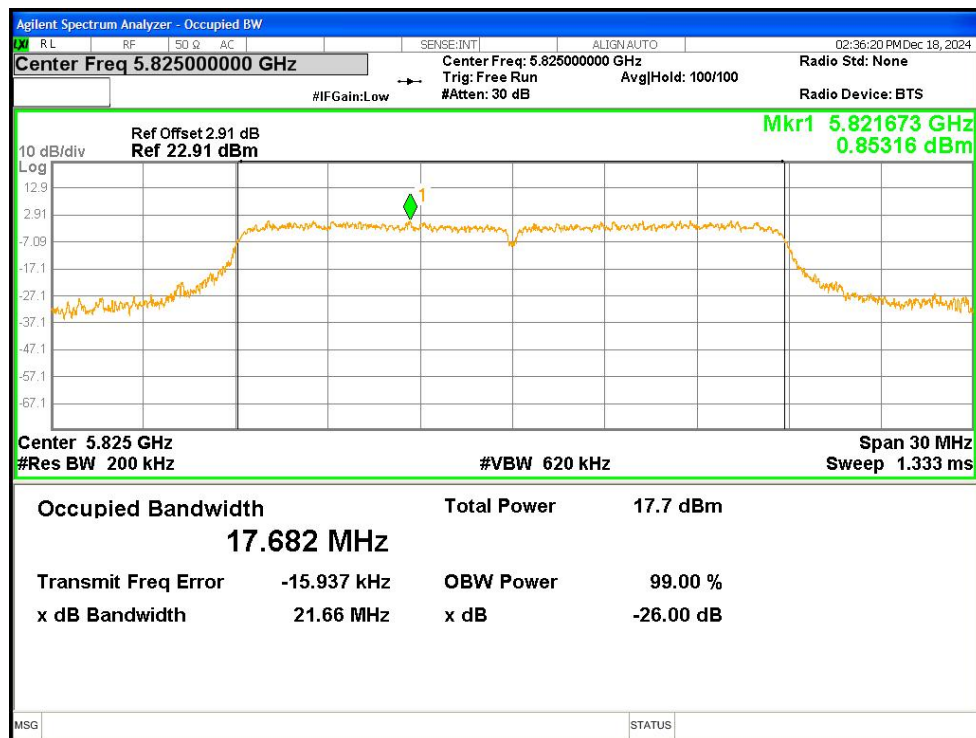 


OBW NVNT n20 5825MHz Ant1

Report

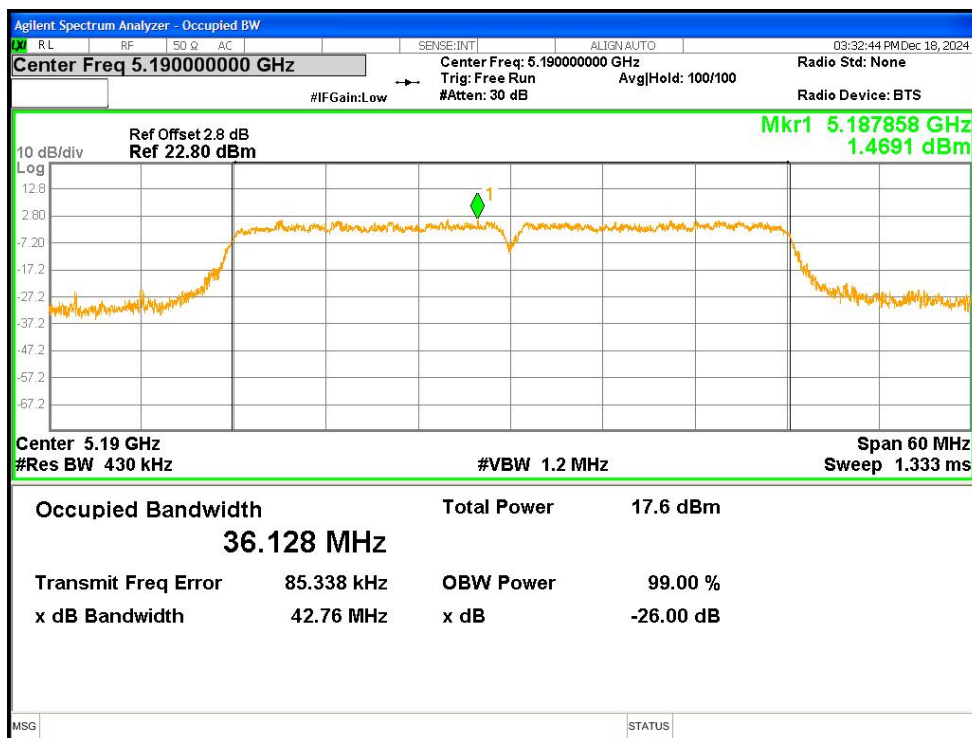 


OBW NVNT n40 5190MHz Ant1

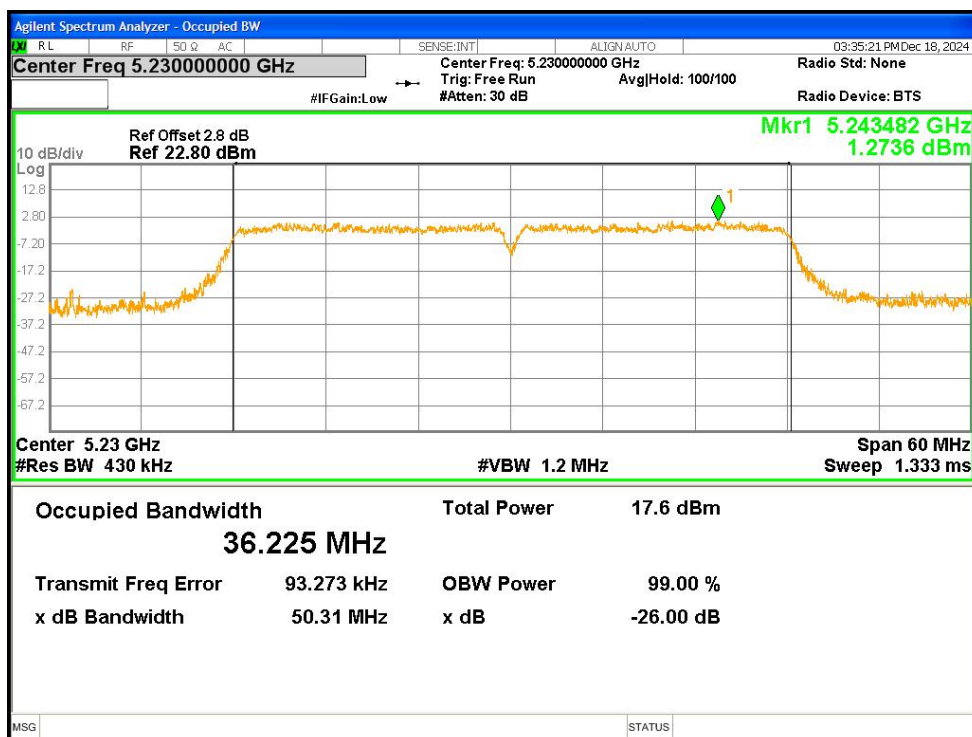 


OBW NVNT n40 5230MHz Ant1

Report

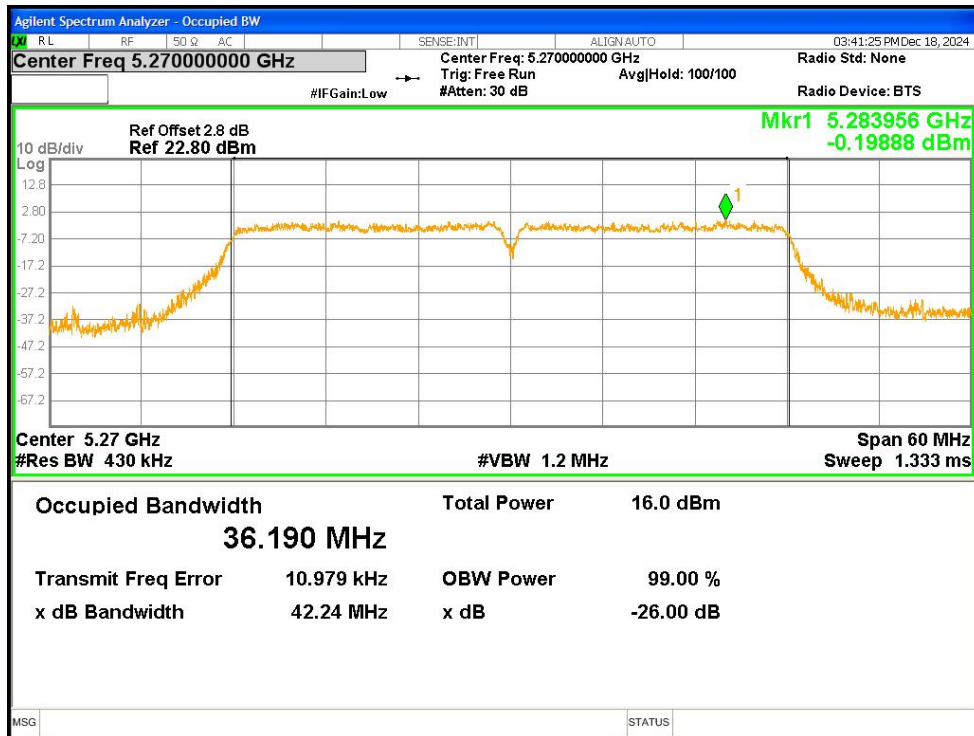 


OBW NVNT n40 5270MHz Ant1

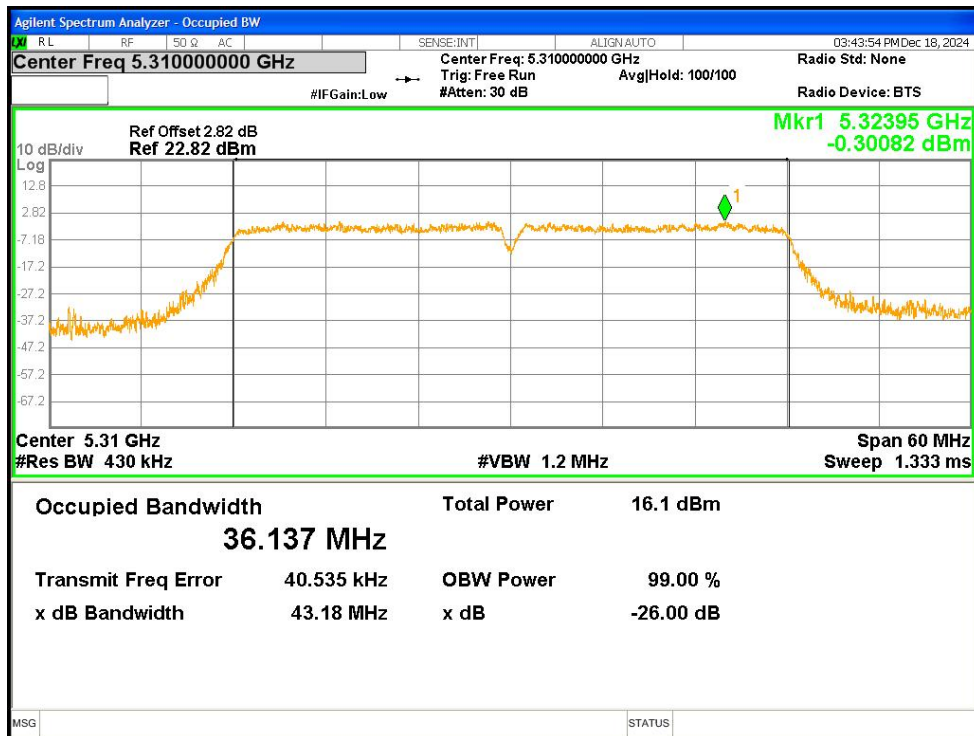 


OBW NVNT n40 5310MHz Ant1

Report

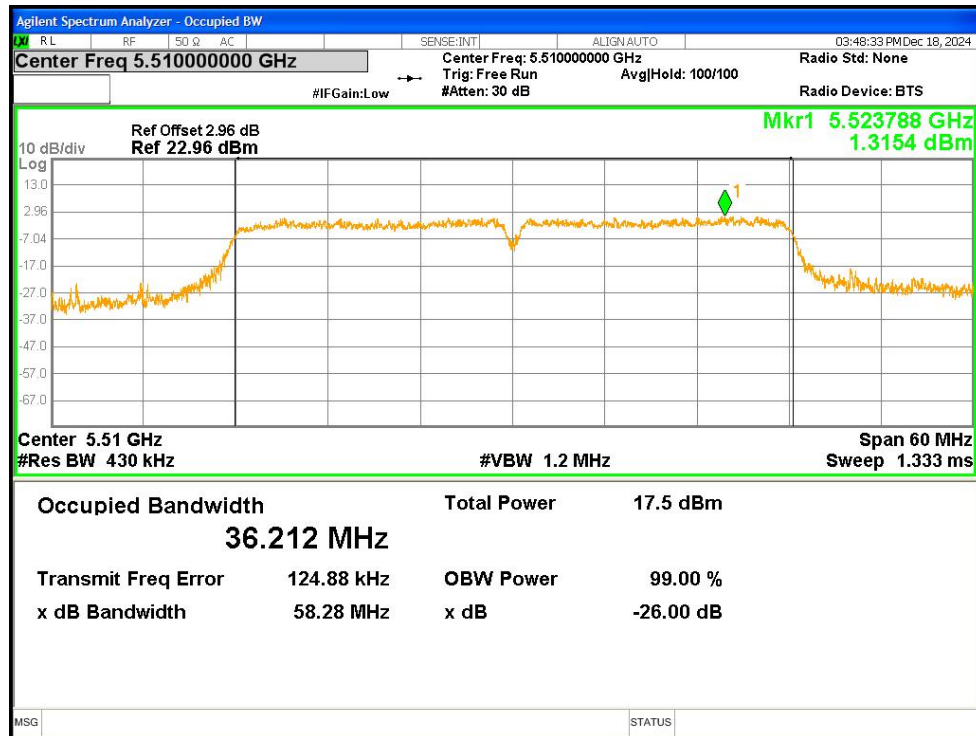 


OBW NVNT n40 5510MHz Ant1

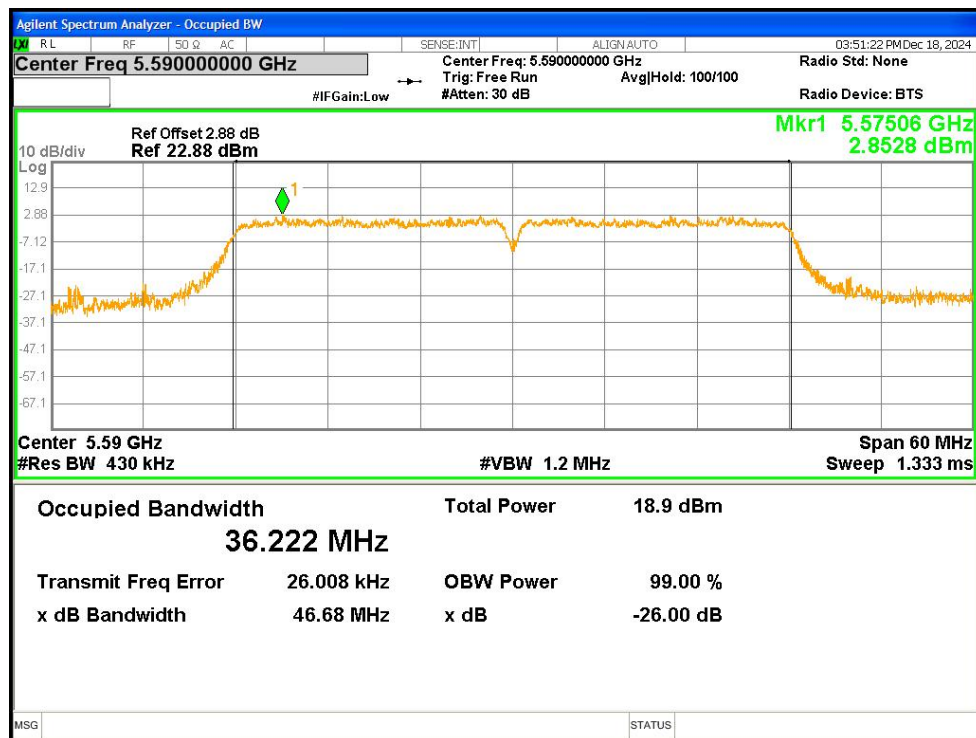 


OBW NVNT n40 5590MHz Ant1

Report

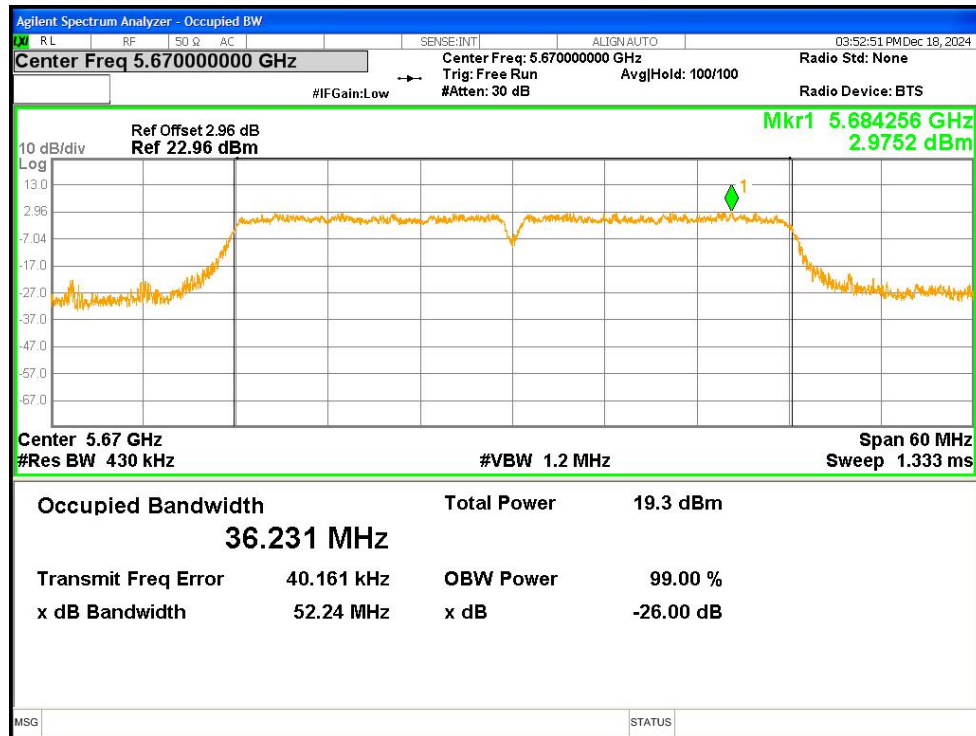 


OBW NVNT n40 5670MHz Ant1

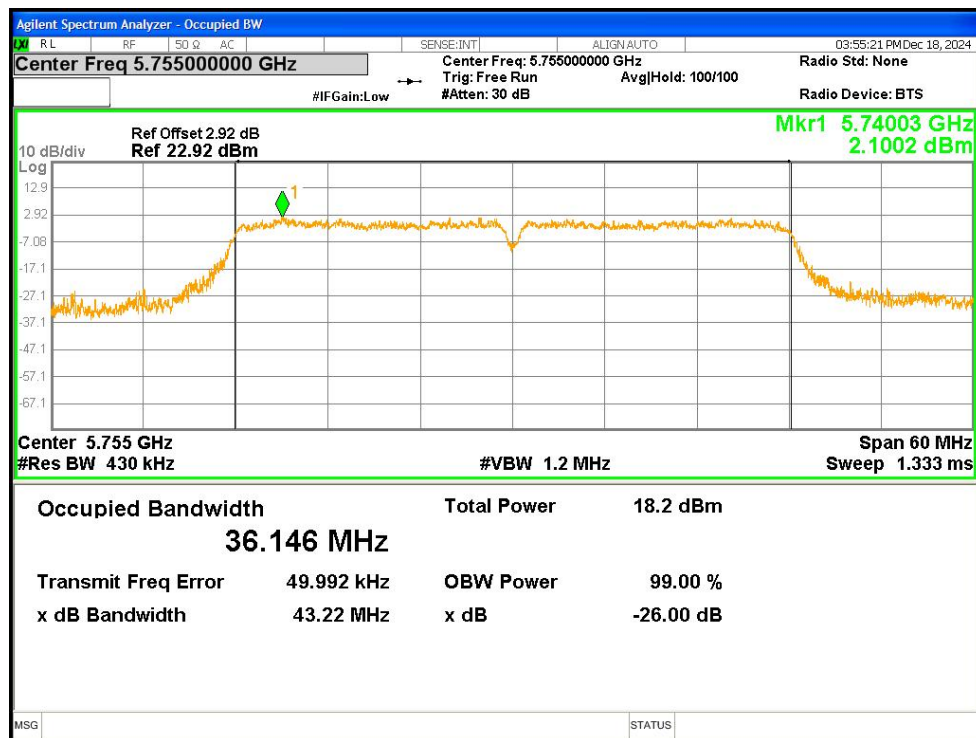 


OBW NVNT n40 5755MHz Ant1

Report

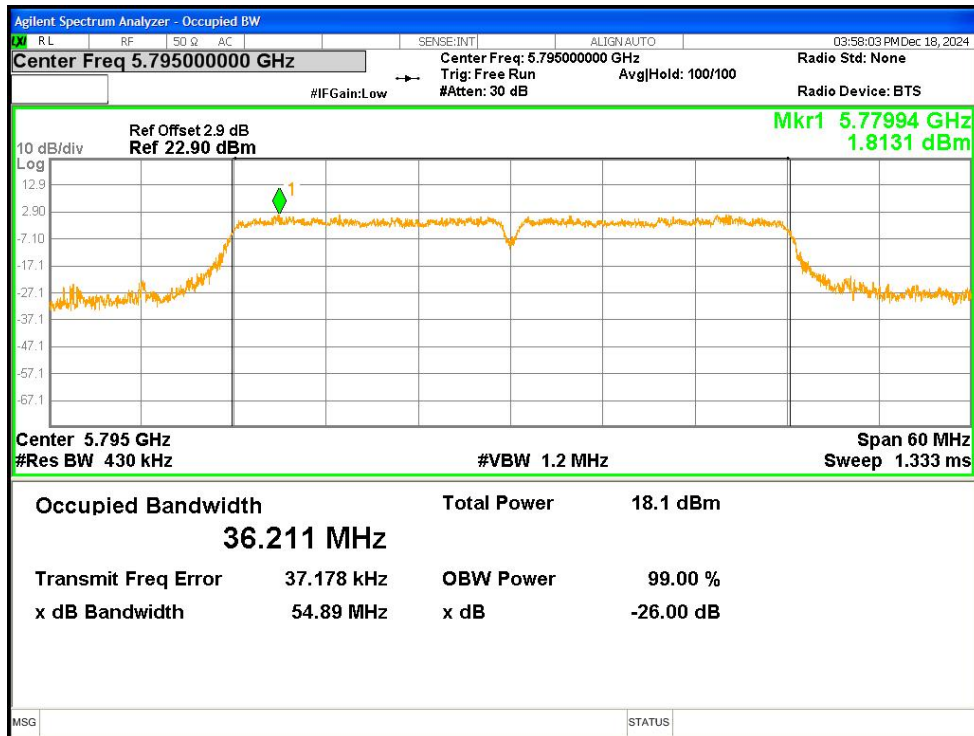 


OBW NVNT n40 5795MHz Ant1

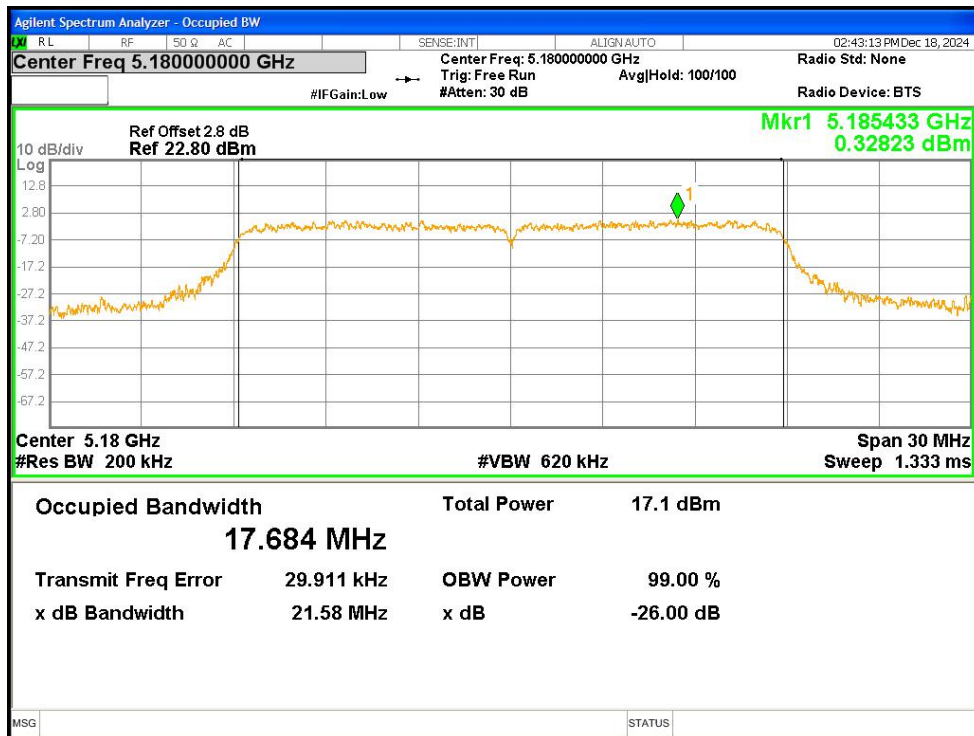 


OBW NVNT ac20 5180MHz Ant1

Report

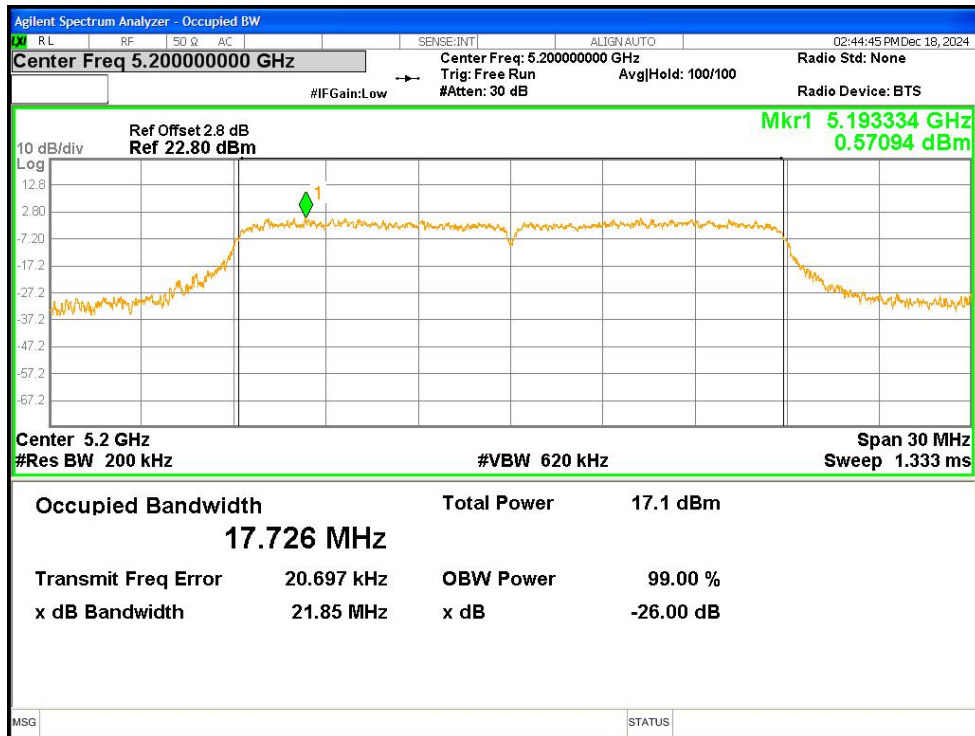 


OBW NVNT ac20 5200MHz Ant1

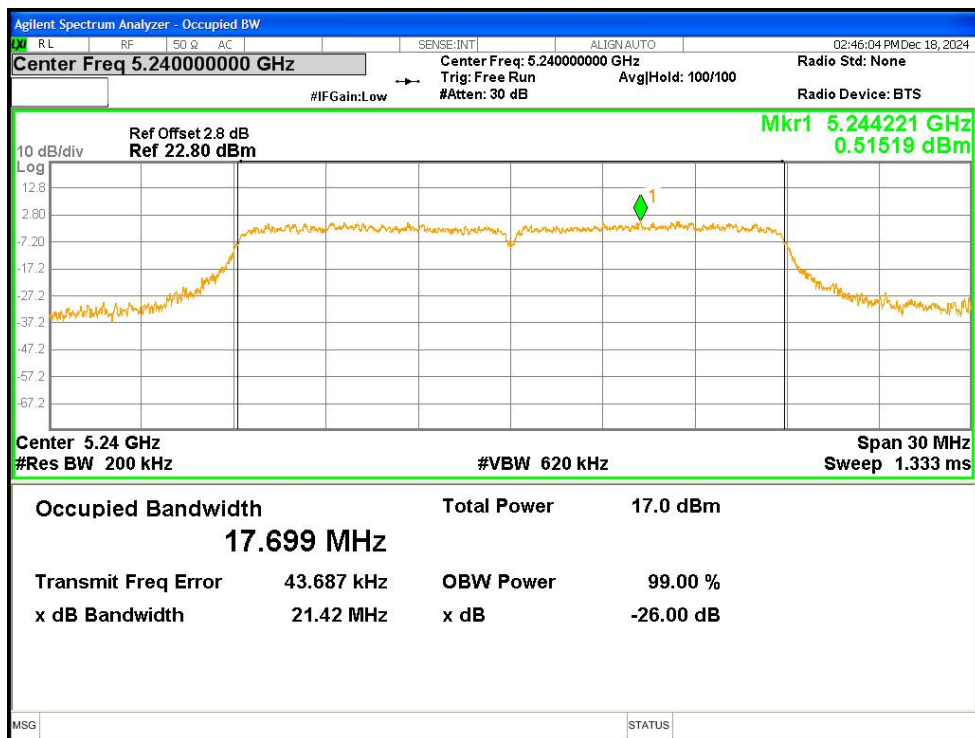 


OBW NVNT ac20 5240MHz Ant1

Report

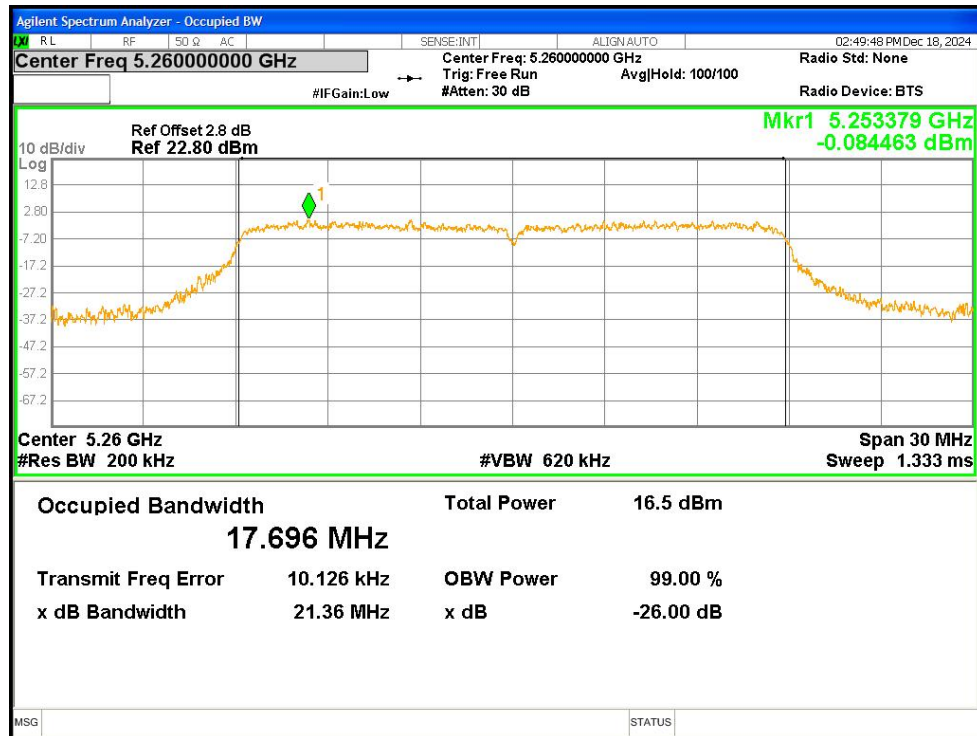 


OBW NVNT ac20 5260MHz Ant1

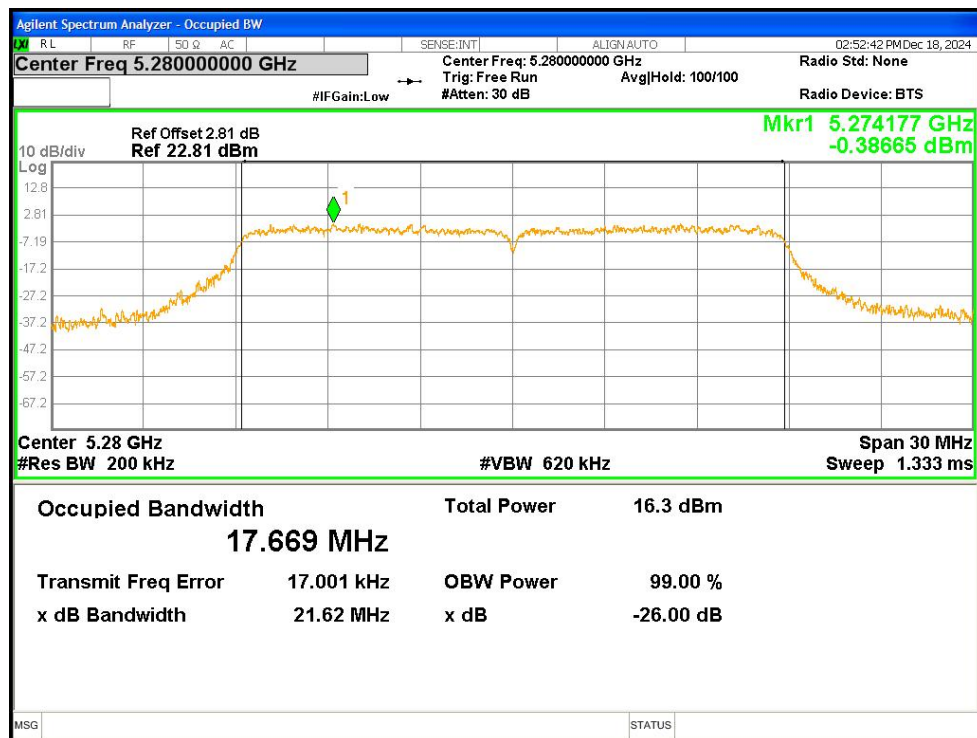 


OBW NVNT ac20 5280MHz Ant1

Report

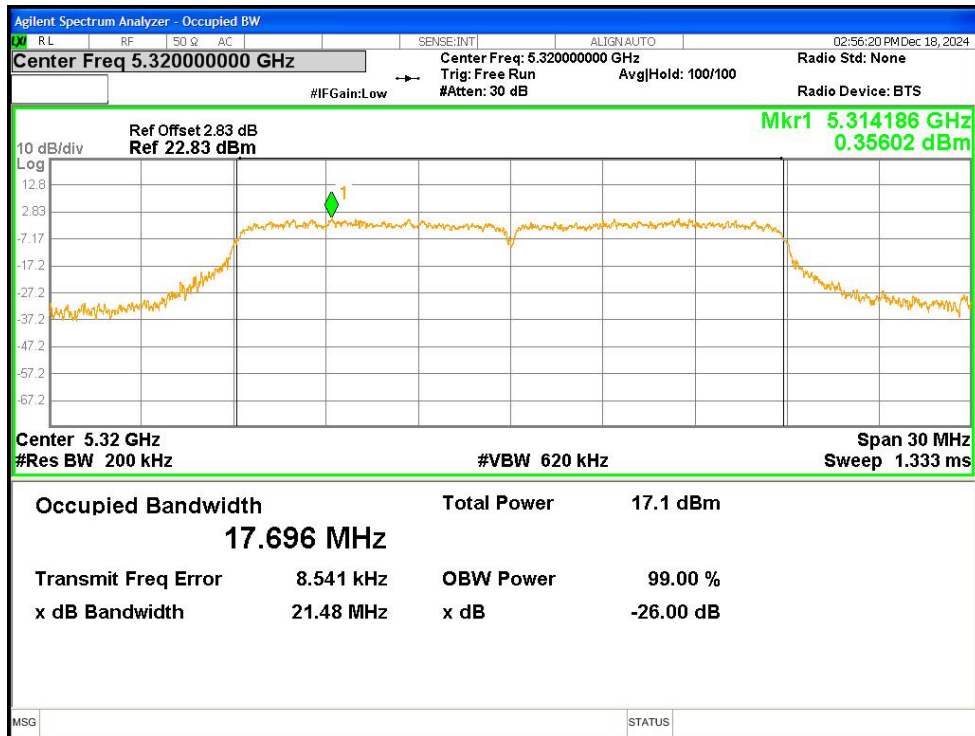 


OBW NVNT ac20 5320MHz Ant1

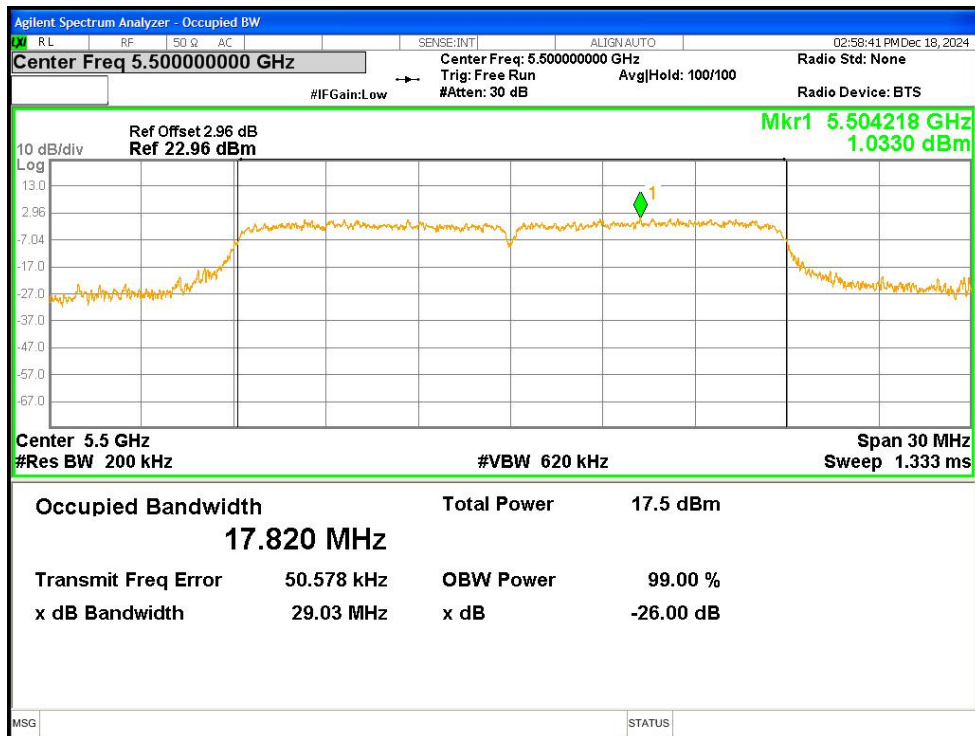 


OBW NVNT ac20 5500MHz Ant1

Report

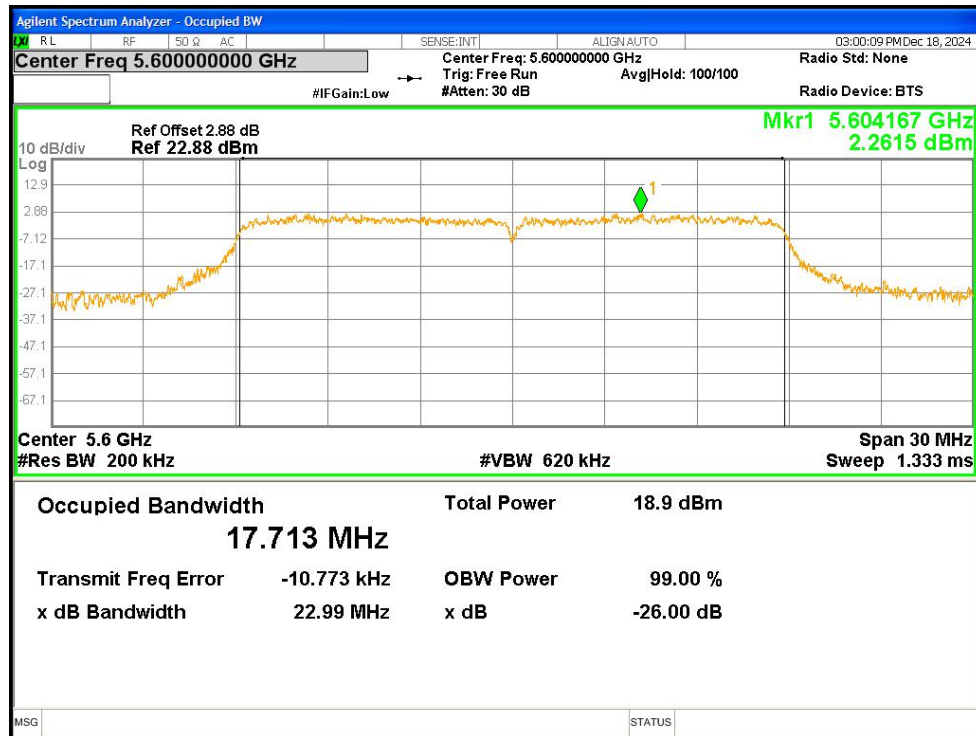 


OBW NVNT ac20 5600MHz Ant1

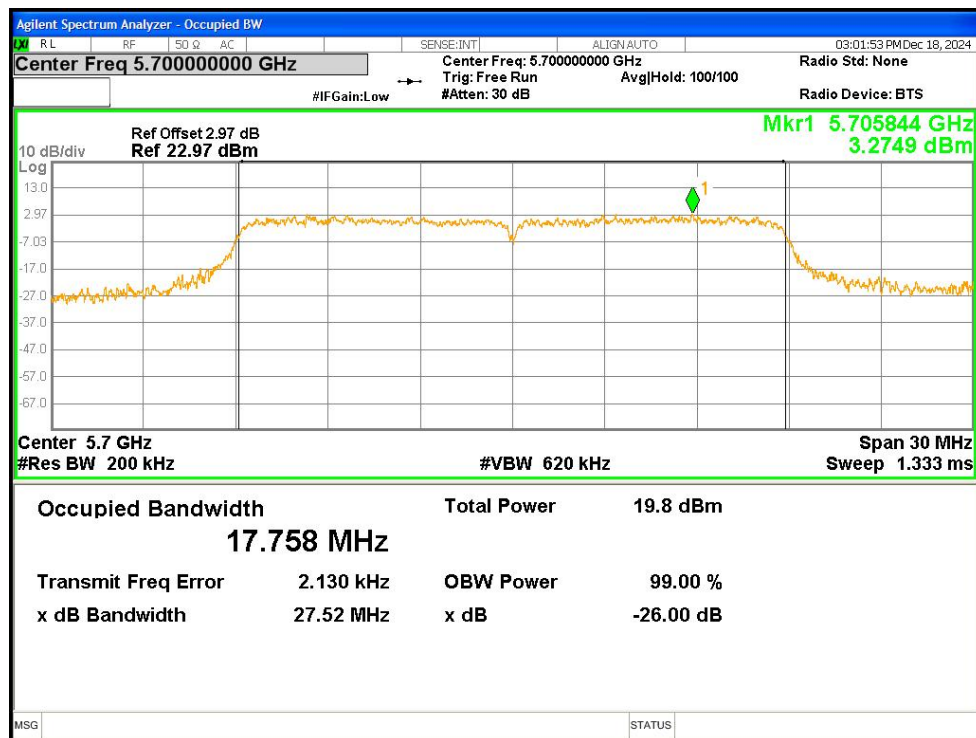 


OBW NVNT ac20 5700MHz Ant1

Report

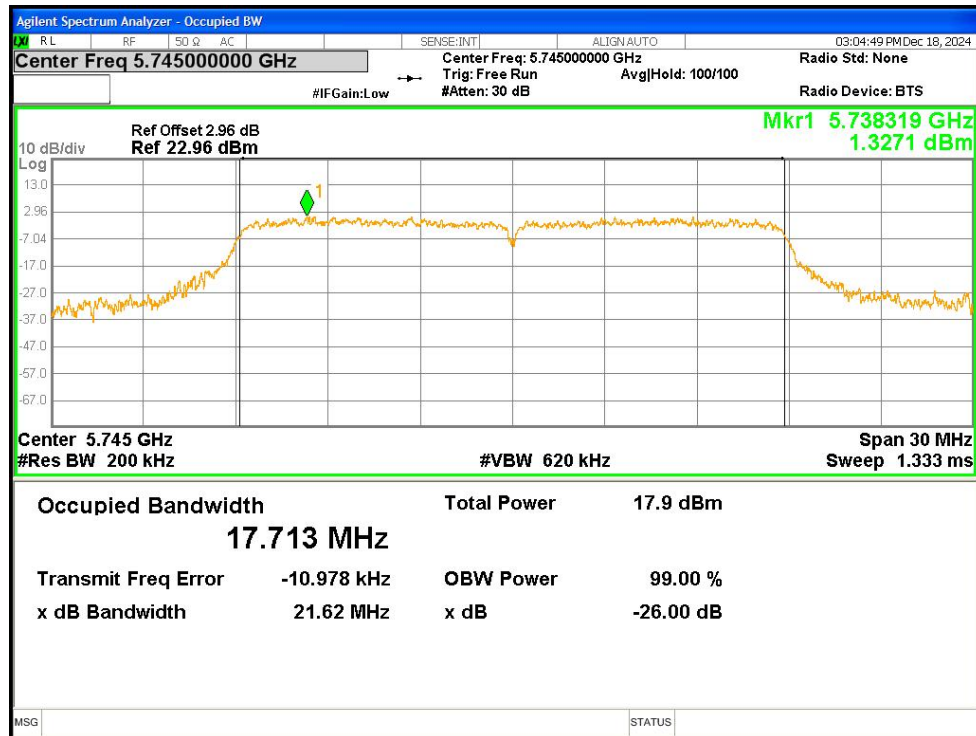 


OBW NVNT ac20 5745MHz Ant1

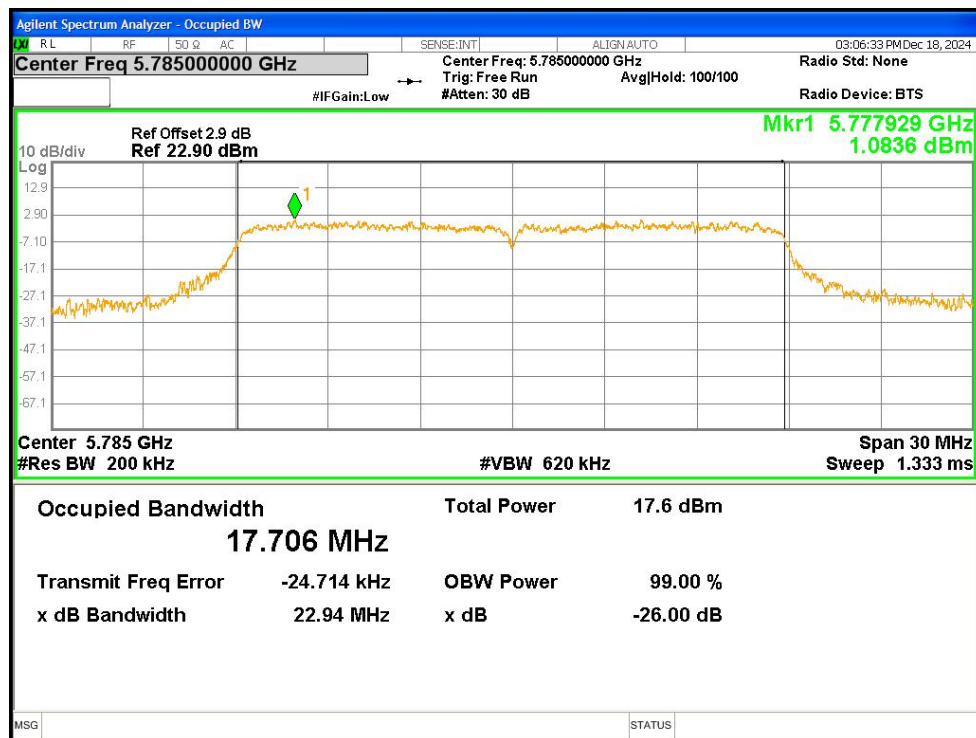 


OBW NVNT ac20 5785MHz Ant1

Report

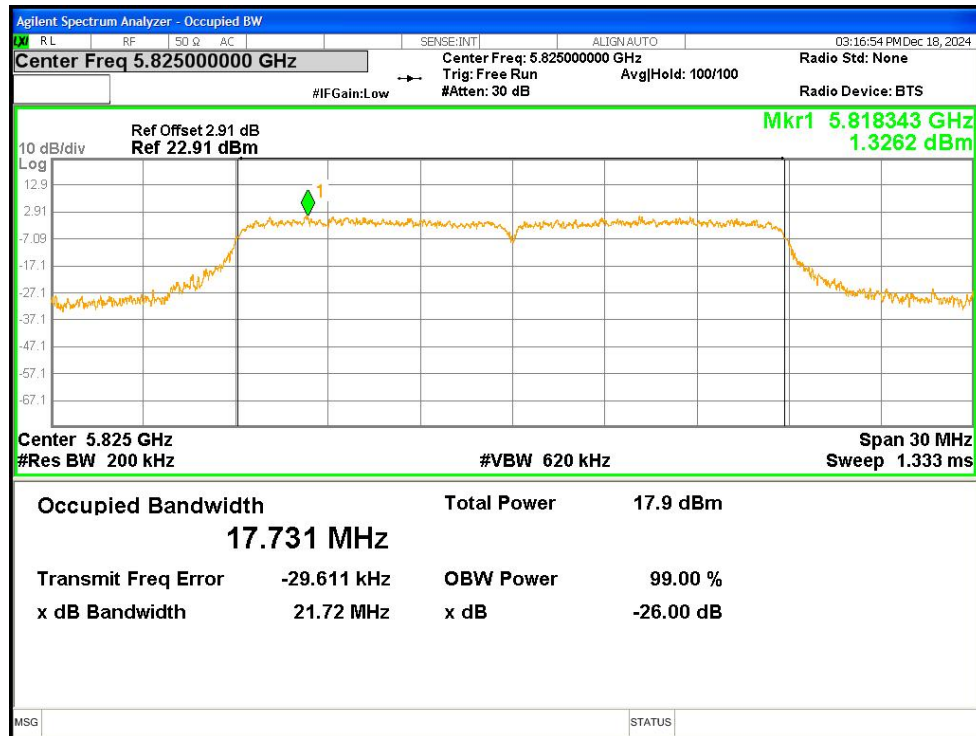

OBW NVNT ac20 5825MHz Ant1

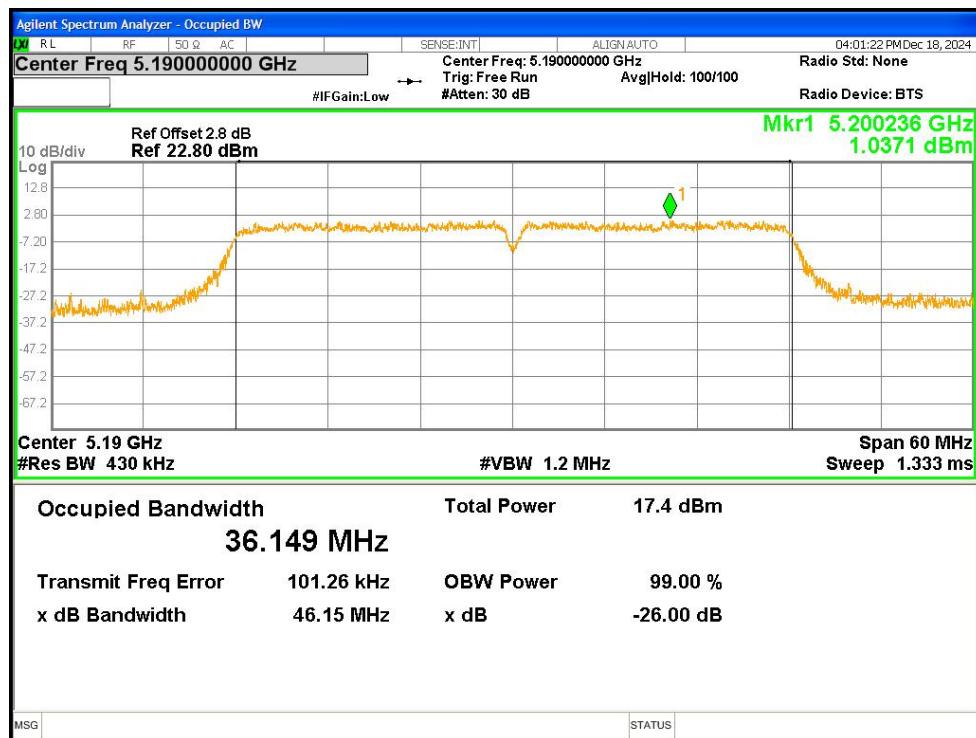

OBW NVNT ac40 5190MHz Ant1