

Important Safeguards

1. READ ALL INSTRUCTIONS BEFORE USING

Warning To reduce the risk of burns, electric shock, fire or injury, follow the all safety precautions for handling electrical outlets and especially around water.

1. Small children should not be permitted to use this appliance without adult supervision.
2. Use this appliance only for its intended purpose as described in this manual. Only use attachments recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
4. Install the unit according to the installation instructions.
5. Do not attempt to service this appliance by yourself. Doing so could void the warranty.
6. Keep the electrical cord away from heated surfaces such as irons or hair curlers.
7. Never drop or insert any objects into any openings.
8. Not suitable for outdoor use.
9. Follow proper cleaning instructions.
10. Never block the air openings of the product. Keep the air openings free of lint, hair, and other debris.
11. Always follow the grounding instructions in this manual before powering the unit.

2. WIRING REQUIREMENTS

 
GROUNDING

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product includes a cord with a grounding wire and grounding plug. They must be plugged into an outlet that is properly installed and grounded. We highly recommend a GFCI compliant outlet.

DANGER

Improper use of the grounding plug can result in a risk of electric shock. If it is necessary to repair or replace the cord or plug, do not connect the grounding wire to a flat blade terminal. The grounding wire can be identified by its insulated outer surface. It will either be colored green or will not contain yellow stripes. Check with a qualified electrician if you do not understand grounding instructions or if you do not know whether the product is properly grounded.

This product is for use on a nominal 120V circuit. It has a grounding plug that is similar to the plug illustrated in sketch A extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

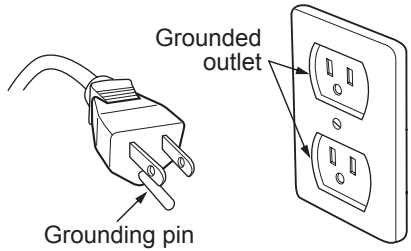

Insert the power plug correctly in proper voltage outlet and do not use an extension due to a risk of fire. Remote control power: 2x AAA Batteries (1.5V)

*** CAUTION**
RISK OF EXPLOSION TO BATTERY IF REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO LOCAL ORDINANCES

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*** CAUTION**
Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:


FCC RF Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. To maintain compliance, a minimum separation distance of 10 cm must be kept between the user and the antenna during normal operation.

Identification

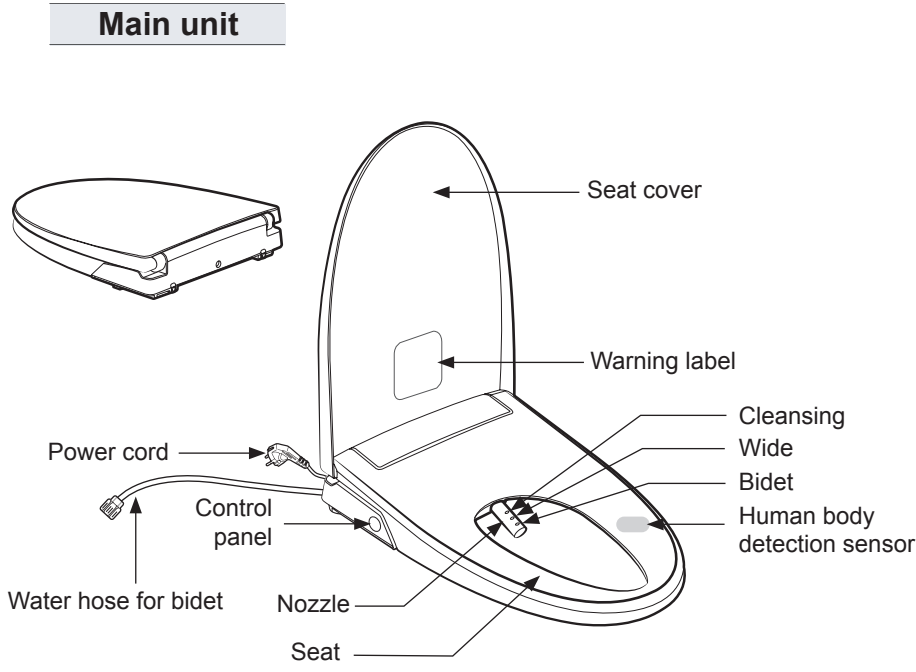

Accessories

 * Specifications mentioned in this manual are subject to change without prior notice for performance enhancement and, therefore, certain detailed features for each product may not match the manual exactly.

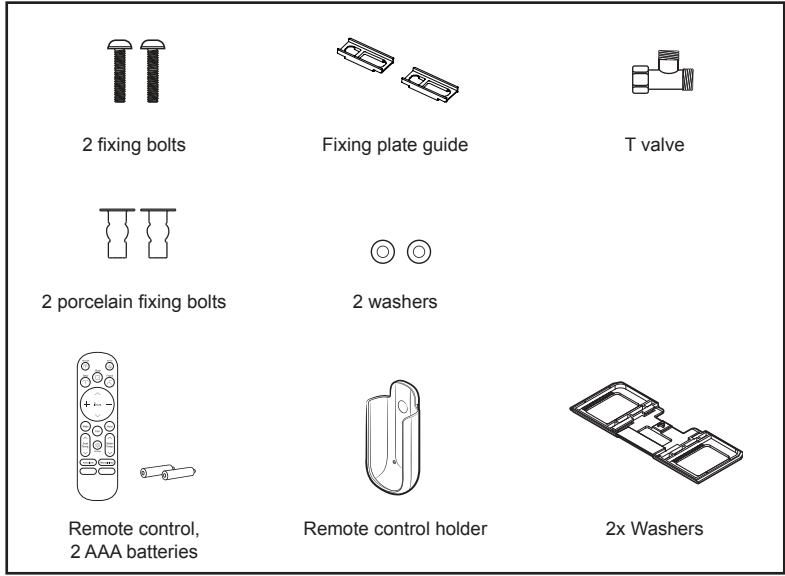

How to Use

Check the state of water supply under normal water supply conditions. Operating the product for a long period of time or by force when the water is not being supplied may cause a malfunction.

- * Before use, check the power condition.
- * This product has a seat sensor and operates only after it is recognized.
- * When the power plug is inserted, the nozzle operates at its initial setting, as the nozzle moves back and forth.
- * Taking out or pushing in the nozzle by force may cause a malfunction.

Stop

- Press the Stop button during use to stop the operation.
- It also stops automatically when a user stands up from the seat.

Rear / Move

- Press the Rear button. It operates for 2 minutes and then stops automatically.
- When the button is pressed one more time during an operation, it activates the Move feature, which moves the nozzle front and back to clean a broader area.

Dry (exclusive for S2 PLUS)

- Press the Dry button. It operates for 3 minutes and then stops automatically.
- Press + or - button to be able to adjust the temperature of warm air in 5 different levels.

Front / Move

- Press the Front button. It operates for 2 minutes and then stops automatically.
- When the button is pressed one more time during an operation, it activates the Move feature, which moves the nozzle front and back to clean a broader area.

Wide / Move

- Press the Wide button. It operates for 2 minutes and then stops automatically.
- When the button is pressed one more time during an operation, it activates the Move feature, which moves the nozzle front and back to clean a broader area.

Auto

 
- Press the Auto button. S2 operates for 2 minutes and S2 PLUS operates for 5 minutes then stops automatically. Clean → Clean & move → Clean, move & massage → Dry : S2 PLUS Clean → Clean & move → Clean, move & massage : S2
- When the button is pressed one more time during an operation, it stops the automatic operation.

Massage

- When the Massage button is pressed during a washing operation such as Rear, Front the water pressure increases and decreases repeatedly to demonstrate a massage effect.
- When the button is pressed one more time during an operation, it stops the massage operation.

Gentle

- Rear Move feature operates with the water pressure strength and nozzle location suitable for children, and then stops. Clean & move → Dry : S2 PLUS (for 5 minutes) Clean & move : S2 (for 2 minutes) It operates then stops automatically.
- When the button is pressed one more time during an operation, it stops the massage operation.

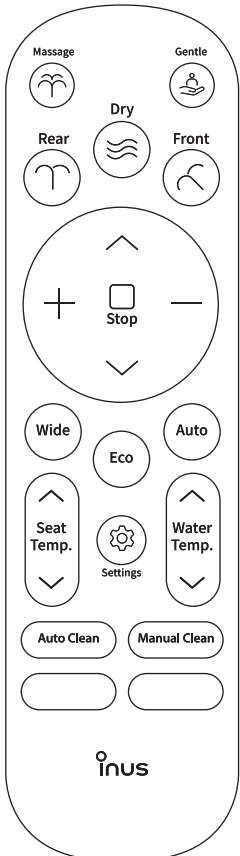

S2 PLUS

- * Check the state of power prior to use.
- * This product has a human body detection sensor and activates only after sensor recognition is complete.
- * Once the power cord is inserted, the nozzle activates by the initial setting. The cleansing nozzle moves to the front and rear before returning.
- * Taking out or pushing in the nozzle by force may cause a malfunction.

Eco

- Press the Eco button. It enters the Eco state.
- When the bidet is not in use, the toilet seat temperature is maintained at 28 °C. However, if the set temperature is OFF (room temperature), then it is maintained at OFF (room temperature).
- When using the Eco button, the amount of power and water consumption is minimized and optimized.
- If the Eco button is pressed one more time in the Eco state, it enters the Eco OFF state.

Seat Temp. / Water Temp.

- Press Up (▲) or Down (▼) for each button to be able to adjust the temperature in 4 different levels, Room-Low-Medium-High.

Nozzle location

- During a washing operation such as Rear, Front or Wide, the front and back buttons can be pressed to adjust the nozzle location in 5 different positions.

Water pressure

- During a washing operation such as Rear, Front or Wide, the high and low buttons can be pressed to adjust the water pressure at 5 different levels.

Automatic nozzle cleansing

- Press the Auto Clean button. Water is sprayed on the nozzle automatically for about 30 seconds and repeatedly comes in and out.

Manual nozzle cleansing

- Press the Manual Clean button. The nozzle comes forward for about 3 minutes. Use a toothbrush or a soft cloth to clean it.

Buzzer sound ON/OFF

- If the Settings button is pressed for 5 seconds in the seating OFF state and then the Gentle button is pressed, the buzzer sound becomes ON/ OFF.

Pairing

- Press the side button of the main bidet unit for 5 or more times (within 5 seconds).
- Then, press the Settings button for 5 seconds, and press the Up button. A buzzer sounds to complete the pairing.

