 
 


Product description

 
Side View

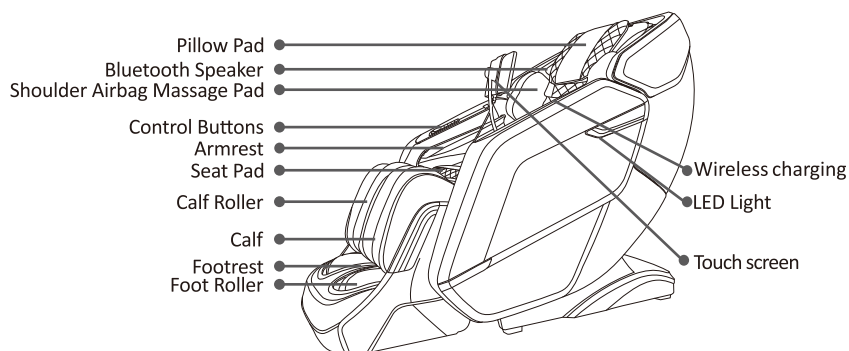

Rear View

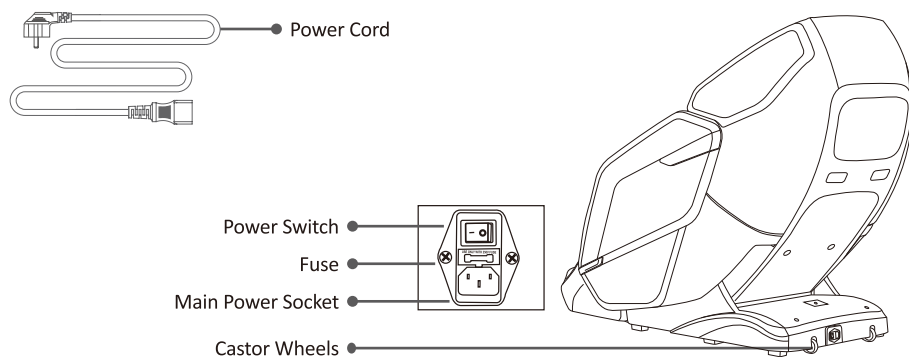

Bluetooth music connection method

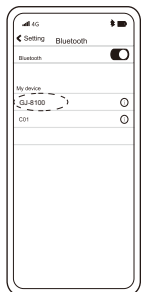

Step 1: Turn on the power switch of the massage chair.

Step 2: Turn on the phone's Bluetooth and search for Bluetooth devices.

Step 3: After searching, find "GJ-8100 " under Bluetooth device

Step 4: Open the mobile music app and play music.

Notice:

Mobile phone connection methods vary. Please connect based on your specific mobile phone system requirements.

After use



1. Press O button on the control panel to disable all functions.
2. Turn off the power switch (to "O") located at the back of the chair.
3. Remove the plug from the power socket.

Notice: Please do not pull on the power cord to detach the plug.

Troubleshooting

This page summarises the most common problems you would encounter with the product. If you are unable to solve the problem with information below.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The product does not work.	The product is not plugged in properly.	Ensure the voltage on the product corresponds to the local mains voltage and then plug in again. Then press on the power switch.
	The product has just finished its 15-min auto timer session and has automatically switched to standby mode.	If you want another session, press the O button again.
	You may have used the product continuously for more than 30 minutes and the overheat protection has been activated.	Unplug the product and let it cool down for 60 minutes before you use it again.
	An excessive load has been applied on the product.	Reduce the excessive load and start again.
The product is abnormally warm.	The product is likely to be overused.	Unplug the product and let it cool down before using it again.
The product is producing audible noise.	Noise is made by the mechanical parts of the product.	This is normal and does not mean that the product is faulty.

Care and maintenance

Cleaning


1. Before cleaning, ensure the product is unplugged from the power socket.
2. Do not use steel wool, abrasive cleaning agents or corrosive liquids (such as gasoline or acetone) to clean the product.
3. Wipe with a dry cloth to clean the product, remote control and power cord.
4. Do not use a damp cloth or detergent.

Storage

1. Prior to storage, unplug the product from the power socket.
2. Store the product in a cool dry place away from sunlight.
3. Do not place heavy weights on the product.




If the cover is damaged or there is any mechanical failure, please stop using the product.

Turn on message chair

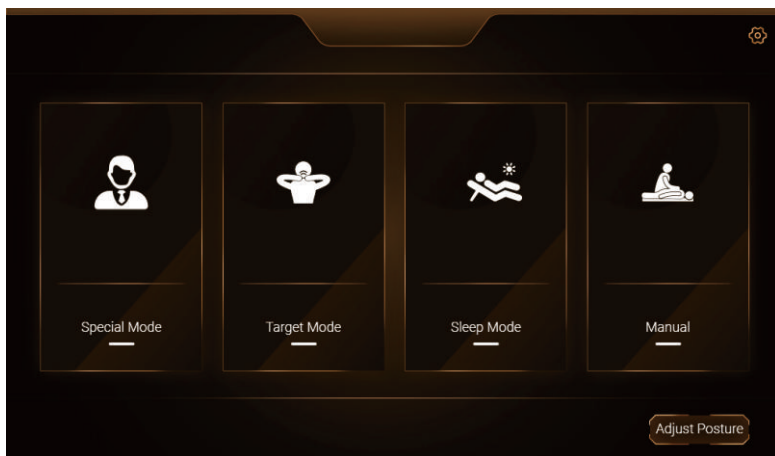


Main Page

- Press "ON/OFF" button on the screen and will enter main page, choose Special Mode, Local Mode, Sleep Mode
- Different programmes show on display screen. Tap the desired program .

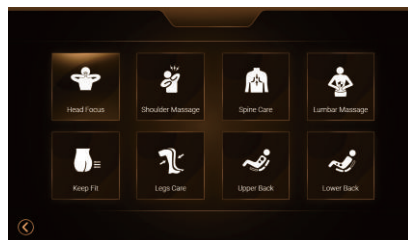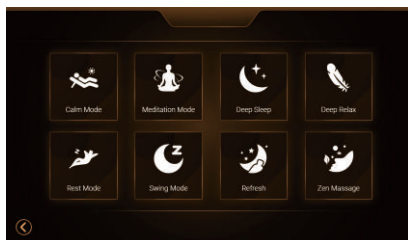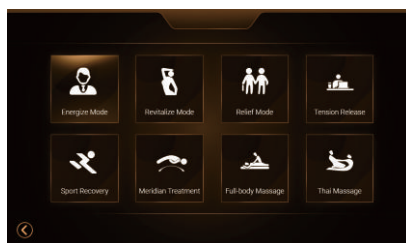


Screen Operation Guide

 - Select and press any automatic massage program button and begin body scanning.

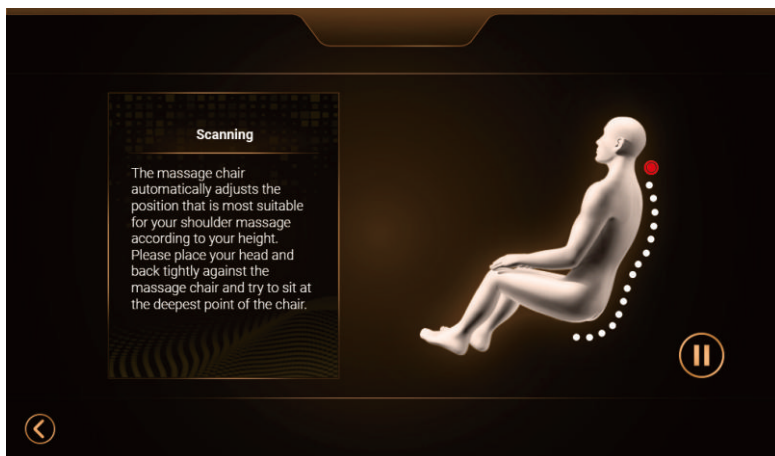


 - When scanning completed with a "didi", press up/down buttons on the touch screen to make any position adjustment, if not, massage will start after 10 seconds.

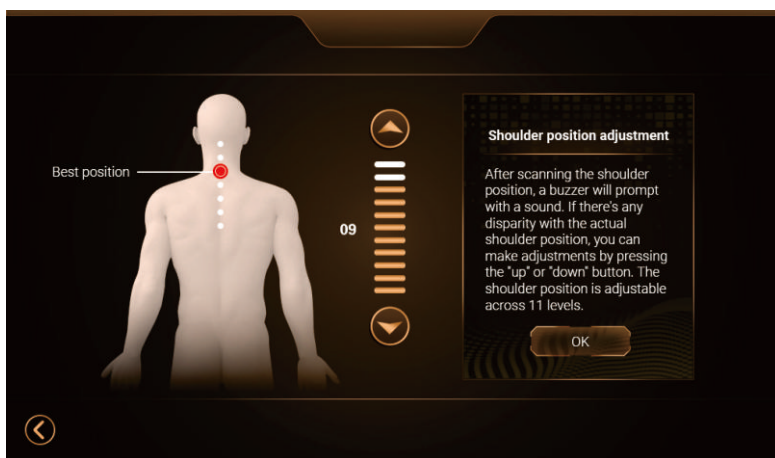

Screen Operation Guide

 - Massage Programme Running

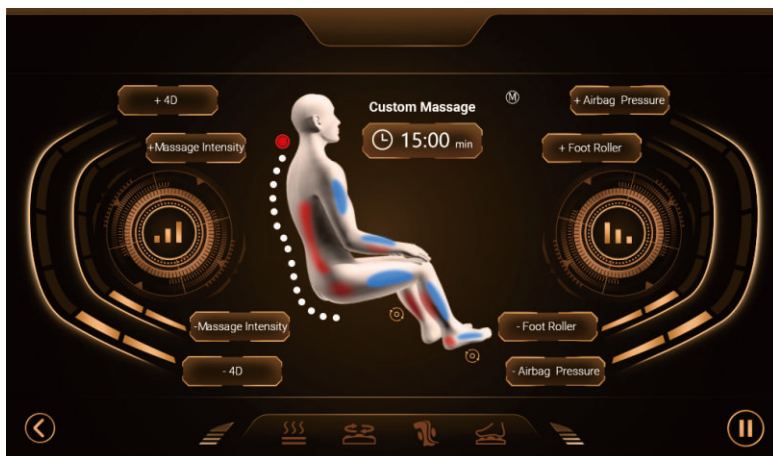

- Press "ON/OFF" button on the screen and resetting

