



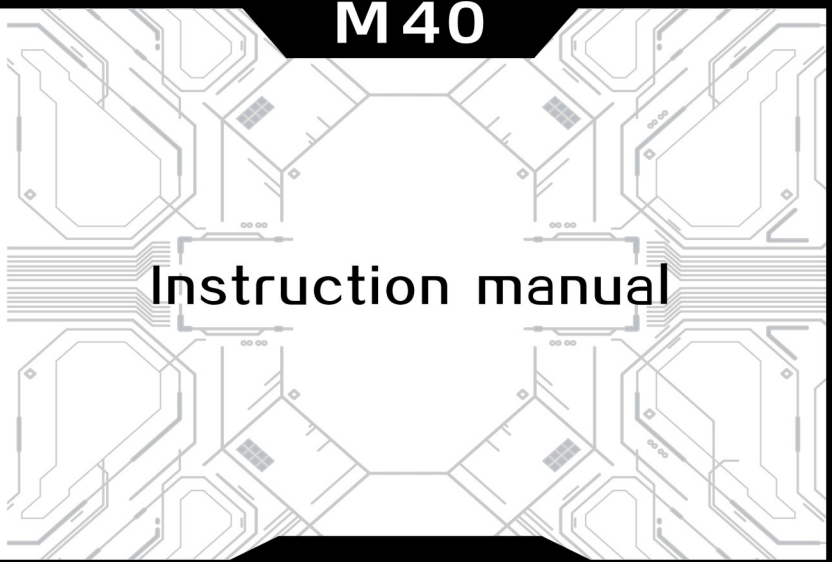

One: Safety Instructions

- Warning:
1. Keep this product out of reach of children; it is not to be used as a toy.
 2. Individuals with physical disabilities, mental impairments, or lacking relevant experience and knowledge should use this product under supervision and guidance of a guardian.
 3. Do not disassemble the body to replace the battery; do not modify or repair this product without authorization.
 4. Before charging, ensure that the voltage marked on the product matches the voltage of the charging source.
 5. Do not charge the product unattended, and do not exceed a charging duration of 24 hours.
 6. When not in operation, this product can be washed under a tap; ensure it is dry after cleaning.
 7. Charge, store, and use the product within a temperature range of 5 to 35 degrees Celsius.
 8. This product contains a built-in rechargeable battery; do not throw it into fire or charge, use, or store it at high temperatures.

Two: Product Introduction

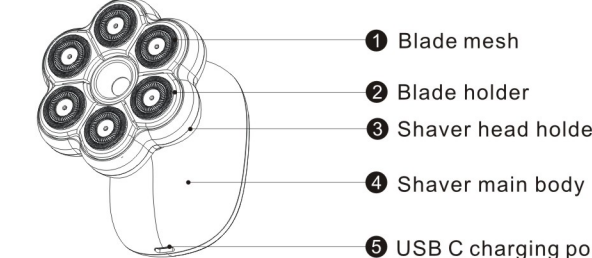

- Caution:
1. This product is suitable for cleaning head and facial hair; do not press too hard while using.
 2. If the charging cable of this product is damaged or the device is not functioning properly, stop using it and replace the charging cable.
 3. Please use a charger that is purchased through official channels and certified by 3C, with a specification of 5V 1A/2A.
 4. Mild skin irritation may occur during shaving. It is recommended to use the shaver regularly.

Three: Product Configuration

1. Shaver head
2. Shaver main body
3. Charging cable
4. Storage pouch
5. Cleaning brush
6. Instruction manual

Four: How to Use

1. Button function description: A short press turns the device on at speed level one, another short press switches to speed level two, and a further short press turns the device off.
2. Camera function description: A short press to turn on the device will automatically activate WIFI and the camera light; When short press to the off state, the camera and WIFI will be turned off.

Five: Connecting to Product WiFi

1. Scan the QR code or search for "hndvisual" in the app store, download the APP, and install the software
2. Once installed, the following icon will appear: HND
3. Long press the power button on the main unit for 3 seconds to turn it on
4. Tap on the icon to search for WiFi.
5. Tap on the Wireless Local Area Network settings.
6. Connect to WiFi "KSA-XXX"

Six: APP Interface

1 Interface Guides

2 APP Fault Analysis and Troubleshooting

Fault	Solutions
No response when powering on	Please try several more times according to the correct operating instructions. Charge using the provided charging cable
Camera light is not on	Turn the shaver off and then back on again
APP crashes	Uninstall the current APP, re-download and install it for use
Abnormal image display	Disconnect the phone from the device's WiFi, restart the product, and reconnect
Unstable connection between the shaver and the APP	Restart the product and try to connect to the APP again
If the problem cannot be resolved by following the above steps, please contact customer service. We will provide you with further feasible solutions!	

Seven: LED Display

-
1. Motor speed
 2. Battery Level
 3. WIFI status and battery
 4. Cleaning reminder
1. Powering On/Off: A short press turns the device on at level one, another short press switches it to level two, and a further press turns the device off.
 2. Battery Display: The battery level is shown as a percentage. When the battery is below 10%, a battery indicator light will appear to remind you to charge; when the battery is above 20%, the charge reminder icon will not be displayed.
 3. WIFI: When not connected to WIFI, the WIFI icon blinks; when connected, the icon remains steadily lit.
 4. Cleaning function reminder display: After the device is used for 20 minutes, start the rinse function reminder (automatically turn off the rinse reminder function after 2 minutes of shutdown) to remind the user to clean and maintain the product.

Eight: Charging

1. Before the first use, please charge the battery to 100%
2. 15. When the power is less than 20%, the battery percentage flashes.
3. When charging, connect the Type-C end of the data cable to the shaver, and connect the other end to the power adapter; At this time, 15. the battery percentage is blinking are blinking for charging; When fully charged, the screen displays 100%.
4. Please do not put the product into the box when charging.

Cleaning the Shaver

- Turn off the shaver before cleaning.
1. To maintain optimal performance, regularly clean the shaver.
 2. For cleaning, detach the shaver head (illustration provided) and use a brush or rinse with water.
 3. Within 12 months from the day after you receive the product, if the product exhibits performance failures listed in "this manual," and such issues are confirmed by our after-sales service center, you may enjoy free repair services.

Nine: Troubleshooting One

Symptoms	Causes	Solutions
Shaving performance is not satisfactory	Blade wear or damage	Please replace with a dedicated shaving head
	Stubble clogging the shaver	Please clean the shaver
	Low battery power	Please charge the shaver
Long press of the power button not functioning	Travel lock is activated	Press and hold the button for 5-7 seconds to unlock
	Circuit malfunction	Return for after-sales service and repair
The sterilization light is not on	Not activate	Press and hold the button for 3 seconds to activate
	Circuit malfunction	Return for after-sales service and repair

Nine: Troubleshooting Two

Symptoms	Causes	Solutions
Charging indicator light not on	No power supply connected	Connect the power cord for charging
	Indicator light damaged	Return for after-sales service and repair
	Circuit malfunction	Return for after-sales service and repair
Excessive charging time	Battery reached the end of its life	Return for after-sales service and repair
	Circuit malfunction	Return for after-sales service and repair
Skin irritation after shaving	Skin needs time to adapt to the shaver	Skin irritation disappeared after using for 2-3 weeks

Ten: Environmental Protection

When the shaver reaches the end of its life, according to the laws and regulations of the country or region, it may be necessary to remove the internal battery for proper recycling. If you are unable to remove the battery, please take the product to a government -designated recycling center.

Warning:
Do not dispose of the battery in fire to prevent battery explosion or release of toxic and harmful substances.
Do not short-circuit the battery to prevent battery burning and fire.
Method for removing the battery: See diagram.

Component Name	Hazardous Substances						This table is prepared in accordance with the provisions of SJ/T11364. "O" indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit requirements specified in GB/T26572. "X" indicates that the content of the hazardous substance exceeds the limit requirements specified in GB/T26572 in at least one homogeneous material of the component. The number within the symbol indicates that the product has an environmental service life of 10 years under normal use conditions.
	Pb	Hg	Cd	Cr VI	PBB	PBDE	
Integrated circuit board	X	O	O	O	O	O	
Electrical contact tab	X	O	O	O	O	O	

Eleven: After-Sales Service and Support

1. Within 7 days from the day after you receive the product, if the product exhibits performance failures listed in this manual and confirmed by our company's after-sales service center, you can enjoy free return or exchange services.
2. Within one year from the day after you receive the product, if the product exhibits performance failures listed in this manual and confirmed by our company's after-sales service center, you can enjoy repair services.

3. Warranty Content
Note:
The blades (including the mesh), storage pouch, protective cover/box, etc., have no warranty period.

4. Non-Warranty Provisions
Unauthorized repairs, misuse, collisions, negligence, abuse, liquid ingress, accidents, alterations, improper use of non-original accessories, or removal or alteration of labels, anti-counterfeit marks. The warranty period has expired. Damages caused by force majeure. Cases not covered by the faults listed in this manual.

5. Reminder
To ensure the safe transportation of the product during transit, it is recommended to keep the packaging box for at least 30 days from the date of receipt.

Type	Warranty content	Warranty period
Main unit	Main unit	1 year
Accessories	Charging cable	6 months

Twelve: Parameters

Product name: Multifunctional shaver

Product model: M40

Power rate: 2.5W

Operating voltage: 3.7V

Charging voltage: 5V

Working current: 1A

Implementation standard: GB4706.1-2005 GB4706.9-2008

What's in the Box
Shaver x1, User Manual x1, Charging Cable x1, Cleaning Brush x1, Storage Pouch x1

Note: This product can only be flushed with water, not soaked in water, such as the quality caused by soaking water does not belong to the scope of after-sales



Instructions for Multi-functional Shaver

M40 Series

A. Brush Cleaning: Use a brush to separately clean the stubble on the blade assembly and the rotating axis of the shaver body.

B. Rinse with Clean Water: Place the blade assembly and the rotating axis of the shaver body under a faucet separately and rinse them. After cleaning the stubble, make sure to remove any remaining water to keep the shaver dry. To maintain good shaving performance, it is recommended to replace the blade assembly every six months.

Cleaning Method as shown in the following images:

Note:
Splash-proof, water-resistant, and dust-proof functions are not permanently effective. Protective performance may decrease due to daily wear and tear, and damage caused by immersion in liquids is not covered under the warranty.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- important announcement

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.