

AP-2609B

Outdoor Mobile Speaker

User Manual


I. Features

1. Ultra-large magnetic circuit high-sensitivity speaker with high penetrating power, low-frequency shock and perfect medium-/high-frequency representation.
2. The latest decoding chips supporting stably playback of MP3 in up to 32GB USB/TF card.
3. 3.5mm AUX audio input for each connection to a wide range of sound sources.
4. Built-in high-capacity battery for consecutive playback of up to 2 hours.
5. Connect the microphone, adjustable reverberation, voice and Karaoke function to present outstanding performance.
6. Battery with built-in recharging protection to present a long and stable service life.
7. Built-in low battery and full recharging indication. Human-oriented use.
8. With handle design for best choice of mobile speaker.
9. Support Bluetooth and TWS function.

II. The bluetooth pairing operation and related parameters:

1. Power: Switch on power to enter the mode of Bluetooth.
2. Switch on the Bluetooth function of Mobile phone and searching , while the Mobile phone shows **“ZLYNEAR-01”**, click the connect directly . mobile phone connection do not need password , if need password , please input “0000” to go on pairing . After success pairing , the speaker will send out a voice of prompt . it is success pairing between mobile phone and Bluetooth speaker.
3. Play the music of your mobile bphone directly and will give out beautiful voice from speaker.

III. Functional Operations and Features

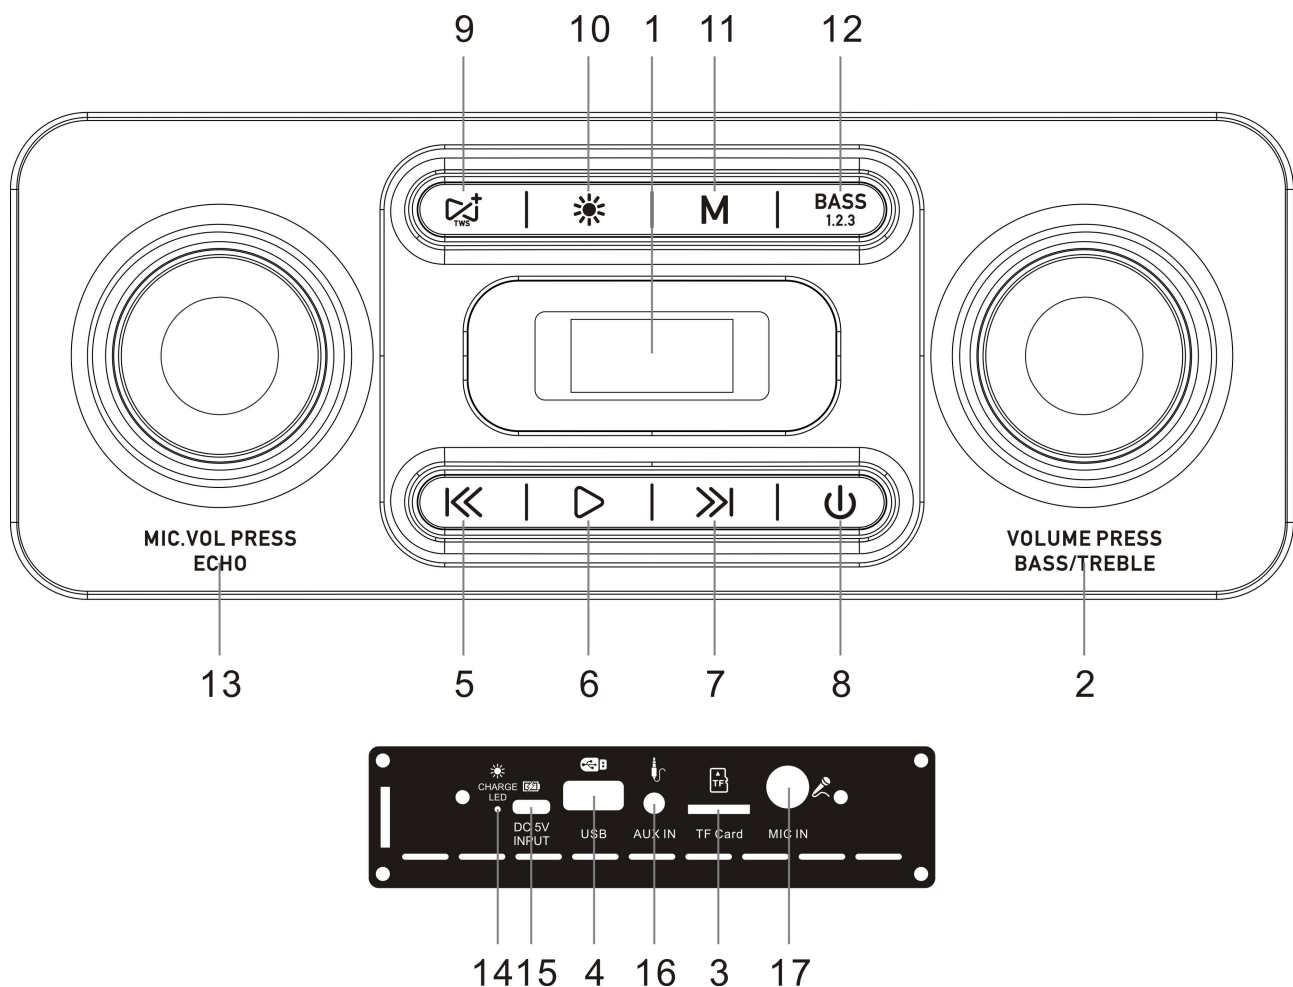

1. LED Screen.
2. VOLUME PRESS BASS/TREBLE : By default, the master volume adjustment, short press once for bass adjustment, short press twice for high pitch adjustment, adjust each time for four seconds without operation automatically jump back to the master volume adjustment, in each mode, adjust the knob to control the volume.
3. TF Port: Read audio files in MP3 format in TF card in capacity up to 32G (FAT32).
4. USB Port: Read audio files in MP3 format in USB storage device in capacity up to 32G (FAT32).
5. ⏮: In the play status of USB/TF Card/Bluetooth, short press it to select the previous song.
6. ▶: In USB/TF card/Bluetooth reading status, short press it to play/pause, In USB/TF card reading status, long press it to select one of four playback sequencing modes (All - play all tracks in sequence; RAND - play in random; ONE - repeat one track; FOL - repeat all tracks in a folder). In AUX input status, short press it to toggle between mute and normal volume.
7. ⏭: In USB/TF card/Bluetooth reading status, short press it to go to the next song.
8. Power: Long press to switch ON/OFF the speaker.
9. TWS MODE:
 - 1) Pls open the 2pcs speakers and change them to the bluetooth mode.

- 2) Short press one pcs TWS button to pair the other one speaker.
- 3) after pair succesfully, open the mobile phone bluetooth mode to pair one of them to play synchronously.
- 4) When again short press the TWS button will disconnect the TWS mode.

Note: Can not pair the mobile phone with speakers bluetooth first,as it can not connect the TWS and must disconnect the pair between the mobile and speaker.

10. : Short press it is LED light mode button.

11. MODE: Short press it to toggle between USB/TF/AUX/Bluetooth receiving modes.

12. BASS1.2.3: Short press to switch between indoor and bass boost and outdoor modes.

13. MIC.VOL PRESS ECHO : By default, the microphone volume adjustment, short press once for microphone reverb adjustment, adjust each time for four seconds without operation automatically jump back to the microphone volume adjustment, in each mode, adjust the knob to control the volume.

14. Recharging indicator light: When recharger is connected, the red light turns on. When the device is fully recharged, the light turns off.


15. DC 5V INPUT: DC 5V recharging port.

16. AUX IN: External sound source input port (plug-and-play).

17. Microphone input: Microphone input jack.

18. Remote Control Receiver.

IV. Operation Instructions on Remote Control

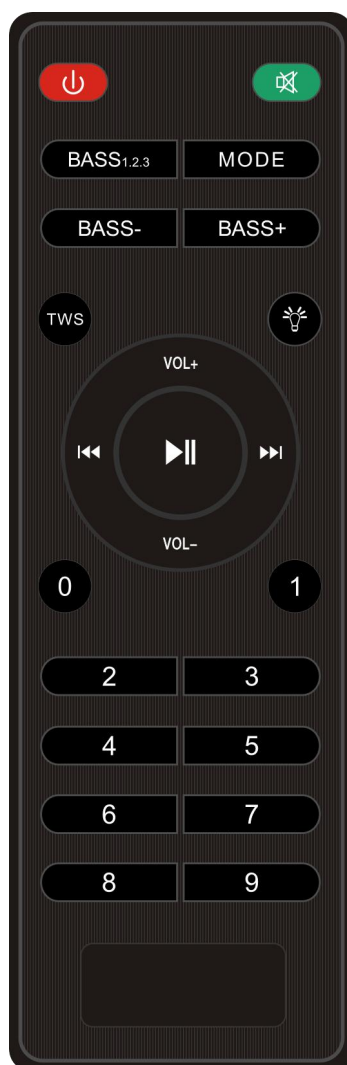

1. Power: Short press to switch OFF the speaker.
2. : In USB/TF/AUX/Bluetooth mode, short press it to mute the device.
3. BASS1.2.3: Same functions as "BASS1.2.3" on the master device.
4. MODE: Same functions as "MODE" on the master device.
5. BASS-: Bass volume down control button.
6. BASS+: Bass volume elevated control button.
7. TWS: In bluetooth mode, Short press the TWS button to enter bluetooth interconnection mode.
8.  : Short press it is LED light mode button.
9. VOL+: Master volume elevated control button.
10. VOL-: Master volume down control button.
11.  : Functions as "  " on the master device.
12.  : Functions as "  " on the master device.

13. **▶▶** : Functions as “ **▶▶** ” on the master device.
14. Numeric Keys 0~9: In USB reading status, to play Track 12, just input numbers "1" and "2", and in 2 seconds the system will go to Track 12 and start playback. Any input of number larger than number of the total available tracks is invalid.

CAUTION:

Please Be sure to charge while music distorted.

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 0.5cm between the radiator & your body.