

风琴折叠页 70G书写纸 黑白印刷 折叠后尺寸: 100x140mm

S-09

User Manual



2.1 CH SOUND BAR

Important Safety Instructions

WARNING: To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference.

2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.

3. This product is intended for indoor household use only.

4. To protect against electric shock, do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.

5. Do not use this product in the immediate vicinity of water such as bathtubs, washbaths, swimming pools etc. where the likelihood of immersion or splashing occur.

6. Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.

7. Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.

8. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

9. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.

10. Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.

11. Do not operate the product with a damaged cord or plug or if the product malfunctions, or is dropped or damaged in any manner.

12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

13. For safety reasons, do not remove any covers or attempt to access the inside of the product.

14. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.

15. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.

16. Do not expose the batteries to excessive heat, direct sunlight, fire or similar.

17. Do not throw used batteries in your household rubbish. Dispose of it responsibly according to local regulations.

Remote Control Description

Using the remote control:

1. POWER
Press this button to power on or power off.

2. MIC+
Press this button to increase the microphone volume.

3. MIC-
Press this button to decrease the microphone volume.

4. +
Press + to up the volume of the soundbar.

5. -
Press - to down it.

6. +
Press + to down it.

7. OPTICAL
Press this key for digital fiber optical audio mode.

8. BT
Short press this key to switch from other modes to Bluetooth mode.

9. ARC
Press this key for HDMI/ARC audio mode.

10. AUX
Press this key for AUX audio mode.

11. MOVE
Press this button will enter MOVE mode sound effect.

12. MUSIC
Press this button will enter MUSIC mode sound effect.

13. BASS
Short press this key briefly to turn the sound off or on.

14. ECHO
Press this button to reduce microphone echo.

15. ECHO+
Press this button to increase microphone echo.

16. H/RESET
when playing music, press this button to pause playing, and press to play continue.

17. H/
Under Bluetooth and USB mode, press this button will go to next song.

18. BASS+
Press the button to enhance the bass effect.

19. BASS-
Press the button to reduce the bass effect.

20. NEWS
Press this button will enter NEWS mode sound effect.

Microphone button operation guide:

POWER: Long press this key to turn on and off the device.

Microphone indicator light status description:

1. Long the POWER button to turn on the device. The LED light will display white.

2. Long the POWER button again to shut down the device. The LED light will go out.

3. The microphone is charging. The LED light shows red.

4. Once the microphone is fully charged, the LED light will go out.

Installation Method:

1. the end cover with the lock butt, and then turn clockwise, you can assemble into a bar sound bulky.

2. insert the subwoofer's connection cable into the SW-OUT position of the sound boom.

Front/Back Panels

FRONT

1. POWER/MODE
Long press this button to power on or power off, Short press this button to change mode.

2. +
Long press this key to increase the volume, Short press this key is the next song.

3. -
Long press this key to reduce the volume, Short press this key is the previous song.

BACK

1. USB
2. HD/ARC
3. OPTICAL
4. SW-OUT

Connection Schematic

CONNECTING THE SOUNDBAR TO TV

1. Subwoofer to SW-OUT
2. Connection to TV-HD input on the sound bar to HD(ARC) Output on TV

Note: Alternatively, you can use the AUX cable (included) to connect the AUX-IN port on the sound bar to the Auxiliary out or the Headphone jack on the TV.

1. Subwoofer
2. HD
3. HD (ARC)
4. SW-OUT

CONNECTING THE SOUNDBAR TO OTHER DEVICES

3. OPTICAL input on the sound bar to OPTICAL Output of other devices(Blu-ray/DVD player/Gaming consoles).

4. Other audio sources:Blue-connect/AUX-IN.

1. OPTICAL
2. DVD
3. SOUNDBAR REAR PANEL

1. USB
2. HD/ARC
3. OPTICAL
4. SW-OUT

1. Bluetooth
2. FRONT PANEL

Operating Instructions:

With AC power connected to the Speaker, the display glows with prompt voice, which means that successfully powered on. Long Press the Power/Mode button on the side panel or the Mode key on the remote control to choose the required mode.

Blue-Connect Mode:

1. Press the "MODE" button repeatedly until Blue-Connect Mode is selected. Display shows "BT".

2. On your Bluetooth-enabled device choose "S-09", the name of the sound bar. The display blinks indicating that it is waiting for pairing, once pairing is successful, the indicator remains on, display shows "BT" and stop flashing.

3. Now you can play music from your Bluetooth-enabled device on the sound bar. Press the "+" or "-" button on the remote control to play the previous or next song.

AUX Input

If using the AUX cable connect the Speaker to audio equipment, select 'AUX' by using the Mode key on the remote control or the Power/Mode key on the side panel. 'AUX' will be displayed on the display accompanied by 'AUX' prompt.

HD/ARC Input

If using HD/ARC cable connect Speaker to audio equipment, through the mode button on the remote control or the Power/Mode key on the side plate to select 'ARC', screen displays 'ARC' accompanied by 'ARC' prompt.

OPTICAL Input

If using OPTICAL cable to connect speaker, through the mode button on the remote control or the Power/Mode key on the side plate to select 'OPT', screen displays 'OPT' accompanied by 'OPT' prompt.

Karaoke function

Turn on the microphone switch, and the microphone will automatically pair and connect with the sound bar to start karaoke. Turn off the microphone switch, and the karaoke function will automatically turn off.

Audio Settings

Fire TV stick

1. Settings > Display & Sounds > DOLBY DIGITAL OUTPUT > Dolby Digital Plus OFF

2. Settings > Display & Sounds > Audio Output > TV Speakers > select OFF

Fire TV Cube

1. Settings > Display & Sounds > Surround sound > PCM

2. Settings > Display & Sounds > Audio Output > TV Speakers > select OFF

Toshiba Fire TV

1. Settings > Display & Sounds > Audio Output > TV Speakers > select OFF

2. Settings > Display & Sounds > Audio Output > Digital Audio Format > select PCM

Insignia Fire TV

1. Settings > Display & Sounds > Audio Output > TV Speakers > select OFF

2. Settings > Display & Sounds > Audio Output > Digital Audio Format > select PCM

3. Settings > Display & Sounds > HDMI CEC Device Control > ON

TCL ROKU TV

1. Settings > Audio > TV Speakers > Select Off

2. Settings > Audio > Digital audio format > Select Stereo

Hisense ROKU TV

1. Settings > Audio > TV Speakers > Select Disabled

2. Settings > Audio > Digital Audio Out > Select Stereo

ONN ROKU TV

1. Settings > Audio > TV Speakers > Select Disabled

2. Settings > Audio > Digital Audio Format > Select Stereo

Roku TV Stick

1. Settings > Audio > HDMI > Select PCM-Stereo

2. Settings > Audio > Audio Mode > Select Stereo

Samsung TV

1. Settings > Sound > Sound Output > select Receiver (HDMI)

2. Settings > Sound > Sound Output > Expert Settings > HDMI-ARC Mode > Auto

3. Settings > Sound > Sound Output > Expert Settings > Digital Output Audio Format > PCM

4. Settings > Sound > Sound Output > Expert Settings > Digital Output Audio Delay > 0

Audio Settings

Vizio TV

1. Settings > Audio

2. Settings > Audio > TV Speakers > Off

3. Settings > Audio > Volume Leveling > Off

4. Settings > Audio > Surround sound > Off

5. Settings > Audio > Analog Audio Out > Fixed

6. Settings > Audio > Advanced Audio > Digital Audio Out > PCM

Sony TV

1. Settings > Display & Sounds > Audio Output > Speakers > Audio System

2. Settings > Display & Sounds > Audio Output > ARC Mode > On

3. Settings > Display & Sounds > Audio Output > Digital Audio Out > PCM

4. Settings > Display & Sounds > Audio Output > Pass Through Mode > OFF

Hisense TV (Powered by Android)

1. Settings > Sound > Speakers > select ARC

2. Settings > Sound > Advanced Settings > Digital Audio Out > select PCM

Sharp TV

1. Settings > Sound > Advanced audio settings > TV Speaker & ARC > select ARC

2. Settings > Sound > Advanced audio settings > Digital Audio Out > select PCM

Sharp TV(Powered by Android)

1. Settings > devices preferences > sound > Digital Output > select PCM

2. Settings > Sound > Additional Settings > Digital Sound Out > PCM

LG TV

1. Settings > Sound > Sound Out > HDMI ARC

2. Settings > Sound > Additional Settings > Digital Sound Out > PCM

Panasonic TV

1. Menu > Audio Settings > Advanced Audio > TV Speakers > select OFF

2. Menu > Audio Settings > Advanced Audio > HDMI > select DIGITAL

3. Menu > Audio Settings > Advanced Audio > Digital Audio Out > select PCM

Note: When you use apps such as NETFLIX, HULU, or AMAZON PRIME on your smart TV, please turn off DOLBY and DTS function in the app sound settings or choose STEREO output to ensure that the soundbar will be compatible with your TV.

Connection Schematic

RECOMMENDED PLACEMENT

Soundbar: Under the TV (if wall-mounted) in front of the TV

Subwoofer: on the floor, alongside the TV (or in the front corner of the room)

Speaker Specification

Input Voltage	AC 110-240V 50/60Hz
Input signal source	Optical/AUX terminal/Bluetooth/HDMI/ARC
Dimensions for sound bar	805*167*66mm
Dimensions for subwoofer	130*208*160mm
ACCESSORIES	Remote control, Audio cable, AC cable, HDMI cable, mountable screws, manual

Troubleshooting

PROBLEMS	SOLUTIONS
The microphones not working	Microphone troubleshooting steps, please refer to: 1. Can the microphone be turned on? 2. Replace the charger with a 5V/1A charger to fully charge the microphone. When charging, the microphone screen shows red, and when fully charged, the microphone screen shows green. 3. If the soundbar is connected to a power source but is turned off, the microphone will not connect, the microphone's screen will keep flashing, and no sound will be transmitted. Please turn on both the soundbar and the microphone. 4. When the soundbar and microphone are powered on at the same time, the microphone will automatically connect to the Soundbar. Once connected, the microphone screen will remain lit and your voice will play through the Soundbar. If the microphone screen flashes, the connection to the Soundbar was not successful. 5. It is also possible that the microphone volume is set too low. Please use the "MIC+" button on the remote control to maximize the microphone volume.
Troubleshooting for Soundbar	Troubleshooting steps for soundbars, please refer to: 1. Check if the soundbar interface is loose. Ensure the cables are securely plugged in. 2. Check if the soundbar is turned on. You can press and hold the power button on the side of the speaker or use the remote control to turn on the soundbar. 3. Increase the soundbar volume. You can use the remote control or the "+" button on the side of the speaker to turn up the volume. Do not mute the soundbar. If muted, press the mute button on the remote control to unmute it.
Connect TV via (HDMI ARC)/Optical/AUX	1. Plug the appropriate cable (HDMI/Optical/AUX) into both the TV and the soundbar. The HDMI cable needs to be plugged into the HDMI port of the TV with the ARC logo. 2. Power on both the TV and the soundbar. 3. Select the soundbar to the correct input mode (HDMI/ARC/Optical/AUX). Use the soundbar remote control to switch to the corresponding mode or short press the power button on the side of the soundbar to switch to the corresponding mode. 4. In the TV settings, set the TV's audio output to the corresponding connector type (HDMI ARC/Optical/AUX). Then set the TV's audio format to PCM. 5. If you have followed the above steps and there is still no sound from the Soundbar, the problem may lie in the TV's audio output settings. First, go to TV Settings and switch the audio output back to the TV's internal speakers. Then, change the audio output to HDMI ARC again (or the connection type you chose). This will usually refresh the output and fix the problem. Note: Some brands and models of TVs require CEC to be turned on in order to use the HDMI ARC feature. Refer to your TV's manual to set it up.

Troubleshooting

PROBLEMS	SOLUTIONS
Sound is coming from TV Speaker	Corded connection to the TV: 1. Make sure the connection is securely plugged in. You can also test by replacing the cable. 2. If you are using an HDMI connection, be sure to connect the Soundbar's HDMI cable to the TV's HDMI ARC port, not the standard HDMI port. If the TV does not have an ARC port, use a fiber optic cable to connect the Soundbar. 3. Make sure the soundbar is adjusted to the corresponding mode (HDMI ARC/Optical/AUX). 4. Make sure the TV's audio output is switched to the corresponding mode (HDMI ARC/Optical/AUX). 5. Make sure the TV's audio format is switched to PCM or Auto. Some TVs will automatically switch the audio format, if the automatic switching is not successful, please manually switch to PCM or Auto. 6. Turn off the soundbar and TV, unplug the connection cable, wait 30 seconds and then repeat the above operation. Bluetooth connection to the TV: 1. Make sure the Soundbar has been switched to Bluetooth mode. 2. Make sure the TV has turned on the Bluetooth mode and connected to "S-09". 3. Make sure the TV's audio output is switched to Bluetooth mode. 4. Make sure the TV's audio format is switched to PCM or Auto.
Soundbar not turning on	1. Check that the Soundbar's power cord is securely connected to the DC input socket. 2. Unplug the power adapter for at least one minute, then reconnect it. 3. Check that the Soundbar power connector is not loose and the power cord is not broken. Please feel free to let us know if there is a malfunction.
No HDMI ARC port on your TV	Connect the Soundbar to the TV using the fiber optic cable.
No HDMI ARC, or Optical port on your TV	Use Bluetooth to connect the Soundbar to your TV.
Intermittent or no audio from soundbar	1. Please try playing audio from another application or music service. 2. Check all cables and interfaces of the product for faults.

12

Troubleshooting

PROBLEMS	SOLUTIONS
Remote control does not work	1. Ensure that the batteries are correctly inserted. If necessary, replace the batteries. 2. Bring the remote control closer to the sound bar and make sure there are no obstacles in between. 3. Aim the remote control directly at the infrared receiver of the system.
Bluetooth device cannot be connected to the sound bar	1. Place the Bluetooth device close to the soundbar, with as few obstacles as possible between them. 2. Make sure the soundbar is not connected to another Bluetooth device. 3. If the soundbar has been connected to another Bluetooth device, the soundbar needs to be disconnected from the other Bluetooth device before the soundbar can connect to the new device using Bluetooth (Remove "Pair" from your phone/tablet's Bluetooth "Paired Devices" list). 4. Power off the device and soundbar, then restart the Bluetooth pairing process after rebooting.
Poor audio quality on soundbar playback	The Bluetooth reception is poor. Move the device closer to the Soundbar, or remove any obstacles between the device and the Soundbar.
The connected Bluetooth device connects and disconnects constantly	The Bluetooth reception is poor. Move the device closer to the Soundbar, or remove any obstacles between the device and the Soundbar.

13

Warranty

No worry about this purchasing!
30 days no reason money back guarantee, 2 year Warranty, 24 hours warm customer service and Lifetime technical support!
If you need help, please refer to the user manual or contact us for assistance.

How to Contact Us?
• Open the Amazon app and sign in to your account.
• Click "My Orders"-select your order.
• Click "Order Questions" write down your questions and send it to us.

FCC compliance statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
"RF" warning for Mobile device:
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

14