

 
Portable Karaoke Machine With 10.1" HD Touchscreen

Model: V-08



USER MANUAL

1 Items Included

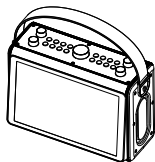

V-08 Karaoke
Machine
X 1



V-08
Microphone
X 2



USB-C
Charging Cable
X 2

 


HD OUT
Cable
X 1



User
Manual
X 1

2 Product Diagram

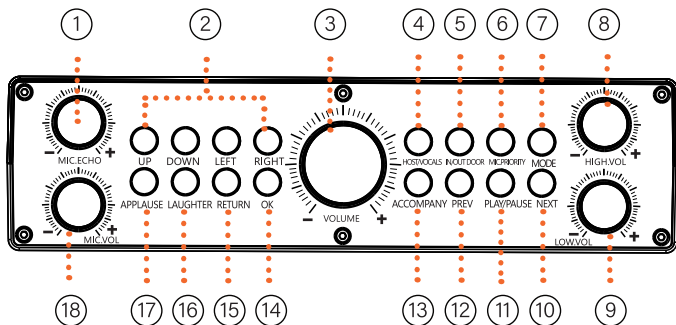

- ① **MIC ECHO knob** Turn the knob to adjust the echo level of MIC voice input.
- ② **Directional buttons** UP/DOWN button: Press to navigate through the file list or setting items. LEFT/RIGHT button: Press to increase or decrease the value, such as brightness level, volume level in the settings.

- ③ **Volume knob** Turn the knob to adjust the music playback volume.
- ④ **HOST/VOCALS button** Press to switch Host mode and Vocal mode.
- ⑤ **IN/OUT DOOR button** Press to switch Indoor and outdoor mode with different volume and sound settings.
- ⑥ **MIC Priority button** Press to enable or disable MIC Priority mode (MIC Priority mode automatically lowers the volume of the background music when using the microphone).
- ⑦ **MODE button** Press to select different Playback mode.
- ⑧ **High. Volume knob** Turn the knob to adjust the the volume of TREBLE.
- ⑨ **Low. Volume knob** Turn the knob to adjust the the volume of BASS.
- ⑩ **NEXT button** Press to skip to next track.
Press and hold to fast forward the track.
- ⑪ **PLAY/PAUSE button** Press to start or pause the music playback.
- ⑫ **Previous button** Press to skip to previous track.
Press and hold to fast rewind the track.
- ⑬ **Accompany button** Press to remove or add the vocals from a pre-existing track to create an instrumental accompaniment for singing along.

- 14

OK button

Press to confirm the selection or settings.
- 15

RETURN button

Press to return to previous screen.
- 16

LAUGHTER button

 
Press to add Laughter sound effect during/after a song.
- 17

APPLAUSE button

Press to add Applause sound effect during/after a song
- 18

MIC Volume knob

Turn the knob to adjust the volume of microphone voice input.

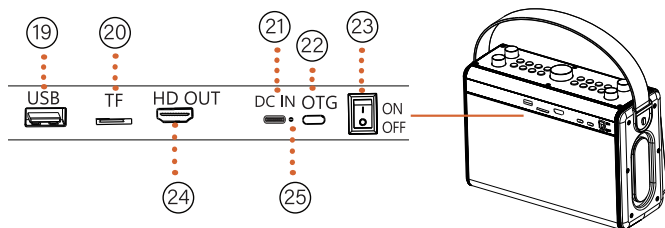

- 19

USB port

For USB audio source input.
- 20

TF Card Slot

For the audio source input from the TF Card.
- 21

DC IN (USB-C) port

For charging the device.
- 22

OTG port

Direct connect for high-quality audio. Hook up compatible devices like phones, computers or professional sound cards for superior sound.

- (23) **Power switch** Press to turn on/off the device.
- (24) **HD OUT port** Use the included HD OUT cable to connect to a TV, sending both video and audio signals to the larger screen.
- (25) **LED indicator** Indicates the charging status.



Volume buttons: Increase or decrease the volume of the microphone voice input

Power button: Press and hold for 2 seconds to turn on/off the microphone

3 Connect the microphone to the speaker

1. Power On the Karaoke Machine

- Press the power switch  to turn it on.
- The unit starts in Wi-Fi mode. Display and lights will activate.

2. Turn On the Microphone

- Hold the microphone power button for 3 seconds.
- Blue light + LED display indicate pairing mode.

3. Connect Microphone

- They pair automatically. Colorful light confirms connection.

4 How to Use

① WiFi Connection Guide

- Power on the machine to enter Android WiFi mode automatically. Voice confirms "Android Mode".
- Tap the WiFi icon on the toolbar, select network. The top status bar icon changes from grey to white when connected.
- Open any app (e.g. YouTube) or built-in player to start. Control via touchscreen, buttons, or mic knobs.

② Bluetooth Connection Guide

- Press the Mode button to select Bluetooth mode (voice prompt: "Bluetooth Mode").
- Enable Bluetooth on your device, select "V-08" to pair. Tone confirms connection.
- Control playback from your connected device or use karaoke machine/mic buttons.

③ USB/TF Card Usage

- Insert a USB drive or TF card (up to 128GB) into the corresponding port.
- Go to My Apps > Media Player > USB/TF Card on the home screen to access files.
- Select and play media files.

④ Download Additional Apps

- Our machine comes with pre-installed apps. For additional apps, simply access the Google Play Store from the home screen.

5 Specifications

V-08 Karaoke Machine

Operation	Button / Touch control
Display Size	10.1-inch HD touchscreen
Power Input	5V / 3 A
Battery Capacity	6000 mAh / 7.4V
Charging Time	6 hours
Playtime	Up to 4-6 hours
Built-in Memory	32G
TF card/USB drive	Supports up to 128G
Bluetooth Version	V5.3
Operation Range	33ft (10M)
Power consumption	40W
Dimension	11.02" × 7.48" × 4.33" / 280 x 190 x 110mm
Weight	98.8 oz (2.8Kg)

V-08 Karaoke Microphone

Power Input	5V / 1A
Battery Capacity	500 mAh
Charging Time	2 hours
Playtime	Up to 12 hours
S/N Ratio	> 75 dB
Bluetooth Version	V5.3
Operation Range	33ft (10M)
Length	7.5" / 190 mm
Weight	5.3 oz (150g)

6 Charging

① Charging the Karaoke Machine

- Use the included USB-C charging cable and 5V charger (not include) to charge the karaoke machine.

LED charging:  Charging

indication:  Fully charged

Charging Time : 5-6 hours

② Charging the microphone

- Use the included USB-C charging cable and 5V charger (not include) to charge the microphone.

LED charging:  Charging

indication:  Fully charged

Charging Time : 2 hours

7 Cautions

- When receiving the product, please use the included USB-C charging cable and 5V charger (not include) to charge the karaoke machine for 5-6h.
- To avoid strident sound, please do not put the microphones too close to the speaker during use.
- If you have any questions, please do not worry. Go to your order and click "Contact Seller", we'll do our best to help you!

8 FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Mobile device:

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

Product name : karaoke machine with screen

Model : V-08

FCC ID : 2BNFO-V08

Manufacturer : Shenzhen Tuobu Electronics Technology Co., Ltd.

Address : Top Step Industrial Co., Ltd. Unit 101, Building B1, Tongfu Industrial, Zone Heping Road, Heping Community, Fuhai Subdistrict, Bao'an District, Shenzhen