



04. Instructions On Product Usage

Seat Adjustment

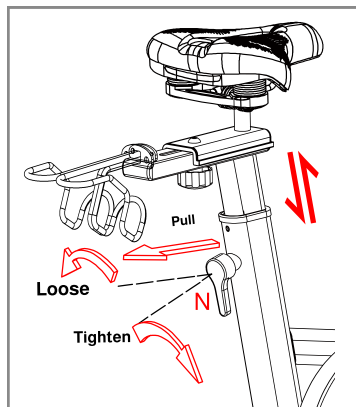

Seat Height Adjustment

As indicated by the arrow, loosen the Seat Height L-shape Pin Knob (N) with one hand and pull it outward. Grab the cushion with other hand, and pull it up (or down). After adjusting to the desired position, release (N) to lock the Seat Post (until a "click" sound is heard), then tighten the Pin Knob by turning it clockwise.

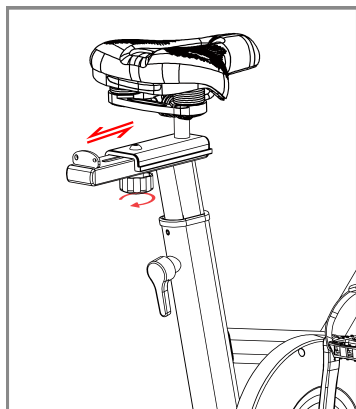


Seat Front-Back Adjustment

Rotate the seat adjustment knob counterclockwise to loosen it. Slide the seat forward or backward to the desired position, then tighten the knob securely.

04. Instructions On Product Usage


Handlebars adjustment

You can adjust the handrail height according to your stature. The adjustment method is consistent with that of the seat.

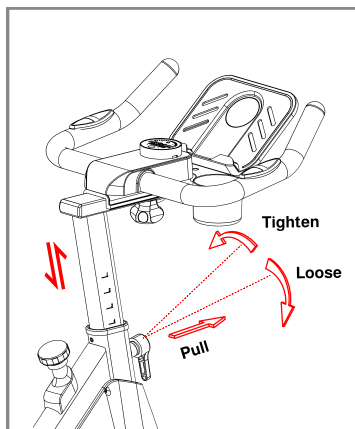

Height Adjustment

Rotate the L-shape Pin Knob counterclockwise to loosen and pull it outward. Move the handrail column up or down to the desired position. Align the Pin Knob with the corresponding hole on the column, then tighten by turning clockwise.

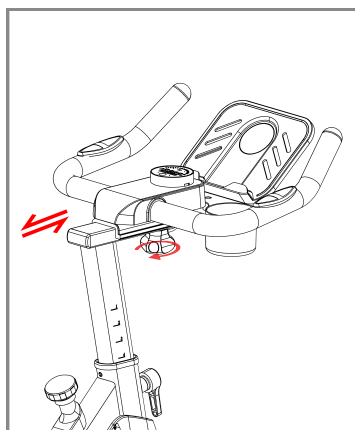

Front-Back Adjustment

Rotate the handrail knob clockwise to loosen. Slide the handrail forward or backward to the preferred position, then secure by turning the knob counterclockwise to tighten.