

正面

背面



D66



Matters Needing Attention

- ① Do not use this machine in extremely hot, cold, dusty, and humid environments.
- ② Do not drop, impact, or vibrate violently during use.
- ③ Make sure ventilation should be maintained around the body, otherwise it may cause an increase in temperature inside the machine and ultimately damage the wiring.
- ④ When moving the local device, first turn off and disconnect the corresponding control devices.
- ⑤ The surface of the speaker and the speaker should avoid contact with corrosive liquids and gases, and should not be placed in direct sunlight for a long time. If there is dust, it can be cleaned regularly with a clean soft cloth. If there are stains, they can be wiped with a non-reinforcing cleaning agent.
- ⑥ Do not press switches and control devices forcefully.
- ⑦ If the machine suddenly emits smoke or other abnormal phenomena, please shut down quickly, unplug the charging plug to avoid accidents, and contact the local dealer for repair.
- ⑧ Changes due to product performance and functionality will not be notified separately.
- ⑨ This product does not have dustproof, moisture-proof, and waterproof functions.
- ⑩ Please do not disassemble this machine without authorization to avoid danger.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body : Use only the supplied antenna.



Product name		Product name	
Purchase date		Customer name	
Contact			

Date	Defective phenomenon	Solution

1202, Block D, Building 1, Lianjian Industrial Park,
Huarong Road, Shanghenglang Community, Dalang Street,
Longhua District, Shenzhen City

gm@yongmaitech.cn

Panel Key Description

 10 **PRESET**
This knob has a compound function. When used for the first time, turning it to the right turns on the power. Otherwise turning it to the left turns off the power. To adjust the music volume control knob, turning left decreases the volume and turning right increases it.

 11 **REC VOL**
This knob is a wired or wireless microphone volume control. Left turn reduces volume, right turn increases volume.

 12 **REPEAT**
This knob is used to adjust the echo length of the microphone. Turning left reduces the echo and turning right to extend it. Adjust according to the environment and listening experience to avoid excessive whistling and harsh sounds.

 13 **MODE**
This key is a multifunctional composite key. Pressing this key once will allow the product to cycle between the USB flash drive, TF card, AUX (or FM radio, BT Bluetooth function) audio source.

 14 **PAUSE**
This key is a multifunctional composite key. When playing on a USB flash drive, TF card, or Bluetooth, pressing this key will also select the previous song being played. (With a radio model, when in listening mode, press this button to select the previous radio station for the current playback).

 15 **PAUSE/PLAY**
This key is a multifunctional composite key that can be used to cycle between "pause" and "play" when playing on a USB flash drive, TF card, or BT Bluetooth. (With a radio model, when in listening mode, pressing this button alone will automatically search for channels. After searching, you can listen).

 16 **NEXT**
This key is a multifunctional composite key. When playing on a USB flash drive, TF card, or BT Bluetooth, pressing this key alone will select the next song being played. (With a radio model, when in listening mode, press this button to select the next radio station for the current playback).

 17 **AUX AUDIO INPUT**
AUX audio input.

 18 **TF CARD**
TF card slot insertion automatic decoding switching mode for playing music.

 19 **USB**
Insert the USB flash drive to automatically decode and switch to playing music.

 20 **DC 5V**
Charging port, DC 5V plug for charging.

 21
Wired microphone or universal microphone signal input jack.

Sing to your phone through Wireless connection

1. Turn on the speaker power: Rotate the knob to turn on the speaker, The LED screen will display.
2. Bluetooth connection: Open the phone's Bluetooth and scan. After searching for "model", click Make pairing connections. When the connection is successful, The speaker will produce a warning sound.
3. Turn on the microphone: Insert the NO.5 battery, long press the microphone power button to turn it on, and the microphone will automatically pair with the speaker.

Play music: Open the music app on your phone, select your favorite song or accompaniment to start play. The volume of music can also be adjusted through your phone.

How to charge

1. When the battery level is too low, the product will automatically shut down.
2. Use a DC5V charger to connect to the charging port of the speaker or microphone for charging. The charging indicator light will turn red when charging, and will turn off when fully charged.

 Please use a matching charging line and voltage, otherwise there may be danger And equipment damage.