 


INSTRUCTIONS FOR USE

 
Models: KV-016

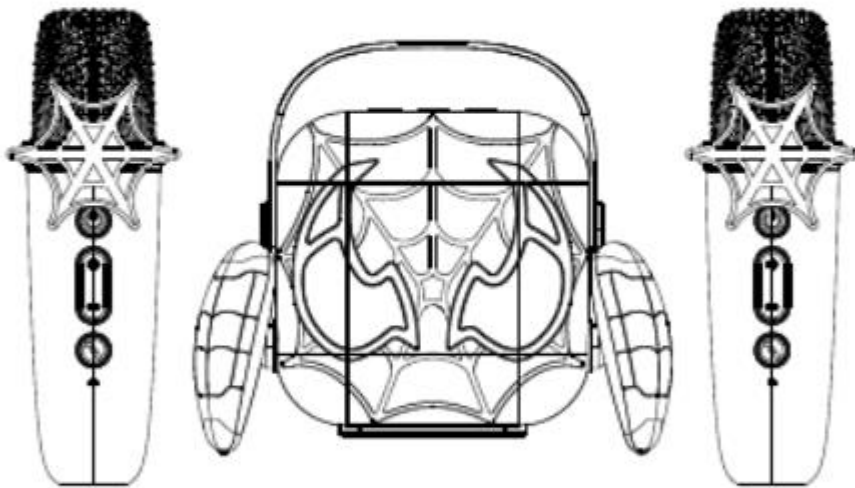


To better utilize the product's performance,
please read the user manual carefully.

Note: Please ensure to fully charge the kits
before first use.

Speaker Indication Diagram

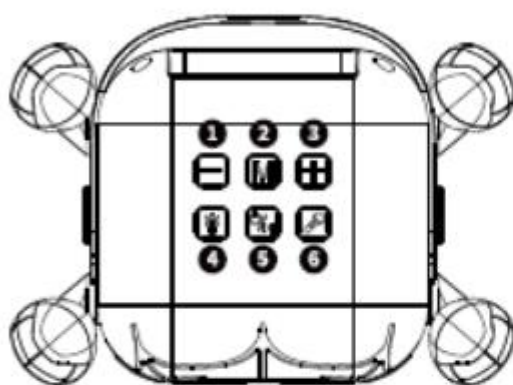


 - ① Long press: Prev song
Short press: Volume-
- ② Short press: Bluetooth /
TF Card mode switch
- ③ Long press: Next song
Short press: Volume+
- ④ Short press: Switch LED
lighting effect mode
Long press: LED light on/off
- ⑤ Long press: Power on / off
Short press: Play / Pause
- ⑥ Short press: Turn on /
off the original sound

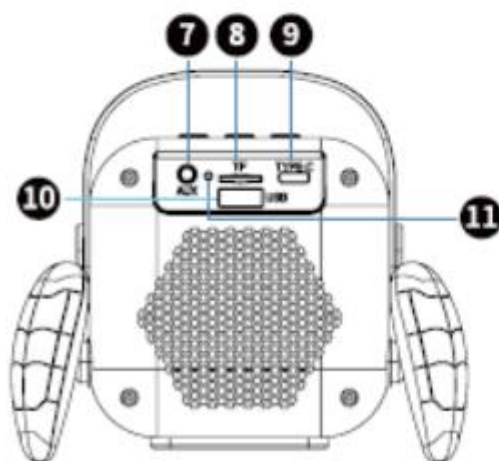

- ⑦ AUX
- ⑧ TF card slot
- ⑨ DC 5V charging port
- ⑩ USB socket
- ⑪ Indicator light: Blue light
on during operation / Red
light on during charging.

 
Mic Indication Diagram

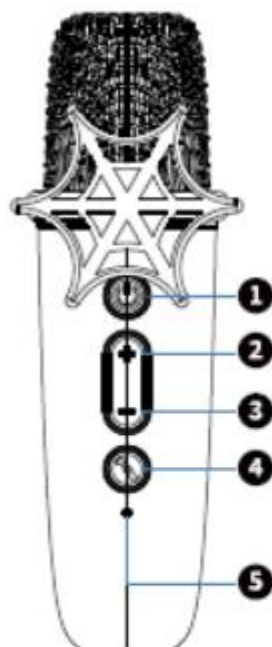

- ① Long press: Power on/off
Short press: Reverb/Music /
Mic volume adjustment
Double click: Play/Pause
- ② Long press: Prev song
Short press: Volume +
- ③ Long press: Next song
Short press: Volume -
- ④ Long press: Microphone sound off /on
Short press: Magical voice switch
Double click: Switch Original voice /
Accompaniment
- ⑤ Indicator light: Blue light on during
operation/ Red light on during charging.



 - ⑥ DC 5V charging port

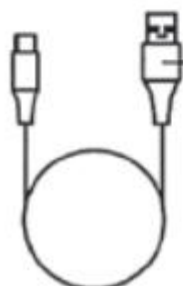

- ⑦ Type-C USB cable



Need help? Just scan

Bluetooth Connection

Connecting Bluetooth to a Phone:

1. Power on the speaker: Press and hold the power on/off button for 2 seconds to turn on the speaker, the indicator light will start flashing.
2. Bluetooth connection: Open the Bluetooth settings on your phone and scan for devices. Once you find "Spider Karaoke" in the search results, pair and connect to it. You will hear a prompt saying "Bluetooth connected" from the speaker.
3. Open the music app on your phone to start playing music.

Note: After connecting to the phone once, the Bluetooth will remember the connection and automatically reconnect when turned on. If you want disconnect the Bluetooth, please cancel pairing in your phone setting.

Mic Operating Instruction

1. Power on the microphone: Press and hold the power button for 2 seconds to turn on.
2. The indicator light will start flashing and the microphone will automatically pair with the speaker, the indicator light will stay solid when the pairing is successful.
3. Open your karaoke App or musical player and choose songs to sing. For best results, keep the microphone within 15 meters of the speaker.
4. Switch 3 volume adjustment modes: Short-pressing the power button on the microphone can switch between 3 volume adjustment modes: Reverb volume, Music volume, and Mic volume. Clicking the + or - buttons on the microphone allows you to adjust the corresponding volume.

Charging Description

1. When the battery level is too low, the product will automatically power off.
2. Please use a DC 5V 1A power adapter (not included) to charge the product. The indicator light will turn red during charging and will go off when fully charged.

Common Malfunction and Resolve Method.

Problem	Reason	Solution
No sound with speaker	The volume on the phone is off	Increase the volume on the phone B. Increase the volume on the speaker
The speaker cannot be powered on	The battery is off power	Charging the battery
The Bluetooth cannot be connected	It has connected with other phone The phone is too far away from the device	Disconnected the Bluetooth with other phone Bring the phone close to the device
Distortion of sound	The sound is too loud Battery is too low	Decrease the volume Charging the battery
No sound in TF card mode	Special formats not supported Don't read the card	A. Change the format of musics in MP3 or WAV B. Insert the TF card again
No sound with mic	The volume of mic is to low The volume of the mic in power off states	A. Increase the volume of MIC B. Press and hold the button with microphone graphic to turn on the microphone volume
The mic cannot be powered on	The battery is too low	Charging the battery
The sound of mic is stuck	The battery is too low	Charging the battery
Screaming	The mic toward speaker too closely Signal interference	A. Adjust the distance of mic and speaker B. Avoid the interference of obstacles

Specification

Model No: KV-016

Speaker: 4Ω6W

Charging voltage: DC 5V 1A

Bluetooth Version: 5.4

Charging Time: Microphone 2H / Speaker 4H

Usage time: 4-5 hours

Frequency Response Range: 100Hz-10KHz

Maximum Sound Pressure Level: >115dB 1Khz

THD<1%

Sound Mode: Reverb Mode

Rechargeable Battery: 18650 Battery



Need help? Just scan

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.