

Instructions for Use

Kids Handheld Walkie Talkie



WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Frequency: 462.725MHz
Address: 130 17th Street # 1347, Denver, CO 80202, United States
TEL: +1 303-728-8932

Company: YH CONSULTING LIMITED
Address: G10 YH Consulting Limited Office
1470 Centurian House, London Road,
Staines-upon-Thames, Surrey, TW18 4AG
TEL: +44 (0)194071868

Company: Crossbow GmbH
Address: Mainzer Landstr. 69, 60329
Frankfurt am Main
TEL: +49 69332967676

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

PRECAUCIONES:
RIESGO DE ASFAGARSE. Contiene
partes pequeñas. No recomendado
para niños menores de 3 años.

PRECAUCIONES:
RIESGO DE ASFAGARSE. Contiene
partes pequeñas/no recomendado
para niños menores de 3 años.

 


After-Sales Support

Scan the QR code for help and support!



After-Sales Service



Battery Indicator

1. The battery light will stay on after installing the batteries.
2. When the battery is low, the light will blink and voice quality may decrease. Please replace the batteries as soon as possible.
3. When the talk button is pressed and held, the device is in transmit mode, and the light blinks twice per second.

Caution

- Do not use outdoors during storms.
- Keep away from heat and water sources.

BATTERY SAFETY

1. Do not recharge non-rechargeable batteries.
2. Rechargeable batteries should only be charged under adult supervision (if removable).
3. Do not mix different types of batteries (alkaline, standard, or rechargeable).

EN

4. Never mix old and new batteries.
5. Batteries must be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the toy.

Instruction manual

1. Check the device for any damage before use. If broken, do not use it for safety reasons.
2. Remove the screw at the back and open the battery compartment. Insert 3 AAA batteries with the correct polarity. Replace the cover and secure it with the screw.
3. Press the switch button to turn on the device.
4. Double-click the speaking button on device A, and device B will ring.
5. Hold the device within 5cm to speak.
6. Press and hold the speaking button to talk, and release it to listen.



Coverage may vary depending on surroundings. Physical obstacles like hills or tall buildings may affect signal range.

 
EN

Soporte Postventa

Escanee el código QR para obtener ayuda y soporte.



Obtenga servicio postventa
(¡Scanee aquí!)



Indicador de batería

1. La luz indicadora de la batería permanecerá encendida después de instalar las pilas.
2. Cuando la batería esté baja, la luz parpadeará y la calidad de voz podría disminuir. Por favor, reemplace las pilas lo antes posible.
3. Cuando se presiona y mantiene el botón para hablar, el dispositivo está en modo transmisión y la luz parpadea dos veces por segundo.

Precaución

- No usar en exteriores durante tormentas.
- Mantener alejado de fuentes de calor y agua.

SEGURIDAD DE LAS BATERÍAS

1. No recargar baterías no recargables.
2. Las baterías recargables solo deben cargarse bajo supervisión adulta (si son extraíbles).
3. No mezcle diferentes tipos de baterías (alcalinas, estándar o recargables).

ES

4. Nunca mezclar baterías nuevas y usadas.
5. Las baterías deben insertarse con la polaridad correcta.
6. Las baterías agotadas deben ser retiradas del juguete.

Manual de instrucciones

1. Verifique el dispositivo para detectar daños antes de usarlo. Si está dañado, no lo use por razones de seguridad.
2. Retire el tornillo en la parte trasera y abra el compartimento de baterías. Inserte 3 pilas AAA con la polaridad correcta. Vuelva a colocar la tapa y asegúrela con el tornillo.
3. Presione el botón interruptor para encender el dispositivo.
4. Pulse dos veces el botón para hablar en el dispositivo A, y el dispositivo B sonará.
5. Sostenga el dispositivo a menos de 5 cm para hablar.
6. Mantenga pulsado el botón para hablar, y suéltelo para escuchar.



El alcance puede variar dependiendo del entorno. Los obstáculos físicos, como colinas o edificios altos, pueden afectar el alcance de la señal.

ES