


Technical drawing of a rectangular plate. The top horizontal edge is labeled 65mm. The right vertical edge is labeled 40mm. The drawing is a simple rectangle with these dimensions.

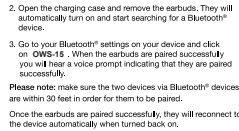

- **Answer The Call:** Touch the left or right earbud 1 time
- **Hang Up:** Touch the left or right earbud 1 time
- **Reject The Call:** Touch the left or right earbud for 2 seconds
- **Play/Pause Music:** Touch the left or right earbud 1 time
- **Increase Volume:** Touch the right earbud 3 times
- **Decrease Volume:** Touch the left earbud 3 times
- **Next Track:** Touch the right earbud 2 times
- **Previous Track:** Touch the left earbud 2 times
- **Activate Voice Assistant:** Touch the left or right earbud for 2 seconds release when you hear the beep

- Bluetooth® Version:
- Operating Distance: 30 Feet
- Battery Capacity: 200 mAh
- Music Playtime: 3 Hours
- Charge Time: 1 Hour

When the earbud battery is low it will play the warning sound until it shuts off.

Charging the Earbuds & Case

Charging the Earbud Case: Connect the earbud case and wireless charger by using the Type C USB cable provided.

Charging the Earbuds: Place the earbuds in the charging case. The case will automatically charge earbuds. The red LED light indicates the earbuds are charging and will turn off when they are fully charged.

The earbuds will automatically turn off once they are placed in the charging case. You can also long press the earphones for 5 seconds to power off.

[illegible][illegible]

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are

材质：105g铜板纸，四折，双面印刷