



尺寸:155*120mm

REMOTE CONTROL BUTTON DESCRIPTION

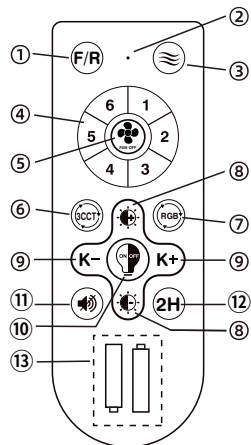

Model:WK-TQ6000
FCC ID:2BNOD-WK6000

WIRING SCHEMATIC DIAGRAM
FOR RECEIVER

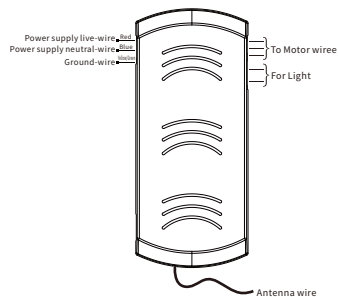

NOTES

- 1.During The Installation Process, The Power Must Be Cut Off.
- 2.Do Not Disassemble The Remote Control To Avoid Damaging The Internal Electronic Components
3. When The Emitter Cannot Control The Receiver, Please Check Is There Any Existence Of Similar Remote Controlled Products Nearby, Then Check Whether They Works, Because Remote Contralled Product With The Same Frequency will Disturb Each Other
- 4.Low voltage Of Battery will Affect The Sensitivity Of The Emitter And The Signal Reception Accordingly (the indicated Light will Flash Out Its Warning When The Battery Get Low Voltage), Must Replace If The Battery Is Getting Low Voltage.
- 5.When InstallingThe Fan,the fan Ceiling Cover Don't Press The Antenna (or Other Wire),it Is Easy To Breakdown The Wire And Short-circuited.

FUNCTIONINTRODUCTION

- ①Fan forward/reverse button
- ②Indicated Light
- ③Natural Wind
- ④1-6 Winds Speeds
- ⑤Fan Off
- ⑥3CCT color temperature switching
- ⑦RGB button
- ⑧Increase brightness and decrease brightness, click to change by 10%;Long press to change by 1%
- ⑨Infinite color adjustment, increasing and decreasing color temperature; Click **K-K+**to increase by 500K;Or lower the color temperature, long press plus or minus to change by 100K
- ⑩Lamp Switch
- ⑪Cancel the buzzer sound button,Press and hold this button for 3 seconds to eliminate the buzzing sound
- ⑫Timming Setting
- ⑬The Remote ControlIncludes Two AAA 1.5v Batterie

WARNING

- 1.In Case Of Problems Such As Remote Control, The First Time To Replace The Battery Attempt.
- 2.When The Emitter Cannot Control The Receiver, Please Check The Battery Switch Touching Normally Or Not, Correction Of The Positive And Negative, Full Or Empty Of The Power.
3. Please Remove The Battery If Not Used For A Long Time To Avoid Battery Aging And Leakage That May Damage The Remote Control.
4. Do Not Disassemble The Remote Control To Avoid Damaging The Internal Electronic Components.


KINDLY REMINDERS

- 1.The Remote Control And Receiver Have Been Coded, when The Emitter Cannot Control The Receiver, Please Check The Battery Switch Touching Normally Or Not, Correction Of The Positive And Negative, Full Or Empty Of The Power. If Not, Please Matching The Code Again.

Code Matching Process

After the receiver is powered off for 2 minutes, turn on the power switch and hear a "beep sound. Immediately press and hold the fan button for 2 seconds and hear a beep sound; Quickly press the light button again, and finally press the fan button again. hear the buzzer sound three times that the code has been successfully matched.

INSTRUCTION FOR DC MOTOR CEILING FAN
REMOTE CONTROL

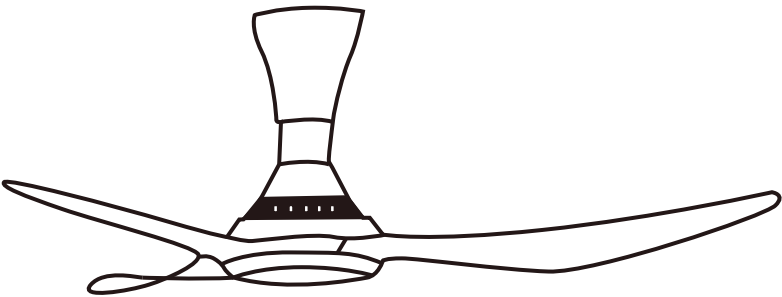

INNOVATION.ENERGY.SAVING · FUTURE

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 5mm between the radiator & your body.