



CLIP-ON BLUETOOTH SPEAKER

CLIP-ON BLUETOOTH SPEAKER



BAUHN®

English 02

Español 12

1

YEAR WARRANTY
AÑOS DE GARANTÍA

AFTER SALES SUPPORT
SERVICIO POSVENTA

715742

US



1 800 372 5717



NORTHAMERICA@BALCOBRANDS.COM

MODEL/ MODELO:
CE220834

12/2025

CONTENTS

1 Safety Warnings	3
2 In The Box	6
3 Functions	7
4 Charging The Speaker	7
5 Pairing The Speaker	8
6 Quick Controls	8
7 True Wireless Stereo Mode	9
8 Lighting Modes	9
9 Tech Specs	10
10 Warranty	11
10.1 Warranty conditions	11
11 After Sales Support	11

1 SAFETY WARNINGS

- Do not disassemble or throw into fire or water to avoid damage
- Keep this product in a dry place. Never place or use the product in wet or dirty conditions
- Do not squeeze or puncture the Speaker to avoid electrolyte leakage of lithium-ion battery
- Handle with care. Avoid dropping this device, especially on a hard surface. Do not crush, bend, deform, puncture, shred or submerge this device in liquid
- Do not use Speaker in severely hot, humid or corrosive environments, to avoid circuit damage and leakage
- Do not place too close to magnetic strips or chip cards (ID card, credit cards, etc.) to avoid magnetic failure
- Please keep a distance of at least 30cm between implantable medical devices (pacemakers, cochlear implants, etc.) and the Speaker, to avoid potential interference with the medical device
- Ensure children do not play with the Speaker. This is not a toy
- Do not use damaged power cords, plugs or loose electrical sockets
- Only use original cable and reputable third-party chargers
- Do not use a damaged cable or power charger to charge the Speaker
- Use only an adaptor with output of 5.0V DC to charge the Speaker. Incorrect voltage may cause damage to the product or associated accessories
- Do not clean the Speaker with harmful chemicals or detergents
- Misuse, dropping or excessive force may cause damage to the charging pad
- Do not touch the device, power cords, plugs, or the electric socket with wet hands or other wet body parts
- After charging your device, please remove the charging cable to avoid unnecessary consumption of the battery
- Never use the Speaker if any part of it is damaged
- Attention should be drawn to the environmental aspects of battery disposal
- Use of apparatus in moderate climates

CAUTION: RISK OF EXPLOSION:

- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures that a battery can be subjected to during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product shall not be connected to power supply source exceeding 5V D.C. 15W.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.



WARNING

- » Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

- » This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2 IN THE BOX




2



1. Clip-on speaker
2. USB-C charging cable
3. User guide*
4. Warranty card*

*Not pictured

3 FUNCTIONS

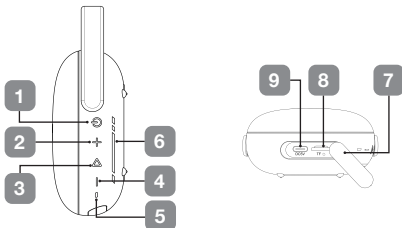

1. Power Button
2. Volume Up Button
3. Multi-function Play/Pause Button
4. Volume Down Button
5. LED Indicator
6. Colorful Lights
7. Silicone Water/Dust Cover
8. TF Card Slot
9. USB-C Charging Input

4 CHARGING THE SPEAKER

1. Open the silicone water resistant cover on the bottom side of the speaker.
2. Plug the USB-C end of the supplied charging cable into the USB-C port on the speaker.
3. Plug the USB-A end into a computer or 5V USB wall adapter (not included) and plug into a wall socket.
4. As the speaker charges, the LED indicator on right bottom side of the speaker will glow red. Once the speaker is fully charged the light will turn off.
5. Securely replace the silicone water resistant cover over the charging ports once charging is complete.

NOTE:

- » Use only the original USB-C charging cable to avoid any damage.
- » Remember to turn off the power supply before removing the charging cable.

5 PAIRING THE SPEAKER

1. Turn on the speaker by long-pressing the power button. You will hear a tone as the speaker powers on.
2. The indicator light will flash white, signaling that the speaker is in pairing mode.
3. On your device, open Bluetooth settings and search for available wireless devices.
4. Select CE220834 from the list to connect.
5. Once paired successfully, You will hear a tone confirming connection.

NOTE:

- » The speaker will switch to off mode after 10 minutes if Bluetooth is not paired.
- » The power consumption in off mode is less than 0.3W.

6 QUICK CONTROLS

You can control a variety of different functions by using the control buttons along the right side of the speaker.

FUNCTION	OPERATION
Power On/Off	Long press the  button to switch on and off
Increase Volume	Short press the  button
Decrease Volume	Short press the  button
Pause	Short press the  button while music is playing
Play	Short press the  button while music is paused
Previous Track	Long press the  button
Next Track	Long press the  button
Answer Phone Calls	Short press the  button during an incoming call
Hang Up Phone Calls	Short press the  button during a call to end it
Reject Incoming Phone Calls	Long press the  button to reject an incoming call
Switch Modes	Short press the  button to switch between Bluetooth mode and True Wireless Stereo mode
Switch Light Modes	Double press the  (power) button to toggle through lighting modes

7 TRUE WIRELESS STEREO MODE

TWS (True Wireless Stereo) mode lets you connect two of the same speakers for stereo sound.

1. Press and hold the power button on both speakers to turn them on.
2. Press and hold the Play button on one of the speakers until you hear a prompt. The speakers are now pairing in TWS mode.
3. If your phone is already connected, both speakers will emit a confirmation tone indicating successful pairing.
4. If your phone is not yet connected, the indicator lights on both speakers will flash white.
5. Go to your device's Bluetooth settings and select CE220834 to connect.
6. To exit TWS mode, long-press the play button on either speaker again, you will hear an alert when it successfully disconnects.

NOTE:

- » This mode only works with two of the same speakers.
- » Powering off a paired speaker will turn off both speakers.
- » All quick controls will apply to both speakers when paired.

8 LIGHTING MODES

Switching Light Modes - Double press the  (power) button to toggle through lighting modes, listed below:

Ice Blue:

- Lights up when the device is turned on.

Level 1:

- Plays colorful spectrum animation.
- Pauses colorful breathing effect.

Level 2:

- Colorful breathing effect (supports pause/play).

Level 3:

- Red and blue lights flash alternately on left and right sides (supports pause/play).

Level 4:

- Colorful streamer effect (supports pause/play).

Level 5:

- Colorful pulsation effect (supports pause/play).

Level 6:

- Plays colorful rhythm animation.
- Pause/play available at minimum volume.
- Lights turn off.

Level 7:

- Turns off all lights.

9 SPECIFICATIONS

- Bluetooth: 5.4
- Wireless distance: Up to 10 meters
- Power: 5 W
- Speaker size: 45mm
- Power Input: 5V DC 1A
- Play time: Up to 8 hours (based on 50% volume)
- Battery capacity: 800mAh
- Micro SD/TF card: Supports up to 128 GB
- Water Resistant: IPX5*
- Operating ambient temperature: 0- 45°C
- Storage and transportation ambient temperature: 0-45°C
- Altitude not higher than 2000m (air pressure not less than 80kPa)

*IPX5 is a waterproof rating indicating that a device can withstand low-pressure water jets sprayed from any direction.

10 WARRANTY

Please contact the store where you purchased the item for any warranty issues.

10.1 WARRANTY CONDITIONS

Dear Customer,

The **ALDI warranty** is a full warranty offering you the following benefits:

WARRANTY PERIOD

1 year from date of purchase.

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Failure to follow the safety and maintenance instructions.
- Other improper treatment or modification of the product.

After the expiration of the warranty period, you may wish to have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state but this warranty is not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law.

Neither the service company nor ALDI will assume any liability for data or settings stored on any returned product.

11 AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Bauhn. It is likely that we can resolve any problems for you via phone or email.

- Phone: 1 800 372 5717
- Email: NORTHAMERICA@balcobrands.com

Spanish manual
Manual en español

Spanish manual
Manual en español



**IMPORTED & SOLD
EXCLUSIVELY BY**

ALDI
BATAVIA,
IL 60510

**IMPORTADO Y VENDIDO
DE FORMA EXCLUSIVA
POR**

ALDI
BATAVIA,
IL 60510

MADE IN CHINA • HECHO EN CHINA

V1-0 12/25