




WIRELESS SPORTS EARBUDS

WIRELESS SPORTS EARBUDS

BAUHN®

English 02

 Español 13

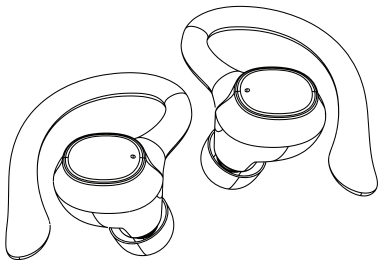

AFTER SALES SUPPORT
SERVICIO POSVENTA

717322



US

1-800-372-5715



northamerica@baltobrand.com

MODEL / MODELO: CE220871E

05/2026

SELLABLE ID / ID DE VENTA: 723645

1

YEAR WARRANTY
AÑO DE GARANTÍA

CONTENTS

1 Safety Warnings	4
2 Product Overview	8
3 Functions	9
4 Charging.....	10
5 Turning On/Off.....	10
6 Pairing	11
7 Touch Control Area	12
8 Technical Specifications.....	13
9 Warranty	14
9.1 Warranty conditions	14
10 After Sales Support	15

1 SAFETY WARNINGS

- Only use attachments/accessories specified by the manufacturer.
- To avoid accidental ingestion, keep the earbuds away from children and pets.
- The earbuds contain a lithium-ion battery, and may be hazardous if swallowed.
- If ingested, seek immediate medical attention.
- When not in use, store the earbuds in the charging case with the lid closed, and keep out of reach of children and pets.
- Do NOT use the earbuds at a high volume for any extended period.
- To avoid hearing damage, use your earbuds at a comfortable, moderate volume level.
- Turn the volume down on your device before placing the earbuds in/on your ears, then turn the volume up gradually until you reach a comfortable listening level.
- Use caution and follow applicable laws regarding mobile phone and headphone use if using the earbuds for phone calls while driving.
- Some jurisdictions impose specific limitations, such as single earpiece configuration, on the use of such products while driving.
- DON'T use the earbuds for any other purpose while driving.
- Focus on your safety and that of others if you use the earbuds while engaging in any activity requiring your attention, e.g., while riding a bicycle or walking in or near traffic, a construction site or railroad and follow applicable laws regarding headphone use, etc.
- Remove the earbuds or adjust your volume to ensure you can hear surrounding sounds, including alarms and warning signals.
- Do NOT allow children to use the earbuds. Contains small parts which may be a choking hazard.
- Do NOT submerge or expose the earbuds for extended period to water, or wear while participating in water sports, e.g., swimming, water-skiing, surfing, etc.
- To reduce the risk of injury, close supervision is necessary when the charging case is used near children.
- Do not expose charging case to water, rain, liquids or snow.
- Do not use the charging case in excess of its output rating.

- Do not use a charging case that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury to persons.
- Do not disassemble the charging case. Incorrect reassembly may result in risk of fire or injury to persons.
- Do not open, crush, or expose a charging case to fire, or excessive temperature. Exposure to fire or temperature above 45°C may cause explosion.
- Have servicing performed by a qualified repair person using only identical replacement parts.
- Do NOT make unauthorized alterations to this product.
- Use this product only with an agency approved power supply which meets local regulatory requirements (e.g., UL or ETL).
- Wipe off sweat from the earbuds and the charging case before charging.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.
- Excessive sound pressure from earphones and headphone can cause hearing loss.
- Attention should be drawn to the environmental aspects of battery disposal.
- Use only with charger base provided with the earbuds.
- Use of apparatus in moderate climates.
- This product contains batteries that are non-replaceable.
- For product disposal, please contact an electrical specialist or retailer to remove the batteries and dispose of them in an environmentally friendly manner.

WARNING

- » Do not touch the leaking battery fluid, as it may be corrosive or toxic.

HANDLING RECOMMENDATION

- » If battery leakage is detected, users are advised to wear protective gloves to avoid direct contact and dispose of the battery safely in accordance with local regulations.

EMERGENCY MEASURES

- » In case of contact with skin or eyes, rinse immediately with clean water and seek medical assistance.

CAUTION: RISK OF EXPLOSION:

- Do not dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.



WARNING

- » Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

- » This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC ID: 2BNW2-CE220871E

2 PRODUCT OVERVIEW

1



 
2



3



 4



1

Earbuds

2

Charging Case

3

3 Pairs of Silicone Tips

4

 
USB Charging Cable

5

User Guide*

*Not pictured

3 FUNCTIONS

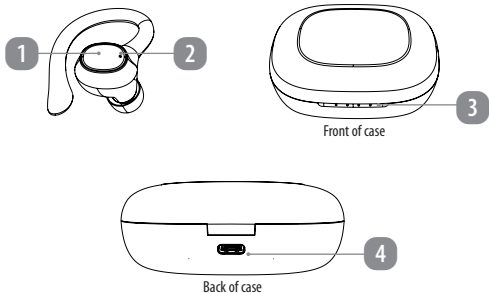

1 Touch Control Area

2 LED Indicator Light

3 Charging Case Indicator Lights

4 Charging Case Charging Port

5 Microphone (Internal)*

*Not pictured

NOTE

» Product rating label is on the bottom of charging case.

4 CHARGING

Charging Case

1. Connect the USB C end of the supplied USB C charging cable into the charging case charging port.
2. Connect the USB end of the charging cable into PC or AC/DC wall adaptor (not provided).

NOTE:

» Use a 5V DC USB output. Maximum current: 500mA.

While charging, the four white LED lights indicate battery level:

- 4 lights solid – 100% charged
- 3 solid, 1 flashing – 75% charged
- 2 solid, 1 flashing – 50% charged
- 1 solid, 1 flashing – 25% charged
- 1 flashing – Less than 25% charged

Earbuds

The earbuds will start charging when put back into the charging case. A red LED will be displayed if the earbuds are charging, once fully charged this light will turn off.

5 TURNING ON/OFF

Turning On

The earbuds will automatically turn on when removed from the charging case. To manually power the earbuds on, hold the touch surface for 5 seconds and you will receive a prompt.

Turning Off

The earbuds will automatically turn off when placed in the charging case. To manually power the earbuds off, hold the touch surface for 5 seconds and you will receive a prompt.

6 PAIRING

1. Place both earbuds into the charging case to activate the earbuds.
2. Take both earbuds out from the charging case, they will power on and connect with each other automatically.
3. The LED will flicker Red/Blue to indicate that the earbuds are now in pairing mode.
4. Enable Bluetooth on your device and select "CE220871E" from the list to connect.
5. Your device will show if it is connected successfully.

NOTE:

- » The earbuds will automatically connect to your last previously connected device. To connect to a new device first disconnect the earbuds from the currently paired device.
- » The earbuds will switch to off mode after 3 minutes if Bluetooth is not paired.
- » The power consumption of this product in off mode is less than 0.3W.

7 TOUCH CONTROL AREA

You can control various functions using the control buttons located on either the left or right side of the earbuds.

FUNCTION	OPERATION
Play/Pause Music	Short press either the left or right earbud
Next Track	Long press right earphone 2 seconds
Previous Track	Long press left earphone 2 seconds
Answer Call	With a call incoming short press either the left or right earbud
End Call	During a call short press either the left or right earbud
Reject Incoming Call	With a call incoming long press either the left or right earbud
Activate Voice Assistant	Double click either left earphone or right earphone to turn on voice assistant

8 TECHNICAL SPECIFICATIONS

- Driver Unit: 8mm
- Impedance: 16Ω
- Bluetooth Version: 5.4
- Transmission Range: Up to 10 metres
- Playback Time: Up to 5 hours based on 50% volume
- Power Input: DC 5V 500mA
- Earbuds Water Resistant: IPX5* (Not including charging case)

**An IPX5 rating means a device is protected against water jets projected from any direction. This level of protection is suitable for devices exposed to rain or splashes, but not for submersion in water.*

- Charging Case Battery:
 - Li-ion Polymer Battery
 - 3.7V, 400mAh, 1.48Wh
- Earbuds Batteries:
 - Li-ion Cell Battery
 - 3.7V, 40mAh. 0.148Wh

9 WARRANTY

Please contact the store where you purchased the item for any warranty issues.

9.1 WARRANTY CONDITIONS

Dear Customer,

The **ALDI warranty** is a full warranty offering you the following benefits:

WARRANTY PERIOD

1 year from date of purchase

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Failure to follow the safety and maintenance instructions.
- Other improper treatment or modification of the product.

After the expiration of the warranty period, you may wish to have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state but this warranty is not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law. Neither the service company nor ALDI will assume any liability for data or settings stored on any returned product.

10 AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Bauhn.

It is likely that we can resolve any problems for you via phone or email.

- Phone: 1 800 372 5717
- Email: northamerica@balcobrands.com

Spanish manual
Manual en español

Spanish manual
Manual en español



**IMPORTED & SOLD
EXCLUSIVELY BY**

ALDI
BATAVIA,
IL 60510

**IMPORTADO Y VENDIDO
DE FORMA EXCLUSIVA
POR**

ALDI
BATAVIA,
IL 60510

MADE IN CHINA • HECHO EN CHINA

**V1-0
05/2026**