




PORTABLE SPEAKER

PORTABLE SPEAKER

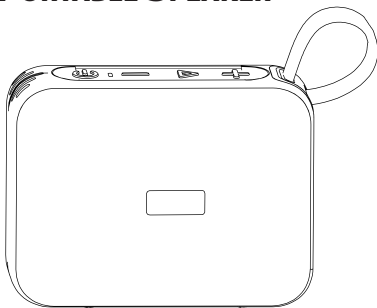

BAUHN®

English 02
Español 13

AFTER SALES SUPPORT
SERVICIO POSVENTA

717322



US

1-800-372-5715



northamerica@balcobrand.com

MODEL / MODELO: CE2208715
SELLABLE ID / ID DE VENTA: 723645

05/2026

1

YEAR WARRANTY
AÑO DE GARANTÍA

CONTENTS

1	Safety Warnings	4
2	Product Overview	7
3	Charging The Speaker	8
4	Pairing The Speaker	8
5	Quick Controls	9
6	Auto-off Timer	9
7	True Wireless Stereo Mode	10
8	Technical Specifications	11
9	Warranty	12
	9.1 Warranty conditions	12
10	After Sales Support	13

1 SAFETY WARNINGS

- Do not disassemble or throw into fire or water, to avoid damage.
- Keep this product in a dry place. Never place or use the product in wet or dirty conditions.
- Do not squeeze or puncture the Portable Speaker to avoid electrolyte leakage of lithium-ion battery.
- Handle with care. Avoid dropping this device, especially on a hard surface. Do not crush, bend, deform, puncture, shred or submerge this device in liquid.
- Do not use Portable Speaker in severely hot, humid or corrosive environments, to avoid circuit damage and leakage.
- Do not place too close to magnetic strips or chip cards (ID card, credit cards, etc.) to avoid magnetic failure.
- Please keep a distance of at least 30cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the Portable Speaker, to avoid potential interference with the medical device.
- Ensure children do not play with the Portable Speaker. This is not a toy.
- Do not use damaged power cords, plugs or loose electrical sockets.
- Only use original cable and reputable third-party chargers.
- Do not use a damaged cable or power charger to charge the Portable Speaker.
- Use only an adaptor with output of 5.0V DC to charge the Portable Speaker. Incorrect voltage may cause damage to the product or associated accessories.
- Do not clean the Portable Speaker with harmful chemicals or detergents.
- Misuse, dropping or excessive force may cause damage to the charging pad.
- Do not touch the device, power cords, plugs, or the electric socket with wet hands or other wet body parts.
- After charging your device, please remove the charging cable to avoid unnecessary consumption of the battery.
- Never use the Portable Speaker if any part of it is damaged.
- Attention should be drawn to the environmental aspects of battery disposal.
- Use of apparatus in moderate climates.

CAUTION: RISK OF EXPLOSION:

- If the battery is replaced by an incorrect type.
- If the battery is subjected to high or low extreme temperatures that a battery can be subjected to during use, storage or transportation.
- If the battery is subjected to low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product shall not be connected to power supply source exceeding PS1. 5V d.c. 15W.
- This product contains battery that is non-replaceable.
- For product disposal, please contact an electrical specialist or retailer to remove the batteries and dispose of them in an environmentally friendly manner.
- Warning: Do not touch the leaking battery fluid, as it may be corrosive or toxic.
- Handling Recommendation: If battery leakage is detected, users are advised to wear protective gloves to avoid direct contact and dispose of the battery safely in accordance with local regulations.
- Emergency Measures: In case of contact with skin or eyes, rinse immediately with clean water and seek medical assistance.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.



WARNING

- » Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE

- » This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2 PRODUCT OVERVIEW

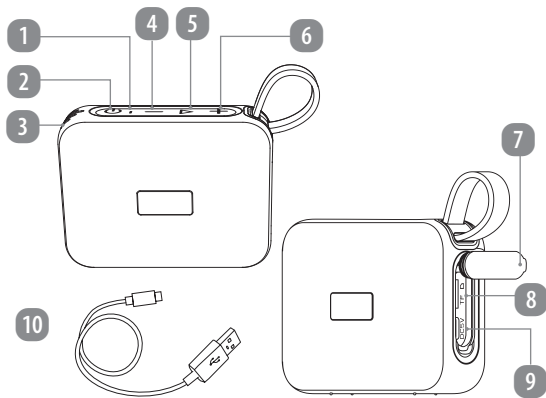

- | | | | |
|---|-----------------|----|---------------------------|
| 1 | LED Indicator | 7 | Silicone Water/Dust Cover |
| 2 | Power Button | 8 | SD/TF Card Slot |
| 3 | Party Lights | 9 | USB-C Charging Input |
| 4 | Volume - Button | 10 | USB Charging Cable |
| 5 | Play Button | 11 | User Guide* |
| 6 | Volume + Button | | |

*Not pictured

3 CHARGING THE SPEAKER

1. Open the silicone water resistant cover on the right hand side of the speaker
2. Plug the USB-C end of the supplied charging cable into the USB-C port on the speaker.
3. Plug the large connector into the USB port on a computer or a 5V DC USB adapter (not included) and plug into a wall socket.
4. As the speaker charges, the LED indicator on top of the speaker will glow red. Once the speaker is fully charged the light will turn off.
5. Securely replace the silicone water resistant cover over the charging ports once charging is complete.

NOTE

- » Charge only with 5V DC 500mA input
- » Use only the original USB-C charging cable to avoid any damage
- » Remember to turn off the power supply before removing the charging cable.

4 PAIRING THE SPEAKER

1. Turn on the speaker by long-pressing the power button. You will hear a tone as the speaker powers on.
2. To indicate the speaker is searching for a device another alert will sound and the LED indicator light on top of the speaker will flash blue.
3. On your device, search for wireless devices in the bluetooth settings.
4. Select CE220871S from the list to connect.
5. You will hear an alert sound once paired successfully and the LED indicator will stay a solid blue.

5 QUICK CONTROLS

You can control a variety of different functions by using the control buttons along the top of the speaker.

FUNCTION	OPERATION
Increase Volume	Short press  button
Decrease Volume	Short press  button
Pause	Short press  button when music is playing
Play	Short press  button when music is paused
Previous track	Long press  button
Next Track	Long press  button
Light modes	Double press the  button to switch between light modes

6 AUTO-OFF TIMER

The auto-off timer conserves the battery when the speaker is operating on battery power. The speaker switches off when audio has stopped and buttons have not been pressed for 10 minutes.

To wake the speaker, press the Power button.

In power-off mode, the power consumption is less than 0.3W.

7 TRUE WIRELESS STEREO MODE

TWS (True Wireless Stereo) mode lets you connect two of the same speakers for stereo sound.

1. Turn on both speakers by long-pressing the power button.
2. Long-press the play button on one speaker until you hear an alert. The speakers are now paired in TWS mode.
3. If you are already connected to the speakers the indicator lights on both speakers will glow solid blue.
4. If your phone isn't already connected the indicator lights will flash blue on both speakers.
5. Search for CE220871S in your devices bluetooth settings to connect.
6. To exit TWS mode, long-press the play button on either speaker again, you will hear an alert when it successfully disconnects.

NOTE

- » This mode only works with two of the same speaker.
- » Powering off a paired speaker will turn off both speakers.
- » All quick controls will apply to both speakers when paired.

8 TECHNICAL SPECIFICATIONS

- Bluetooth: 5.3
- Wireless Distance: Up to 10 metres
- Power: 6W
- Speaker Size: 45mm
- Power Input: DC 5V 0.5A
- Charging Time: 10 Hours
- Play Time: Up to 10 hours based on 50% volume
- Micro SD/TF Card: Supports up to 32GB
- Water Resistant: IPX7*

**IPX7 means a device is protected against the effects of temporary immersion in water, specifically up to 1 meter for 30 minutes*

- Battery:
 - Li-ion Battery
 - 3.7V, 1000mAh, 3.7Wh

9 WARRANTY

Please contact the store where you purchased the item for any warranty issues.

9.1 WARRANTY CONDITIONS

Dear Customer,

The **ALDI warranty** is a full warranty offering you the following benefits:

WARRANTY PERIOD

1 year from date of purchase

The warranty does not cover damage caused by:

- Accident or unanticipated events (e.g. lightning, water, fire).
- Improper use or transport.
- Failure to follow the safety and maintenance instructions.
- Other improper treatment or modification of the product.

After the expiration of the warranty period, you may wish to have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state but this warranty is not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law. Neither the service company nor ALDI will assume any liability for data or settings stored on any returned product.

10 AFTER SALES SUPPORT

If you experience any issues with this product or its performance is not what you had expected, please contact us at Bauhn.

It is likely that we can resolve any problems for you via phone or email.

- Phone: 1 800 372 5717
- Email: northamerica@balcobrands.com

Spanish manual
Manual en español

Spanish manual
Manual en español



**IMPORTED & SOLD
EXCLUSIVELY BY**

ALDI
BATAVIA,
IL 60510

**IMPORTADO Y VENDIDO
DE FORMA EXCLUSIVA
POR**

ALDI
BATAVIA,
IL 60510

MADE IN CHINA • HECHO EN CHINA

**V1-0
05/2026**