

# CAR REMOTE CONTROL INSTRUCTION MANUAL

## CONTENTS

- REMOTE KEY FOB FUNCTIONS
- FCC COMPLIANCE STATEMENT

---

## REMOTE KEY FOB FUNCTIONS

The functions described below are specific to this remote key fob. Please note that not all functions are available on every vehicle model.

Primary Access Functions

### 1. Lock (L)

Locks all doors and the trunk/tailgate.

### 2. Unlock (U)

Unlocks all doors.

### 3. Trunk / Trunk Hold (T / T Hold)

- Press T: Unlocks and opens the trunk.
- Press & Hold T (Hold): In some models, allows trunk opening without unlocking other doors.

### 4. Tailgate / Hatchback (TG / H / H Hold)

Unlocks and opens the rear tailgate or hatchback.

Hold function may be available for partial opening or operation without full door unlock.

### 5. Panic / Find My Car (P / P Hold)

- Press P: Activates the alarm (horn and lights) to locate your vehicle or for emergency purposes.
- Press & Hold P (Hold): May trigger an extended alarm or a different alert pattern.

Remote Start & Climate Pre-Conditioning

### 6. Remote Start (RS)

Starts the engine remotely from outside the vehicle to pre-heat or pre-cool the interior. This function does not affect the active entry system.

### 7. Air Conditioning (AC)

Activates the air conditioning system during a remote start session.

### 8. Heater (HEAT)

Activates the heating system during a remote start session.

#### **9. Fan (F)**

Controls the fan speed for the climate control system during remote operation.

### Door & Window Control

#### **10. Power Windows (W)**

- Press & Hold Unlock Button: Opens all windows remotely.
- Press & Hold Lock Button: Closes all windows remotely.

#### **11. Right Sliding Door (RSD)**

Opens or closes the power sliding door on the right side of the vehicle.

#### **12. Left Sliding Door (LSD)**

Opens or closes the power sliding door on the left side of the vehicle.

#### **13. Power Back Door (RBD)**

Powers the main rear door or tailgate open or closed.

#### **14. Rear Door / Rear Van Door (RD / RVD)**

Unlocks and opens the designated rear door.

### Lighting & Information

#### **15. Headlights (HL)**

Remotely turns on the headlights for a set duration.

#### **16. Horn (HORN)**

Remotely sounds the vehicle's horn.

#### **17. Hazard Lights (HAZ)**

Activates the hazard warning flashers.

#### **18. Information (INFO)**

Provides feedback on vehicle status (e.g., door lock status, window closure).

### Specialty & Auxiliary Functions

#### **19. Alarm Sensor (ALARM)**

Disables the interior motion sensors. Use this function if leaving pets or children in the vehicle to prevent false alarms.

#### **20. Front Luggage Unlock (HR)**

Unlocks the front luggage compartment (e.g., frunk in some electric vehicles).

**21. Convertible Top (C)**

Operates the convertible soft top or hardtop.

**22. Air Suspension (AS)**

Adjusts the vehicle's ride height remotely.

**23. Fuel Flap (GL)**

Unlocks the fuel filler flap.

**24. Charging Port (CH)**

Unlocks the charging port for electric vehicles.

---

**FCC COMPLIANCE STATEMENT**

**FCC ID: 2BNXJ-TQ8-FOB-4F26**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.