 


Digital Camera User Manual

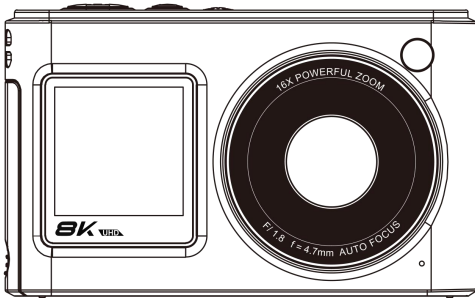

Catalogue

Catalogue	1
Preface	3
Camera features	3
Camera usage tips	4
Storage card usage tips	5
Preparations before use	6
Camera components	12
Turning the camera on and off	16
Format the storage card	16
Camera settings	18
Camera screen icon	20
Take photos and videos	24

Selfie Mode	31
Flash Mode	32
Fill light Mode	33
Set date and time, and add a watermark	34
Replay Mode	35
Connect to camera Wi-Fi	37
Download camera photos and videos to the computer	39
Webcam	40
Camera parameters	41
Frequently Asked Questions	43
FCC Warning Statement	45

Preface

Thank you for purchasing our digital camera. Before using the camera, please be sure to read and understand the relevant content of "Safety Matters". Please keep this manual properly for future reference.

It is recommended to take a few non-essential images before capturing important ones to ensure that you are operating the camera correctly.

The interface illustrations and camera schematics in this manual are examples from the product development stage. If some functions are supplemented or modified through camera firmware upgrades, the content of the manual may differ from the actual functions. Please refer to the actual camera information.

Camera features

- Front & Rear Displays
- 96 million pixels
- 8K high-definition video recording
- 480M pixels/second color processing
- High-speed continuous shooting
- HDR high dynamic imaging
- Wi-Fi image transmission
- Webcam

Camera usage tips

Camera safety and operation

- Please do not disassemble or repair the camera yourself.
- Avoid exposing the camera to extreme temperatures or humid environments.
- When transitioning from a cold environment to a warm one, one must adapt gradually to prevent condensation.
- Do not press the lens hard or expose it to direct sunlight for extended periods.
- Clean with a slightly damp soft cloth only, and avoid using chemical solvents.
- Handle with care to avoid impacting the camera's display screen.

Camera usage warning

- Do not point the flash directly at people's eyes at close range, as it may cause discomfort or injury.
- Do not operate the camera while walking or driving to prevent accidents.
- Do not allow the camera strap to entangle around a child's neck, as it poses a risk of suffocation.

Camera maintenance tips

- When the camera is not in use, please store it in a cool and dry place and remove the battery.
- Please wear a lanyard when using the camera to prevent it from accidentally falling.
- Using a camera bag can prevent scratches on the lens and screen.

- When cleaning the lens, please gently blow away the dust first, and then wipe it with a cloth specifically designed for optical equipment. If necessary, Lens cleaning solution can be used.
- Do not use organic solvents to clean the camera.
- Avoid touching the lens directly with your hands, as dirt on the lens can affect the imaging quality.

Storage card usage tips

Formatting and compatibility

- The new card needs to be formatted before its first use, and cards previously used in other devices also need to be reformatted.
- Do not directly use a memory card that has been formatted by another camera, video recorder, or card reader.

Operational precautions

- Before inserting or removing the memory card, turn off the camera power.
- Avoid bending, dropping, or squeezing the memory card, and keep it away from strong magnetic/electric fields.
- It is normal for the memory card to become slightly warm after prolonged use.

Data protection

- Do not power off or remove the card when recording, deleting, formatting, or reading data.
- Regularly back up important data to other storage devices.

Preparations before use

Inspect the items inside the package

1. Upon purchase, the package includes the following camera and standard accessories.
2. If you find any missing or damaged parts, please contact the dealer where you purchased the camera.



Camera,



 
USB cable,



Lithium battery,




Lanyard,



Camera bag,



 
Lens cloth,



User manual

Install the lanyard

 
1. Before installing the lanyard, as shown in the picture, first straighten the end of the lanyard.
2. Then locate the lanyard hole on the camera, thread the lanyard through the hole, and tie it securely.
3. If installation is not easy, you can use tweezers or a toothpick to assist in securing the lanyard.
4. After installing the lanyard, tighten it to ensure it doesn't loosen.

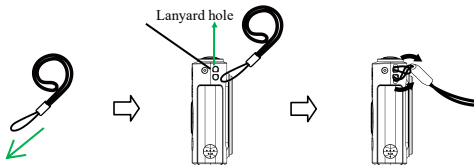

Insert storage card

1. This camera supports Micro SD cards (4-1TB) and SDHC Class 6 cards.
2. Turn off the camera, open the battery compartment cover, follow the icon prompt next to the card slot, ensure that the metal terminal surface of the memory card is facing the same direction

 as the screen, insert the memory card into the card slot until it locks into place, and finally close the battery compartment cover.

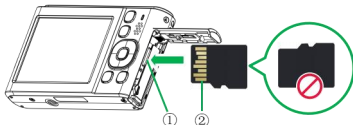

① Card slot ② Metal terminal

⚠ Please insert the memory card in the correct orientation to avoid damaging the card or the camera.

⚠ Please do not insert a damaged or deformed memory card into the card slot with force, as this may damage the card slot.

⚠ New memory cards or memory cards that have been used in other devices must be formatted on this camera.

Remove the memory card

Press and release the memory card, it will automatically eject, and then pull out the memory card.

 
⚠ Before replacing the memory card, please turn off the camera power first.

⚠ Do not remove the memory card when it is in a read-write state.




Insert the battery

1. Slide the battery compartment cover outwards to unlock and open it.



 2. Insert one end of the battery's metal electronic contact. Enter the battery compartment and push inward until you reach the battery. It is locked in place by the battery latch.

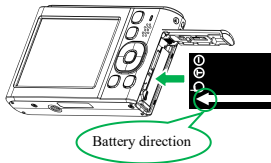

3. Close the battery compartment cover and slide it inward to secure it.



⚠ Please ensure that the battery compartment cover is closed before using the camera.

Remove the battery

Please turn off the camera before opening or closing the battery compartment cover. To remove the battery, slide the battery latch clockwise in the direction of the arrow, and the battery will automatically pop out. The battery will automatically pop out, and then you can remove it.

⚠ If you are unable to remove the battery yourself, please contact an officially authorized dealer for assistance. Do not apply excessive force during the operation.

 
⚠ Do not remove the battery when the memory card is in read-write mode.



Battery charging

1. The camera battery is low. The following methods can be used to charge the camera:


- ① Use a Type-C/USB cable paired with a 5V charger to charge the camera;
- ② Connect the camera to the computer using a Type-C/USB cable.

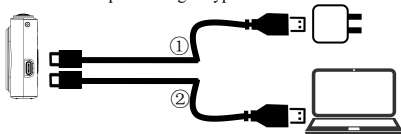

2. When charging the camera, the indicator light will remain red. It is recommended to charge while the camera is powered off. It is recommended to charge the camera when it is turned off.
3. When the battery is fully charged, the indicator light will turn off. Please unplug the USB cable from the camera.







 
4. The camera battery icon displays the battery level currently in use, with the battery level indicated by battery bars. When the battery level drops below 10%, the battery bar icon turns red.

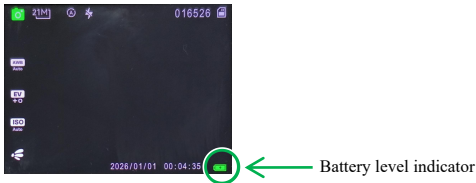

Camera components

     *The image is for reference only, please refer to the actual product

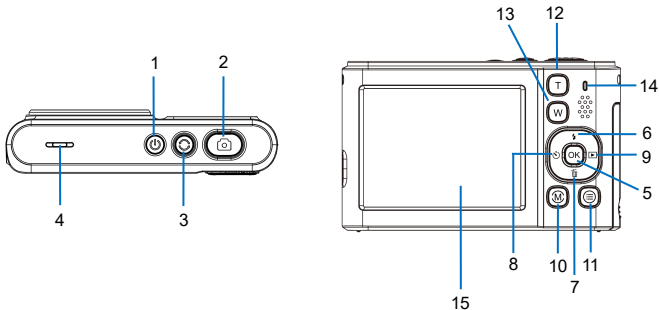

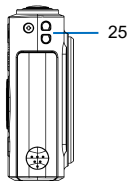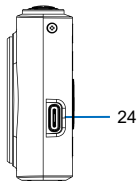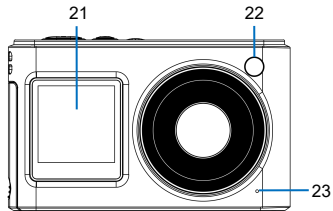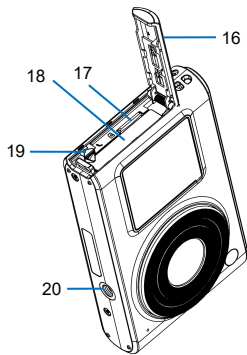


No.	Name	Function
1	Power button	Long press for 1 second to turn on / Long press for 2 seconds to turn off
2	Shutter button	The shutter button for taking photos and recording videos
3	Front function key	Toggles front screen display and activates selfie mode
4	Speaker holes	/
5	OK button	Confirm button; pause/resume video playback.
6	Up key/ Flash button	Menu selection; Switch flash mode (for photography); switch fill light mode (for video recording).
7	Down key/ Delete key	Menu selection; After taking a photo/video, pressing this button can quickly delete it.
8	Left button/ Timed photo button	Menu selection; Timed photo button (with adjustable timed photo countdown: 2s/5s/10s).
9	Right-click/ Replay button	Menu selection; Turn on playback mode to view photos and videos
10	Mode key	Switch shooting modes: Photo Mode, Video Mode, Slow Motion Mode, Scene Mode, Filter Mode, Night Scenery Mode, Landscape Mode, Portrait Mode
11	Menu key	Open menu or exit menu
12	T key	Adjust the focal length (for taking photos or recording videos); Zoom in on the photo (to view it); Adjust the volume up (when

		playing video).
13	W key	Adjust the focal length (for taking photos or recording videos); Zoom out on the photo (to view it); Adjust the volume down (when playing video).
14	Indicator light	Red light on: The camera is charging; Green light on: The camera is in standby mode; Blue light flash: Taking a photo; Blue light slow flash: Recording a video.
15	Rear Main Screen	2.8-inch IPS LCD screen
16	Battery cover	Battery and memory card locations
17	Memory card slot	Install the memory card
18	Battery compartment	Install the batteries
19	Battery latch	Fixed battery
20	Tripod mount	Install the tripod (with 1/4 inch standard screw hole)
21	Front Secondary Screen	1.54-inch TFT LCD display
22	LED light	/
23	MIC hole	Sound pickup
24	USB	Type-C port
25	Lanyard hole	Install the camera strap

Turning the camera on and off

 1. Long press the power button "  " for 1 second to turn on the camera.
2. Power off: When the camera is turned on, press and hold the power button for 2 seconds to turn it off.



Power button

(Automatic shutdown: When the camera's standby time reaches the set automatic shutdown time, the camera will automatically shut down to save power.)

Format the storage card

 
1. After installing the memory card, press the power button to turn on the device, and then press the menu button "  " to enter the menu page.
2. On the menu page, right-click and select System Settings "  " .
3. In the system settings interface, press the Down key "  ", locate the "Format Memory Card" option, and press OK to proceed.

4. In the formatting page, press the up or down arrow key to select Yes, then press OK to format.
5. After formatting is complete, press the menu button "☰" again to exit the menu mode.



- ⚠ Please do not accidentally click the storage card formatting option during use.
- ⚠ After formatting the storage card once, you do not need to format it again. (The first formatting is only to match the camera settings)
- ⚠ It is recommended that you regularly back up your photos to your computer.
- ⚠ If you want to reformat the storage card, please make sure to back up important data, as reformatting will erase all data on the storage card, including photos, videos, documents, etc. Once formatted, these data cannot be recovered.

Camera Settings

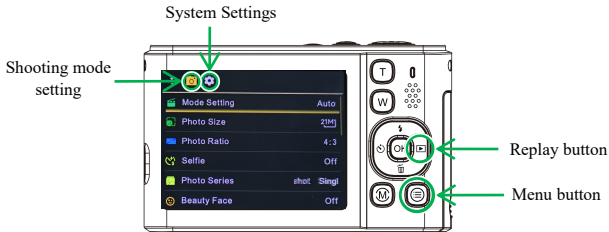

Camera system settings " ⚙ "

After turning on the camera, press the Menu button " ☰ " to enter the menu page. Press the Right button to select the system settings icon " ⚙ " and open system settings. Press the Up/Down buttons to select a submenu, then press the OK button to enter the submenu for configuration. Press the OK button to save the settings. Then press the Menu button " ☰ " to exit system settings.

Photo Settings and Video Settings


On the photo/video preview interface, press the Mode button "M" to open the mode selection page. In the mode selection page, press the Left/Right buttons to select any mode, then press the OK button to confirm and open that shooting mode. Press the Menu button "⊖" to enter the menu page. Press the Left/Right buttons to select the shooting mode setting icon (e.g., [] / []) to open the corresponding shooting mode settings. Then press the Up/Down buttons to select a submenu, and press the OK button to enter the submenu for configuration and saving. Afterwards, press the Menu button "⊖" to exit the shooting mode settings.

Shooting mode settings.

Playback Settings In photo/video preview mode, press the Playback button "▶" to enter playback mode. Then press the Menu button "⊖" to open the playback menu page. Press the Left/Right buttons to select the icon "⏏" to open playback settings. Photo files can be deleted, write-protected, printed, cropped, or played in a slideshow. Video files can be deleted or write-protected. Select a submenu to configure and save the settings, then press the Menu button "⊖" to exit playback settings.

Camera screen icon

 Photo Mode screen icon

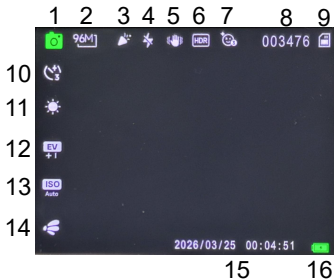

No.	Icon name	Instructions
1	Shooting Mode	Photography mode icon
2	Image size	The photo pixel set in the current camera settings
3	Mode Setting	Select the corresponding scene, and the camera will automatically match the more suitable settings

4	Flash mode	Press the flash button "  " to switch between flash modes: Turn off flash/ Auto flash/ Force flash
5	Image Stabilization	Prevents camera shake from affecting image clarity.
6	High Dynamic Range (HDR)	Expand the recordable and presentable brightness range to fully present the true shading levels
7	Beauty	It can beautify portraits
8	Number of photos that can be taken	The number of photos that can be taken with the current camera memory
9	Memory card	Is the storage card installed
10	Self-timer	You can set the countdown for timed photos: 3s / 5s / 10s.
11	WB (White Balance)	Under different color temperatures of light sources, the white in the image is restored to neutral white, ensuring that the overall color is not skewed
12	EV exposure compensation	Adjust the screen brightness (increase if it's too dark, decrease if it's too bright)
13	ISO sensitivity	The higher the ISO value, the stronger the light sensitivity and the brighter the image
14	Shooting Effects	A wide variety of filters available for selection
15	Time & Date	Timestamp watermark
16	Battery status	The battery is charging or the battery level

Video Mode screen icon



No.	Icon name	Instructions
1	Shooting Mode	Video recording mode icon
2	Video size	Video resolution set for current recording
3	Mode Setting	Select the corresponding scene, and the camera will automatically match the more suitable settings

4	Fill light mode	Press the flash button "  " to switch between fill light modes: Turn off the fill light / Turn on the fill light
5	Image Stabilization	Prevents camera shake from affecting image clarity.
6	High Dynamic Range (HDR)	Expand the range of brightness that can be recorded and presented, striving to fully depict the authentic shades and tones
7	Video recording time	Remaining recording time in the camera's current memory
8	Memory card	Is the storage card installed
9	WB (White Balance)	Under different color temperatures of light sources, the white in the image is restored to neutral white, ensuring that the overall color is not skewed
10	EV exposure compensation	Adjust the screen brightness (increase if it's too dark, decrease if it's too bright)
11	Shooting Effects	A wide variety of filters available for selection
12	Time & Date	Timestamp watermark
13	Battery status	The battery is charging or the battery level

Take photos and videos

Switch between 8 shooting modes

After turning on the camera, on the shooting preview interface, press the Mode button "M" to open the mode selection page. You can switch between eight modes: Photo Mode, Video Mode, Slow Motion Mode, Scene Mode, Filter Mode, Night Scenery Mode, Landscape Mode, Portrait Mode. Press the Left or Right button to select any mode icon to open that mode.





Mode selection
page

Mode key

Photo Mode 「📷」

  1. On the mode selection page, select the Photo icon 「📷」 to enter photo mode.
2. In the photo preview interface, half-press the shutter button to focus. After focus is achieved, fully press the shutter button to take the photo.

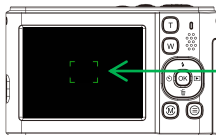

The appearance of a green focus frame indicates that autofocus has been completed

● Manual Focus Mode

During photo/video preview, half-press the shutter button until the camera screen displays a green focus frame accompanied by a beep tone, indicating autofocus is complete. Then fully press the shutter button to take the shot. (During this process, keep the camera still and do not release the shutter button.)

● Continuous Auto Focus (C-AF)

When C-AF is turned on in the settings, the camera continuously tracks and focuses on the selected subject. Even if the subject moves, the camera constantly adjusts the focus to keep it sharp. This is ideal for shooting moving subjects, such as athletes, running pets, or playing children.

⚠ The shooting range of this camera is from 18CM to infinity. Please keep an appropriate distance for shooting (too close and the camera will not be able to focus).

⚠ When taking photos, it is necessary to hold the camera steadily to avoid shaking. It is recommended to fix the camera on a support such as a tripod.

Video Mode 「」

1. Select the recording icon 「」 on the mode selection page to enter recording mode.
2. On the video preview interface, half-press the shutter button to focus. After focus is achieved, fully press the shutter button to start recording video, then fully press the shutter button again to end recording.

Slow Motion Mode 「」

1. On the mode selection screen, tap the slow motion icon 「」 to enter slow motion mode.
2. In slow motion recording mode, press the menu key 「」 to open the menu page → select Slow Motion Settings → choose the desired “Video Size” and press the OK key to save the settings, then press the menu key 「」 to exit the menu page.
3. On the slow motion recording preview interface, use the left/right keys to select the desired speed multiplier. Then half-press the shutter button to focus. After focus is achieved, fully press the shutter button to start recording. The camera will capture footage at a high frame rate. Fully press the shutter button again to stop recording. The final slow motion video file will be $1/N$ times the actual recording duration (where N is the selected slow motion multiplier).

Scene Mode

Scene mode is an intelligent shooting mode of the camera. Based on the selected scene type, the camera automatically optimizes key parameters such as exposure and white balance, enabling the capture of high-quality photos/videos in corresponding environments. It is suitable for beginners to shoot quickly and can also meet daily shooting needs in various scenarios.

1. On the mode selection screen, select the SCN icon . The camera will automatically enter the scene mode selection page. Use the left/right keys to switch between different scene options. After selecting a scene, press the OK button to confirm, and the camera will switch to the corresponding scene mode. The screen will display the exclusive icon for that scene.

2. In the scene mode shooting preview interface, half-press the shutter button to focus. After focus is achieved, fully press the shutter button to take the photo.

Scene mode can also be used in other shooting modes: While in the shooting preview, press the menu button, select Shooting Mode Settings, and then find Mode Selection to choose scene mode for shooting.

Filter Mode 「」

Filter mode is a built-in image style optimization feature that allows you to directly apply color, lighting, and shadow effects to photos/videos during shooting, eliminating the need for post-processing. It enhances the artistic quality of the image, making it ideal for scenarios like daily check-ins, atmospheric photography, and creative projects. The operation is simple, and the effects can be previewed in real-time.

1. On the mode selection screen, select the filter mode icon 「」 to enter the shooting effect selection page. Use the left/right keys to switch between different filter options. After selecting a filter, press the OK button to confirm. The camera will switch to the corresponding filter mode, and the screen will display the exclusive icon for the selected filter.

2. In the filter mode shooting preview interface, half-press the shutter button to focus. After focus is achieved, fully press the shutter button to capture the photo.

3. Filter mode is compatible with the other 7 shooting modes: During shooting preview, press the OK button to open the shooting effect selection page, where you can choose any filter for shooting.

Night Scenery Mode 「」

Night Scenery Mode is a specialized shooting function designed for low-light environments. By optimizing exposure and noise reduction techniques, it enables the camera to capture clear and bright photos under nighttime or dim lighting conditions. It is suitable for use in scenarios such as streetlights, city lights, and indoor low-light settings.

1. On the mode selection screen, select the night mode icon 「」 to enter Night Scenery Mode.
2. In the night scenery mode preview interface, half-press the shutter button to focus. After focus is achieved, fully press the shutter button to capture the photo.
3. If the use of night mode results in loss of detail in high-contrast scenes, it is recommended to enable the High Dynamic Range (HDR) function.

⚠ Night Scenery Mode consumes more power. It is recommended to ensure the battery is fully charged and to have a backup power source available. Extended shooting or continuous shooting in this mode will reduce battery life, which is a normal occurrence.

Landscape Mode 「」

Landscape mode is an intelligent shooting mode specifically optimized for outdoor landscape photography. The camera will automatically adjust key parameters such as depth of field, color, and exposure to achieve full clarity from foreground to background, while enhancing the color saturation and tonal contrast of elements like the sky, mountains, and architecture. Without the need for manual parameter adjustments, even beginners can easily capture clear and

three-dimensional landscape photos. This mode is suitable for photography.

1. On the mode selection screen, select the landscape icon [🌄] to enter landscape mode.
2. In the landscape mode preview interface, half-press the shutter button to focus. After focus is achieved, fully press the shutter button to capture the photo.
3. In landscape mode, slight manual adjustments can be made. Exposure compensation (± 1.0 EV) can be adjusted as needed: if the image is too dark, increase to +0.5 to +1.0; if too bright, decrease to -0.5 to -1.0 to preserve more details.

Portrait Mode [👤]

Portrait mode is an intelligent shooting mode specially optimized for photographing people. The camera automatically adjusts key parameters such as aperture and color to achieve a background blur effect, highlighting the subject. It also intelligently enhances skin tone restoration and facial sharpness, making facial features appear more delicate and three-dimensional, all without the need for manual adjustments.

1. On the mode selection screen, select the portrait mode icon [👤] to enter portrait mode.
2. In the portrait mode preview interface, half-press the shutter button to precisely align the focus frame with the subject's eyes (the core focus point for portrait photography). Once the focus frame turns green (indicating successful focus), fully press the shutter button to capture the photo, ensuring facial features remain sharp.
3. Portrait mode yields even better results when combined with features like Beauty Enhancement, Face Shaping, and Face Detection.

Selfie Mode

1. While in the photo preview interface, press the menu key to open the menu page. Then, use the left/right keys to select Photo Mode Settings 「📷」, press the down key to locate "Self-timer", and press the OK key to enable it. After choosing the desired timer duration, press the OK key to save the settings.
2. Press the front function key 「📷」 to switch to the front display for selfie mode. Once ready, press the shutter button to take the photo.
3. To switch back to the rear main screen, press the front function key again.



Front function key

⚠ Single-Screen Mode:

Only the rear main screen or the front secondary screen can be active at a time.

⚠ Focus Guidance:

The camera supports a shooting distance range of 18 cm to infinity. Ensure that the subject is within this range for proper focus (focus cannot be activated if the subject is too close). When the shutter button is half-pressed, a green focus frame will appear along with an audible prompt. It is recommended to adjust the shooting distance flexibly based on the framing effect to ensure image clarity.

Flash Mode

In the preview interface of Photo Mode, Timed Photo Mode, Time-lapse Photo Mode, or Night Mode, press the flash button "  " to switch between flash modes.



Turn off the flashlight 	There was no flash when taking photos in any situation.
Automatic flashing 	Under low-light conditions, the flash will automatically illuminate when taking a photo.
Forced Flash 	Whether in a bright or dim environment, the flash is activated during photo taking.

 The flash function cannot be enabled in burst photo mode.

Fill light mode

In the preview interface of video mode/ slow motion mode, press the flash button "  " to turn on/off the fill light.



Turn on the fill light 	The LED light remains continuously on.
Turn off the fill light	/

Set date and time and watermark

1. Set Time and Date

① In the shooting preview interface, press the menu button 「⊙」 to enter the menu page, open System Settings「⚙️」, scroll down to find the submenu "Set Time and Date", and press the OK button to enter.

② Then, use the left/right keys to select "Year/Month/Day/Hour/Minute", and use the up/down keys to adjust the numbers. After selecting, press the OK button to save the settings.

2. Date Format

In the system settings, locate the submenu "Date Format" and click to enter. Then, choose and select the display style of the date (e.g., Year/Month/Day, Month/Day/Year, Day/Month/Year).

3. Photo Stamp

① In the system settings, open the submenu "Photo Stamp" and enter. Select "Date" or "Time & Date", then press the OK button to save the settings. Photos and videos taken by the camera will be stamped with either a date watermark or a date and time watermark.

② After completing the settings, press the menu button again to exit the menu.

Replay Mode

1. Enter Playback Mode

After taking a photo or recording a video, press the playback button  to enter playback mode, where you can view photos and videos.

2. Playback Functions

① Browse Photos/Videos:

- Switch images: Press the left/right keys to view the previous/next photo or video.
- Thumbnail mode: Press the **W** key repeatedly until the camera screen displays multiple photos and videos in a grid layout for quick navigation.

② Zoom In/Out on Photos:

- Zoom in: Press the **T** key to enlarge the photo, and use the directional keys or swipe the screen to move the zoomed area.
- Zoom out: Press the **W** key to reduce the photo size and return to the original proportion.

③ Video Playback:

- After selecting a video file, press the OK button to start playback. Press the OK button again to pause.
- During video playback, press the left key to rewind and the right key to fast forward.
- Adjust the volume during playback by pressing **T** to increase or **W** to decrease the sound.
- During video playback, press the mode button  to stop it.

3. Delete and Protect Files

- Delete: After selecting and opening a file, press the delete button  and confirm to delete

the file.

- **Protect:** After selecting and opening a file, press the menu button 「⊙」 to enter playback settings, then click "Write Protection" to lock important photos/videos and prevent accidental deletion.

4.Slideshow Playback

In playback settings, click "Slideshow", then select the playback interval (e.g., 2 seconds). The camera will automatically display all photos in a full-screen slideshow loop. During the slideshow, press the menu button to stop playback, and press it again to exit slideshow mode.

5.Exit Playback Mode

Press the playback button to exit playback mode and return to shooting mode.

Connect to camera Wi-Fi

1.Enable Camera Wi-Fi

Method 1: After powering on, long-press the menu key in the shooting preview interface to enable Wi-Fi mode on the camera.

Method 2: In the shooting preview interface, press the menu key 「⊕」 to enter the menu page, select the system settings icon 「⚙」 → select "Wi-Fi" and press the OK key to turn it on → choose "Enable" and press the OK key to save the settings. The camera will then activate Wi-Fi mode.

 


Wi-Fi mode

Menu key

2.Install the "Weiyi One Shot" App

- ① For Android users, search for "Weiyi One Shot" in the app store or via a third-party browser to install the app.
- ② For iPhone users, search for "Weiyi One Shot" in the App Store to install the app.
- ③ Both Android and iPhone users can also scan the QR code below (or the QR code displayed on the camera's Wi-Fi mode page) with their phone browser to download and install the "Weiyi One Shot" app.



Viipulse

3. Connect the phone to the camera's Wi-Fi

Open the Wi-Fi settings on your phone, find the Wi-Fi name (SSID) of the camera: DC325-XXXXXX, click on it and enter the Wi-Fi password (Password) of the camera: XXXXXXXX.

4. Use the " Viipulse " APP

1. Open the " Viipulse " app on your phone and add a camera.
2. The APP allows remote control of the camera for taking photos and videos, and also enables users to browse the camera's photos and videos through the APP, as well as download files from the camera to their mobile phones or tablets for sharing.

5. Turn off camera Wi-Fi

Press the camera's menu button " ☰ " to exit the camera's Wi-Fi mode, and the camera will disconnect from the mobile app.

Download camera photos and videos to the computer

1. Connect the camera to the computer using a USB cable, and then turn on the camera.
2. After successful connection, the "USB" dialog box will pop up on the camera screen. Please select "MSDC".



3. Then, check for new removable disks in "My Computer". Photos or videos taken by the camera will be saved under DCIM. Users can copy the photos and videos from the camera folder to their computer.
 4. After the download is complete, please press and hold the camera power button until it shuts down, or simply unplug the USB cable. The camera will exit the mobile hard disk mode.
- ⚠ Do not disconnect the camera from the computer while downloading files.
- ⚠ During the process of transmitting data from the camera to the computer, please do not insert or remove the memory card inside the camera to avoid data loss.

Webcam

1. Connect the camera to the computer using a USB cable, and then turn on the camera.
2. After successful connection, a "USB" dialog box will pop up on the camera screen. Please select " PC Camera ".



3. Please select "USB CAMERA" in the external camera settings of your social media software.
4. To exit webcam mode, long-press the camera's power button until it powers off, or simply unplug the USB cable.

Camera parameters

Image resolution	96M(13056×7344); 64M(10752×6048); 48M(9344×5248); 36M(8064×4536); 24M(6528×3672); 21M(6144×3456); 14M(5120×2880); 12M(4096×3072) etc. (Photo resolution is calculated by default based on the 4:3 photo ratio. If you switch to other ratios, the photo resolution will vary.)
Video resolution	8K 15FPS, 5K 30FPS; 4K 30FPS; 2.7K 60FPS; 2.7K 30FPS; FHD 60FPS; FHD 30FPS; HD 60FPS; HD 30FPS etc.
File format	Photos: JPG; Videos: MP4(H.264 codec)
Memory card	Supports Micro SD memory cards (4GB to 1TB), Supports SDHC Class 6
Focal length	$f = 4.7\text{mm}$
Aperture	F/ 1.8
Shutter speed	1/10 second ~ 1/2650 second
Rear Main Screen	2.8-inch IPS LCD display, 4:3 aspect ratio (640×480)
Front Secondary Screen	1.54-inch TFT LCD display, 1:1 aspect ratio (240×240)

USB Port	Type-C
Power input	DC 5V $\pm$ 1A, 5W
Battery	Rechargeable lithium-ion battery, 3.7V
Tripod Mounting hole	1/4 inch standard screw thread
Camera size	102 × 63 × 24 mm
Camera weight	123g (including battery)
Operating system demand	Win7/Win8/Win 10/Win 11

Note: The product specifications provided are the latest information available at the time of writing this manual. If there are any changes to the specifications, no further notice will be given. Please refer to the actual camera for accuracy!

Frequently Asked Questions

The camera cannot be started after the battery is installed	The battery is low, please replace it with a new one.
	The battery is installed upside down or not in place. Please confirm that the battery installation method is correct.
Pressing the shutter button cannot take photos or record videos	The built-in memory is full. Please save the captured files to another storage device.
The photo taken is blurry	Your hands are shaking when taking photos. Please hold the camera steadily with both hands, or use a tripod or other objects to stabilize the camera body. Avoid shaking the camera when taking photos.
The photos or videos taken appear dim	The lighting in the shooting environment is insufficient. Please shoot in a well-lit place, or use lighting to increase the brightness.
The camera automatically shuts down	The battery is low on power. Please charge or replace the battery.

	To conserve energy, if there is no operation on the camera for more than 1 minute (3 minutes or 5 minutes, depending on the setting), it will automatically shut down according to the setting.
Camera freeze or blurry screen	The Micro SD card is in the wrong format. Please format the Micro SD card in the camera or on a computer before using it.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

No. DC325W 260402



RoHS

