

PZ Wireless Remote Control

1. **Disconnect power** from the winch.
2. **Disengage the clutch** by rotating the lever to the **FREE SPOOL** position.
3. **Activate the remote** by pressing and holding the **ON/OFF** button for 2 seconds. The indicator light will illuminate.
4. While **pressing and holding both the IN and OUT buttons** on the remote, **restore power** to the winch.
5. The winch will perform a **brief jog** to indicate a successful pairing.
6. **Release the IN and OUT buttons** once pairing is confirmed.
7. **Re-engage the clutch** by rotating the lever to the **ENGAGED** position.
8. **Function Check – OUT:** Briefly press **OUT** to verify the rope feeds out.
WARNING: If the rope does not feed out, inspect and correct winch wiring. Retest after correction.
9. **Function Check – IN:** Briefly press **IN** to verify the rope retracts.
WARNING: If the rope does not retract, inspect and correct wiring. Retest both directions after correction.
10. Once both directions operate correctly, the **remote is ready for use**.

WARNING

1. Disconnect power to the winch before servicing and after each use. A powered winch may start unexpectedly at any moment.
2. Stay clear of the winch, fairlead, and wire rope whenever the system is energized. Keep all bystanders at a safe distance.
3. Operate the controls only when the winch and the entire length of wire rope are in full view of the operator.
4. Use this remote exclusively with vehicle-mounted recovery winches. Do not use for lifting, hoisting, or any application involving human support or rescue.
5. Keep the remote away from sources of radio-frequency interference or other wireless control systems, as they may disrupt operation or cause unintended activation.
6. Do not operate more than one remote transmitter near the receiver. Any additional transmitter must be switched off and stored with its batteries removed to prevent accidental activation.
7. Do not use a damaged or malfunctioning remote. If the remote fails to operate properly, discontinue use immediately and remove the batteries.
8. Read and follow the winch owner's manual before operating this wireless remote control.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device,

pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection

against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.