 
 
 


  NEO PRO MAX User Manual	Instalación de las tarjetas SIM y una tarjeta de memoria opcional 1. Asegúrate de que el teléfono esté apagado. Afloja la tapa de goma de la bandeja de la tarjeta SIM y utiliza el pin plateado proporcionado. Insértalo en el pequeño orificio redondo situado en el lado izquierdo del teléfono hasta que la bandeja de la tarjeta SIM se desbloquee y salga ligeramente. Luego, extrae la bandeja de la tarjeta SIM del teléfono.  2. Coloca tus tarjetas SIM o de memoria en la bandeja de la tarjeta SIM hasta que estén en su lugar. 3. Desliza la bandeja SIM de nuevo en el teléfono hasta que encaje en su lugar. Asegura la cubierta de goma antes de usar el teléfono de nuevo.  4. Carga tu teléfono.  1	Español Encender y apagar el dispositivo Mantén pulsada la tecla de encendido durante unos segundos para encender el dispositivo. Para apagar el dispositivo, mantén pulsada la tecla de encendido y luego toca Apagar. Envío de mensajes o mensajes multimedia Mensajes • Abre Mensajes. • Toca Nuevo Mensaje. • Introduce un número de teléfono o un contacto de tu lista de contactos. • Escribe tu mensaje en el campo de mensaje. • Después de terminar tu mensaje, toca (el icono de enviar), ➤ Mensajes multimedia • Toca el icono del clip en la pantalla de Nuevo Mensaje. • Toca la foto o el video que quieras adjuntar o puedes tomar una nueva foto o video. • Después de terminar tu mensaje, toca (el icono de enviar), ➤ Configuración de idioma • Abre la aplicación Ajustes y luego toca "Sistema". • Toca "Idioma y entrada" → Toca "Idiomas" → Toca "Añadir idiomas". • Una vez que hayas añadido tu idioma preferido, conviértelo en el idioma predeterminado de Android presionando firmemente sobre las dos líneas horizontales y moviéndolo a la parte superior. SAR • La tasa máxima de absorción de radiación electromagnética (SAR) de este producto es < 1,6 W/kg. • De acuerdo con los requisitos de la norma nacional GB 21288-2007. 2	Seguridad: para garantizar el uso seguro del producto, debes cumplir estrictamente los siguientes consejos • El uso adecuado es importante para que el teléfono funcione de forma segura y eficaz. También puede prolongar la vida útil al máximo. • Sigue las instrucciones del manual para abrir el teléfono y no intentes ringün otro método. • Evita dejar caer, golpear o manipular violentamente el teléfono. Un trato rudo puede dañar la pantalla, la placa de circuito interna u otros componentes. • No utilices ningún agente de limpieza fuerte o disolvente para limpiar tu teléfono. • Limpia la carcasa del teléfono con un paño de algodón suave humedecido con agua o una solución de agua suave. • Limpia la lente de la cámara con un paño limpio, seco, suave y no abrasivo. • Si experimentas un fallo de software y el teléfono deja de responder, retira correctamente la cubierta trasera y la batería, vuelve a colocar la batería y reinicia el teléfono. • Cuando el cargador de batería no esté en uso, desenchúfalo de la toma de corriente. Si la batería está completamente cargada, desconecta el cargador de tu teléfono, ya que puede afectar la vida útil de la batería a largo plazo. • Si las llamadas telefónicas no se pueden conectar, verifica si has accedido a la red celular correcta. Verifica si no has configurado el bloqueo de llamadas para el número de teléfono al que estás llamando. Verifica si no has configurado el bloqueo de llamadas para el número de teléfono entrante. • Si tu voz no se escucha o no se escucha bien en el otro extremo de una llamada telefónica, verifica si estás cubriendo el micrófono integrado. Verifica si el micrófono está lo suficientemente cerca de tu boca. Si estás usando auriculares, verifica si están conectados correctamente. 3	Mantenimiento • El teléfono debe estar al menos a 15 cm de cualquier implante médico o ajustador de ritmo y nunca guardes el dispositivo en el bolsillo de tu abrigo. • No expongas el dispositivo o la batería a un ambiente de alta temperatura, como luz solar, calentadores, hornos de microondas, hornos o calentadores de agua, etc. El sobrecalentamiento de la batería puede causar su explosión. • Cuando la carga esté completa o no esté en uso, desconecta el cargador del dispositivo y desenchufa el cargador de la toma de corriente. • El uso de una fuente de alimentación, cargador o batería no aprobados o incompatibles puede causar incendios, explosiones u otros peligros. • No desmontes ni reinicies la batería y evita el contacto de la batería con agua u otros líquidos para evitar fugas de la batería, sobrecalentamiento, incendios o explosiones. • No dejes caer, aplastes, rayes o perfores la batería para evitar someterla a una presión externa excesiva y el consiguiente cortocircuito y sobrecalentamiento de la batería. • El fabricante de la batería o del teléfono no se hace responsable de los accidentes causados por el uso de equipos de carga no estándar. • Para obtener más información, visita "www.env.com.ec". 4	
  NEO PRO MAX User Manual	Installing the SIM cards and anoptional memory card 1. Make sure the phone is turned off.Loosen the rubber cover of the SIM card tray, and use the silver pin provided, insert it into the small round hole located on theleft-hand side of the phone until the SIM card tray unlocks and comes out slightly.Then pull the SIM card tray out of the phone.  2. Place your SIM or memory cards into the SIM card tray until they are in place. 3. Slide the SIM tray back into the phone untilit locks back into place. Secure the rubber cover before using the phone again.  4. Charge your phone.  1	English Turning the device on and off Press and hold the Power key for a few seconds to turn on the device. To turn off the device, press and hold the Power key, and then tap Power off. Sending messages or multimedia messages Messages • Open the Messages. • Tap New Message. • Enter a phone number or a contact from your Contacts List. • Type your message into the messaging field. • After your message is finished, Tap ➤ Multimedia Messages • Tap the paper-clip icon on the New Messages screen • Tap the photo or video you want to attach or you can take a new picture or video. • After your message is finished, Tap ➤ Language settings • Open the Settings app then tap "System" • Tap "Language&input"→ Tap "Languages" → Tap "Add Languages" • Once your preferred language has been added, make it your Android's default language by pressing firmly on the two horizontal lines and moving it to the top. SAR • The maximum electromagnetic radiation absorpion ratio(SAR) of this product is < 1.6 W/kg. • In line with the requirements of national standard GB 21288-2007. 2	Safety-In order to ensure safely using the product, you must strictly abide by the following advice • The phone should be at least 15 cm away from any medical implant or rhythm adjuster and never put the device in your coat pocket. • Do not expose the device or the battery to a high-temperature environment such as sunlight, heaters, microwave ovens, ovens,or water heaters, etc.Overheating of the battery may cause its explosion. • When charging is complete or not in use, disconnect the charger from the device and unplug the charger from the electrical socket. • Use of an unapproved or incompatible power source, charger or battery may cause fire,explosion or other hazards. • Do not disassemble or reset the battery and avoid battery contact with water or other liquids so as to prevent battery leakage, overheating, fires or explosions. • Do not drop, crush, scratch or puncture the battery so as to avoid subjecting the battery to excessive external pressure and the resultant short-circuitand overheating of the battery. • The battery or the phone manufacturer does not bear responsibility for accidents caused by the use of non-standard charging equipment. • For more information, please visit "www.env.com.ec". 3	Maintenance • Proper use is important for the phone to work safely and effectively. also can extend the service life to the greatest extent. • Please follow the instructions in the manual to open the phone,and do not try any other methods. • Please avoid dropping, knocking or violently handling of the phone. Rough treatment can damage the screen,the internal circuit board or other components. • Do not use any strong cleaning agent or solvent cleaner to clean your phone. Wipe the phone case with a soft cotton cloth dampened with water or mild water solution. • Clean the camera lens with clean, dry, soft and non-abrasive cloth. • If you encounter any software crash and the phone stops responding, please properly remove the back cover and the battery, then put the battery back in and restart the phone. • When the battery charger is not in use, please unplug it from the electrical socket. If the battery is fully charged, please disconnect the charger from your phone as it may affect the battery life in the longterm. • If phone calls can not be connected, check if you have accessed the right cellular network. Check if you have not set call barring for the phone number you are dialling. Check if you have not set call barrino for the incoming phone number. • If your voice can not be heard or heard well on the other end of a phone call, check if you are covering the built-in microphone. Check if the microphone is dose enough to your mouth. If you are using an earphone, check if it is properly connected. 4	

Federal Communication Commission Interference Statement

FCC ID: 2BO97NEOPROMAX

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (10mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

The use of holsters and similar accessories should not contain metallic components in its assembly, the use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.