


USER MAMUAL

Important Safety and Usage Instructions

Keep the device away from moisture and dust.
Avoid high temperatures, especially in a closed car.
Do not drop, strike, or shake the device violently.
Adjust earphone volume carefully to protect your hearing.
Charge when the battery is low, the device shuts off, or buttons are unresponsive.
Do not disconnect during downloads, uploads, or formatting.
Only a professional should disassemble the device.
Avoid alcohol, thinner, or benzene for cleaning.
Do not use in restricted areas like aircraft.
Always back up your data; the manufacturer is not responsible for loss.
The device is not waterproof; keep it dry.
Allow 20 seconds for startup before use.

Device Overview

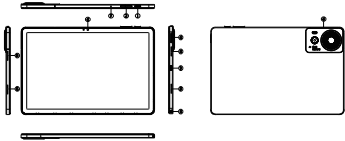

Power – Press to turn the device or screen on/off. Hold to access the Power Off menu.
VOL+ / VOL– – Adjust volume up or down.
USB Type-C Port – Supports data, video, audio, and charging (adapter may be required).
Micro SD & Nano SIM – Slot for external Micro SD cards and Nano SIM.
Speaker – Outputs sound.
Camera – Takes photos and records videos.
Reset – Forces a system shutdown when unresponsive.
Aux Output – Connects to headphones or earphones.

Specifications

CPU	MTK8786V Cortex A75*2+Cortex A55*6
GPU	Mali-G52 MC2
RAM	8 GB
ROM	256 GB
Display	Incell 1920*1200 FHD IPS
Wifi Network	802.11a/b/g/n/ac
Front Camera	8 MP
Rear Camera	13 MP + 5 MP
Power USB Charger	PD 20W Fast Charger
Battery	8000 mAh
Touch Screen	Multi-Touch
Operating System	Android 15 GMS
Ports	Type C, TF card & SIM slot , Earphone slot

Trouble Shooting

Q1: The tablet doesn't power on
Press the reset button with a pin.
Hold the power button (5 sec) to turn off, then reboot.
Check if the tablet is in Sleep Mode by pressing the power button.
Charge for 30 minutes, then try rebooting.
Q2: The tablet doesn't charge
Try a different USB cable and adapter.
Ensure the USB cable is properly connected.
Charge for at least 30 minutes if the battery is fully drained.
Q3: Error message occurs during operation
Uninstall and reinstall the problematic app.
Press the reset button with a pin to reset the tablet.
Q4: The tablet is not detected by the computer
Choose "Transfer files" or "Transfer photos (PTP)" instead of "Charge this device" when connected.
Try a different USB port or USB cable.
Ensure the tablet is powered on.
Q5: Cannot connect to Wi-Fi
Forget the current network and reconnect.
Reset the router and check for filter settings or connection limits.
Reboot the router.
Ensure Wi-Fi is turned ON and the correct password is entered.
Q6: Storage space is full
Insert a microSD card for expansion.
Clear app cache regularly.
Uninstall unused apps.
Android is a trademark of Google LLC

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

The device has been tested and comply with FCC SAR limits.