 




Vibe Light L26



Scan for Amazon Support

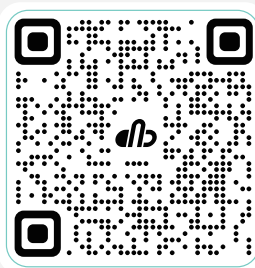

Scan to View Full User Guide

After-sales Contact:
1-833-833-2013

E-mail:
ussupport@dbsono.com

 
IN THE BOX

Confirm that the following parts are included:


Vibe Light Bluetooth Speaker x2
Adjustable Stake x 2
Type-C Charge Cable x2

User Manual x1
Multi-sync Card x1
S Hook x 2

PRODUCT OVERVIEW

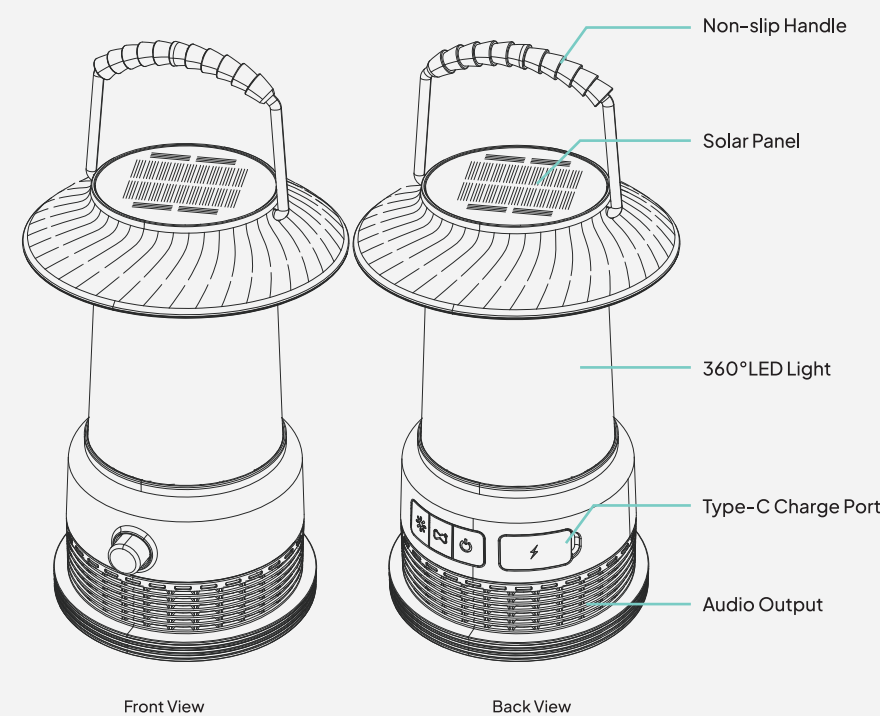



BUTTONS & CONTROLS

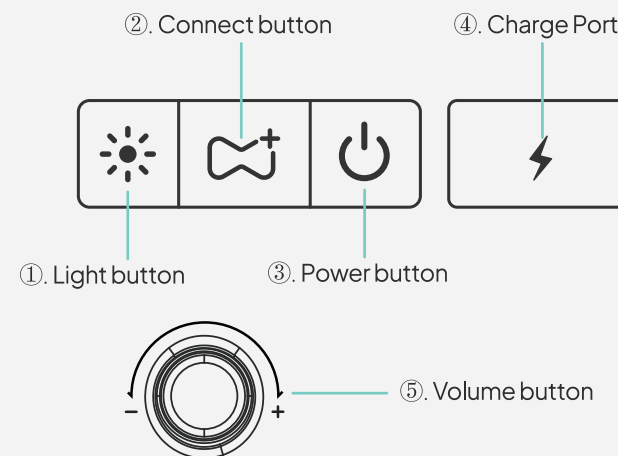 

	What to do	Function
	Long press 2-3S	Power On / Off
	Short Press	Standby mode
	Short Press	Bluetooth Connecting
	Press and Hold	Disconnect / Reconnect Bluetooth
	Short Press	Switch lighting mode(7 modes)
	Rotate to the Left	Decrease the Volume
	Rotate to the Right	Increase the Volume
	Press Downward	Play/Pause

BLUETOOTH CONNECTIONS

  Connect using the Bluetooth menu on your mobile device

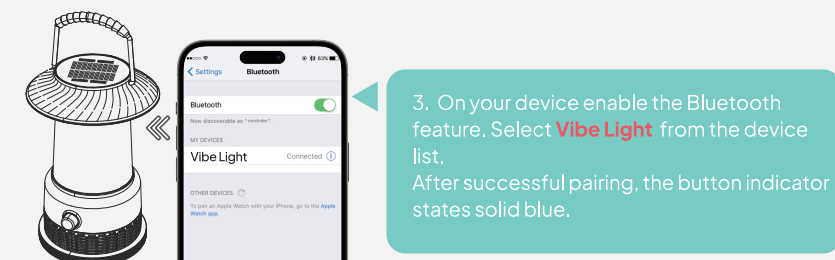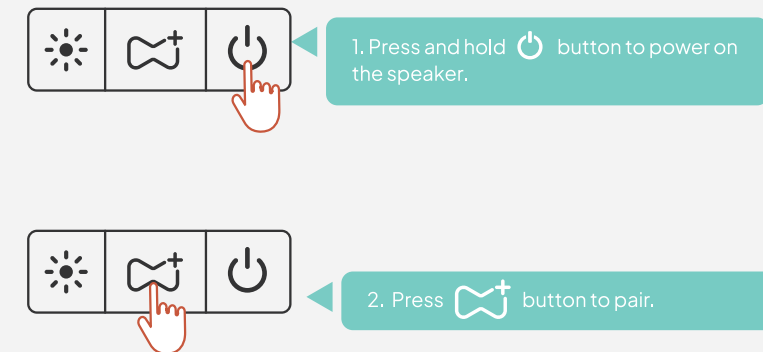


Hint

Upon connecting one speaker to your Bluetooth device, the other speakers will promptly enter Multi-Sync mode, either TWS or Party modes, as they power on. This will enable all speakers to play in sync.

Reconnect a mobile device

When powered on, you need to press the connect button first and the speaker tries to reconnect with the most recently-connected devices.

 
Listening to music wirelessly with 2 speakers (TWS)

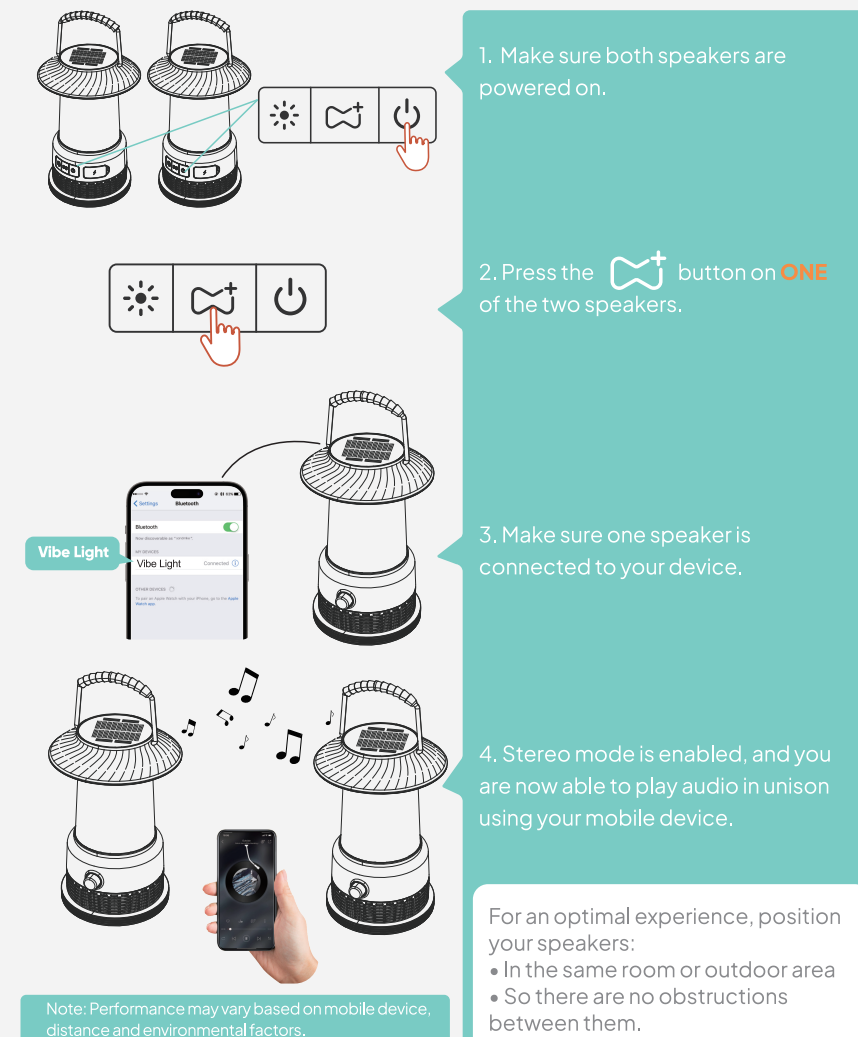

Enjoying wireless playback using multiple speakers (Party Mode)

You can connect multiple speakers (up to 100 speakers) compatible with the Multi-Sync mode via BLUETOOTH connections and enjoy music playback.

 1. Make sure one speaker is connected to your Bluetooth device.
2. On additional speakers, press and hold the power button for 5 seconds to turn them on.
3. Multi-sync mode is enabled, and you are now able to play audio in perfect sync using your mobile device.

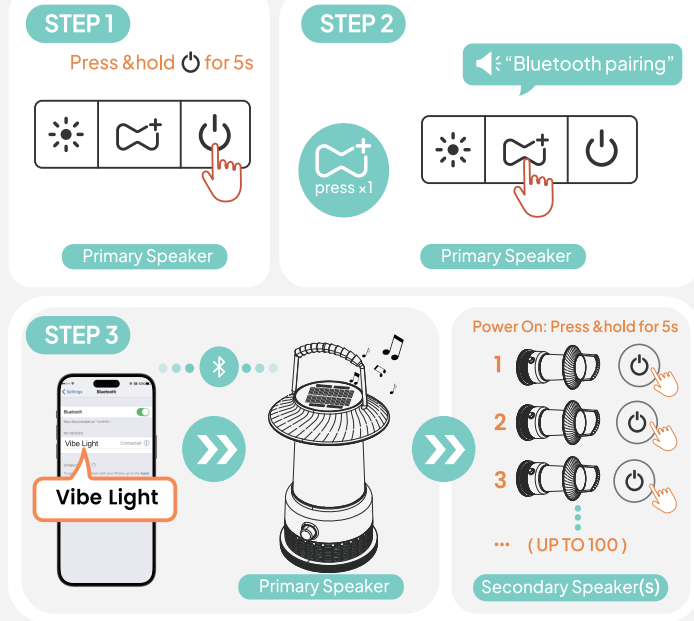

NOTE

- When multiple speakers are successfully synchronised, the Connect button of the primary speaker stays blue, while the Connect button of the secondary speaker(s) stays green.
- To adjust volume or use other control buttons, please use either your mobile phone or the primary speaker. When you power off the primary speaker, all connected speakers will power off.

05/

Switch the Primary Speaker

STEP 1

On the desired speaker, briefly press the connect button to set that speaker as the Primary speaker.



 
STEP 2

On your device Bluetooth Settings, tap another **Vibe Light**.



STEP 3


Wait a few seconds, then press the play button to resume audio playback, at which point the Primary speaker will have switched.

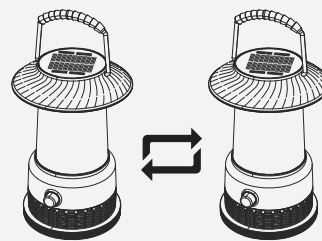


06/

CHARGING YOUR SPEAKER

 A. When charging, the power button will light up solid red. When fully charged, the light of power button will go out.

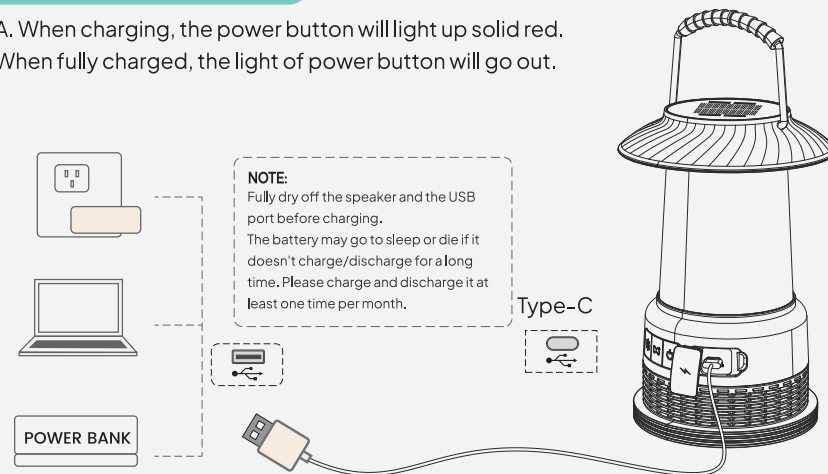

 B. The speaker can also be powered by solar energy, which provides up to two hours of additional playback time when exposed to sufficient sunlight.

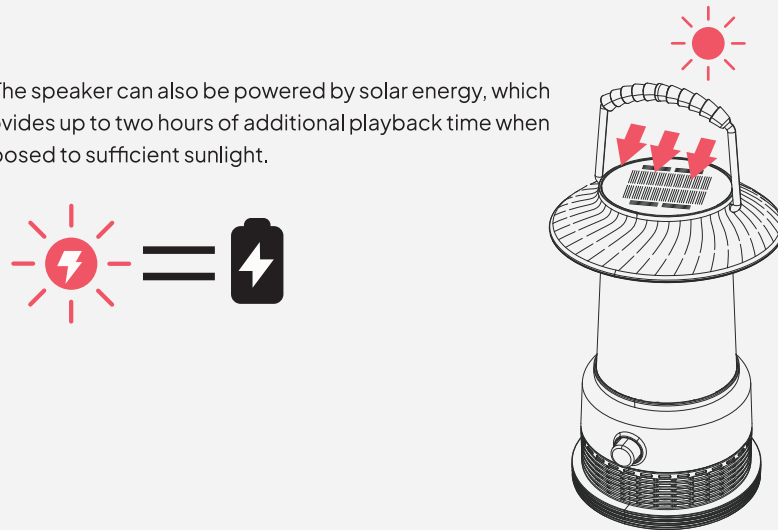


07/

Turning on/off the Standby function

Enable Standby Mode to keep the sync settings so you don't have to repeat the synchronization processes the next time.

 * The speakers will consume a small amount of power in Standby Mode.

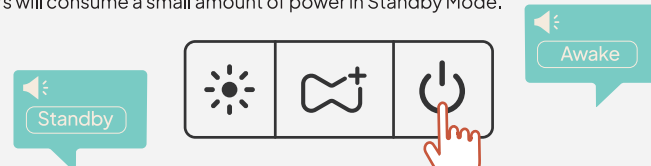

1. Short press once the power button on the Primary speaker. When you hear "Standby", the Standby function is turned on, the button indicators go off.
2. Another press on Power button, when you hear "Awake", the Primary Speaker will automatically reconnect with the Secondary Speakers.

TECHNICAL PARAMETERS

Bluetooth Name	Vibe Light	Bluetooth	V 5.4	Working Range	≥100 Feet
Output Power	15W	SNR	>75dB	Light Effects	7 Modes
Waterproof	IPX7	Playtime	>20 Hrs	Charging Time	3 Hrs

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

08/

MAINTENANCE & CARE

- Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
- This speaker can stand up to splashes and spills. For the best performance, avoid exposing it to water or harsh weather conditions.
- The stakes should not be exposed to direct sunlight for lengthy periods of time as this may cause them to bend.
- Environment and temperature
Operating temperature should be between 0 °C to 40 °C / 32 °F To 104 °F .
Keep away from extreme temperature environments (such as high temperature fire, direct sunlight or extremely cold environment) to avoid battery damage.
Do not approach heat sources (such as stoves, engines and other heating equipment).
- Use and maintenance
Do not drop, disassemble or replace the battery (wrong model may cause explosion risk).
Do not use corrosive detergents/oils to wipe the product.
Keep away from water or humid environments (such as rainy days) when charging to prevent electric shock.

NOTICE

This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.

ONE YEAR WARRANTY

1. Our products are covered by a 12-month limited warranty, starting from the date of purchase. This warranty is not transferable and applies only to the original consumer purchaser.
2. For quality-related issues, we will, at its sole option, repair or replace any products that malfunction due to defective parts or workmanship at no charge to you.

Not Covered Under Warranty:

- Damage from outside sources
- Damage from misuse of products (including, but not limited to: falls, extreme temperatures, water, operating devices improperly, incorrect connections, incorrect battery use)
- Damage caused by accident, improper care, negligence, excessive wear and tear, or improper installation or assembly contrary to any written installation instruction
- Items that have expired their warranty period
- Non quality-related issues (after 30 days of purchase)
- Repairs through 3rd parties
- Any questions, please feel free to contact us.

09/

170*650mm正反面印刷 5折, 105G铜版纸