 




LED TV USER MANUAL

S732S

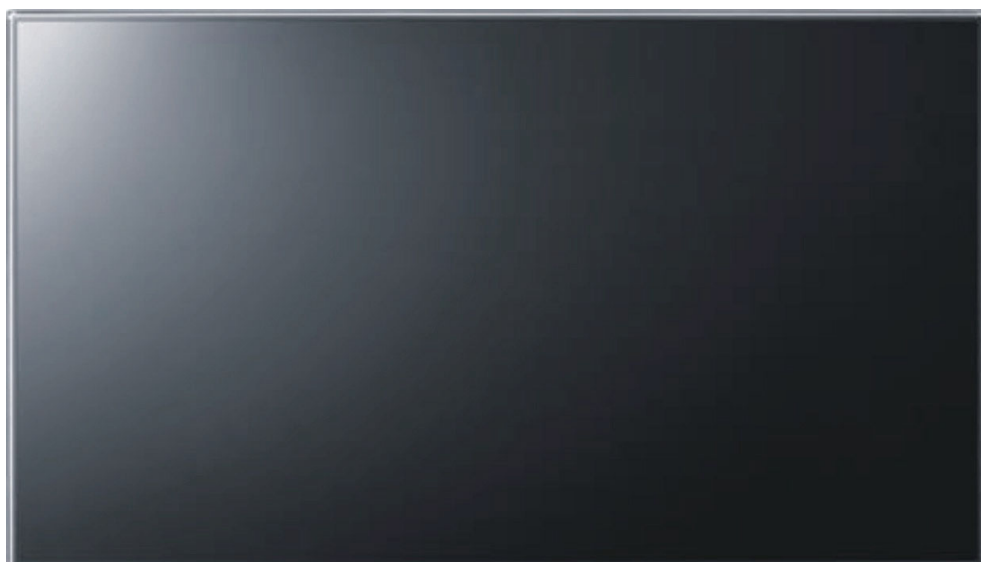

IMPORTANT

Please read this manual carefully before installing and operating the TV
Keep this manual handy for further reference

Catalogue

Warning and Precautions.....	2
Important Safety Instructions.....	3
Remote Control Operation.....	5
TV Buttons and Terminal Interface.....	6
Remote Control.....	7
TV Home Page.....	8
Source.....	13
TV MENU.....	13
Setting.....	15
Network Settings.....	16
Timer Setting.....	17
Common Setting.....	17
About TV.....	18
Media.....	18
Photo.....	19
Music.....	20
Video.....	20
Troubleshooting.....	21

Warning and Precautions

	Warning Risk of electric shock. Do not open.	
Warning: To avoid the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS UNIT.

1. Operate only from the power source specified on the unit.
2. Avoid damaging the AC plug and power cord.
3. Avoid improper installation and never position the unit where good ventilation is unattainable.
4. Do not allow objects or liquid into the cabinet openings.
5. In the event of trouble, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

Changes or modifications not approved by us could void the warranty.

- * When you don't use this TV set for a long period of time, be sure to disconnect both the power plug from the AC outlet and antenna for your safety.
- * To prevent electric shock do not use this power plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

 
Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the TV casing.
There are no user serviceable parts inside.
Please refer to qualified service personnel for repairs.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this unit near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains etc. There must be a minimum distance of 5cm clear space around the unit at all times to ensure proper ventilation.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. No naked flame sources such as lit candles, should be placed on or near the unit.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the unit.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 12) Unplug this unit during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally or has been dropped.
- 14) The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
- 15) Place the television on a stable, flat surface. Failure to do so can result in the television falling, causing injury.
- 16) Do not allow young children to play around or on the television. Do not hang from the unit. Failure to do so can result in the television falling, causing injury.
- 17) Do not allow young children to play with the plastic bag that came with the television when you unpacked it. Failure to do so can result in suffocation, which may lead to death.
- 18) Avoid improper installation and never position the unit where good ventilation is impossible. When installing this unit, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture. Keep to the minimum distance guidelines shown for safe operation.
- 19) **Cautions for installation**
 - Do not tilt the unit towards the left or right or towards the back.
 - Ensure the power cord is out of the path of foot traffic.
 - The unit will generate a slight amount of heat during operation. Ensure that sufficient space is available around the unit to allow satisfactory cooling.
 - Have two people remove the unit from the box with the screen facing away from you. It's possible your clothing (such as a belt buckle or button) may scratch the front of the unit. Do the same when moving the unit to another location.

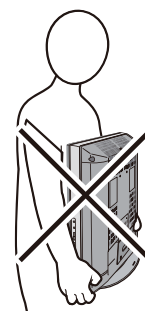

- 20)** This unit shall be connected to a mains socket outlet with a protective earthing connection.
- 21)** Make enough room for inserting and removing the power plug. Place the unit as close to the outlet as possible. The main power supply for this unit is controlled by inserting or removing the power plug. Physically disconnecting the power plug is the only way to completely disconnect the unit from the mains power source.
- 22)** Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 23)** When this unit is connected to the wall outlet, it is always on standby even when all the LED lamps are not lit. To shut down the unit, unplug the unit from the wall outlet.
- 24)** If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 25)** Always place the TV on furniture that can safely support the TV. Make sure the ends of the TV do not overhang the edge of the supporting furniture.
- 26)** Do not place the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a wall or other suitably strong support.
- 27)** Do not stand the TV on cloth or other materials placed between the TV and the supporting furniture.
- 28)** Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

IMPORTANT INFORMATION

 
Televisions that are not positioned in sufficiently stable locations can present potential falling hazards. To avoid injuries, particularly to children, take the following simple precautions:

- Place this television only on furniture that can safely support it.
- Use only a cabinet or stand recommended by the manufacturer of the television.
- Ensure the television does not hang over the edge of supporting furniture.
- Do not place the television on tall furniture (such as cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Do not place cloth or other materials between the television and the supporting furniture.
- Do not let children climb on furniture to reach the television or its controls.

Remote Control Operation


Installing Batteries

1. Slide in the direction shown by the arrow in Image 1 below to open the cover of the batteries on the back of the remote control.
2. Load two AAA alkaline batteries in the compartment.
3. Replace the cover of the batteries.

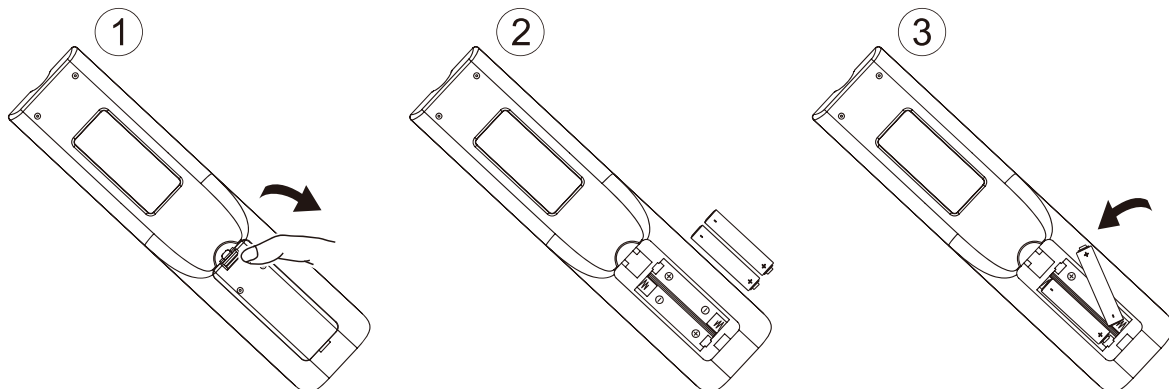


Precautions

 
Make sure that there is no obstacle between the remote control and television set.

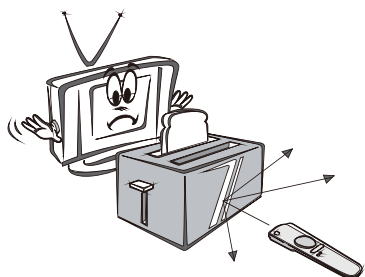

 
Keep the remote control away from heat sources and humid areas to ensure effective performance of the remote control.

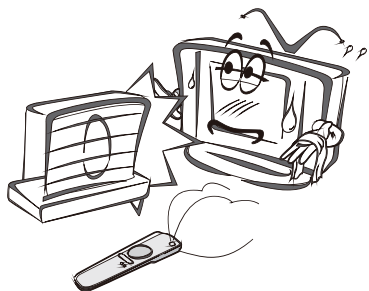

 As strong light may interfere with the signals, change your position to operate the remote control if the television cannot be turned on or off as you expect.

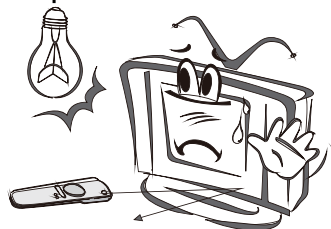

 Make sure that two AAA 1.5V alkaline batteries are loaded correctly.

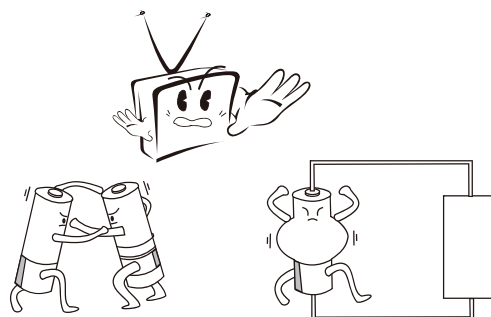


TV Buttons And Terminal Interface


Keys and Interfaces

Press the Multi Function Standby button on the TV unit to perform the following functions:

 1. When the TV is in Standby mode, press this button to turn the TV on.
2. When the TV is on, press this button to display the menu below:

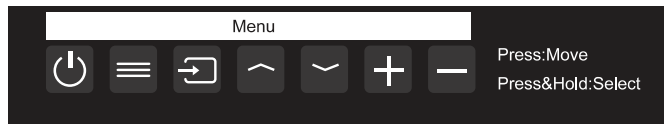

 3. Press the Multi Function Standby button once to move between the various icons.
4. Press and hold to enter the function menu for that icon. Use +or- buttons for further operation.
5. The function menu will disappear once the Multi Function Standby button is no longer pressed.

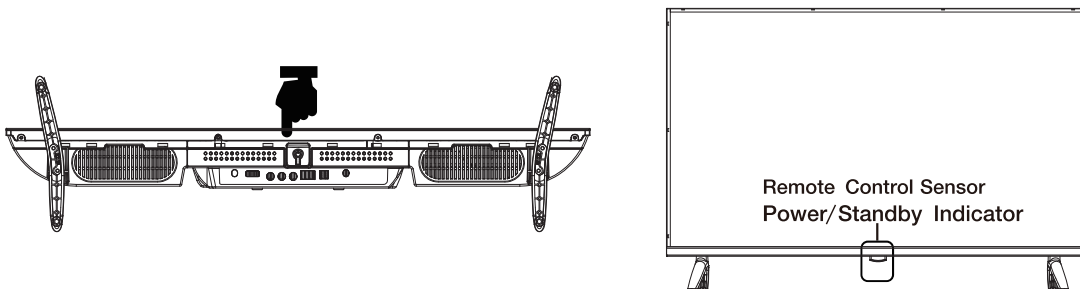

	Press to switch the TV on during Standby mode or vice versa.
	Press to bring up the main menu to the screen.
	Press to select the input source /Press to confirm.
	Press to scan through channels /Press to move up or down.
	Press to increase or decrease the sound level /Press to move left or right.
POWER INDICATOR	Indicator shows red in Standby mode and green when TV is switched on.
REMOTE SENSOR	Infrared sensor for the remote control.

Terminal Interface

Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	AV input External AV Signal Input And Relevant Right/Left Sound Channel		EARPHONE output When earphones are plugged in, speakers are disabled (Some models without this interface)
	HDMI input Digital signal input from HDMI video connector.		USB input Connect a USB device here to play its media files
	RF IN(ANT 75) Connect the antenna/cable tv input (75/VHF/UHF)		COAXIAL Connect the SPDIF receiver. (Some models without this interface)
	RJ45 Connect the Internet.		

Remote Control



Remote Control Buttons

POWER (⏻): Press to turn the TV on or off.

INPUT: Press to select signal source.

NUMBER BUTTONS: Press 0–9 to select a TV channel directly when you are watching TV.

DISP: Press to display the current program information on the screen.

Recall (↶): Press to return to the previous channel.

MUTE (🔇): Press to reduce the TV volume to its minimum level. Press again to restore the volume.

VOL+ or VOL-: Press to increase or decrease the TV volume.

MOUSE (🖱️): Press to turn Mouse on/off.

CH+ or CH-: Press to scan up or down through the current channel list.

P-MODE: Press to select the Picture mode.

S-MODE: Press to select the Sound mode.

HOME (🏠): Press to enter the Home page.

MENU: Press to access the Main menu or return to the upper level of a sub-menu.

EXIT: Press to exit the current menu or function.

Arrows (⬅️/➡️/⬆️/⬇️): Use the four arrows to highlight different items in the TV menu or change the value.

ENTER: Enter and confirm button.

NETFLIX/YOUTUBE: Application dedicated buttons.

RED/GREEN/YELLOW/BLUE: Use add-on functions in OSD menu.

NICAM: Press to select TV NICAM.

▶️||: Press to play or pause media files.

■: Press to stop playing media files.

⏮️/⏭️: Press to rewind or fast forward.

⏮️/⏭️: Press to select the previous or the next media file.

SLEEP: Press to activate the sleep timer, after which the TV will shut off automatically.

USB: Press to select USB mode.

TEXT: Press to display the available Teletext.

SIZE: Press to switch the Teletext size.

SUBPAGE: Enter Teletext sub-page.

 
REVEAL: Press to reveal or hide hidden words in Teletext mode.

HOLD: Press to hold the Teletext.


INDEX: Press to display the record list or Teletext index.

Guide pages


1) Start setting up your TV.

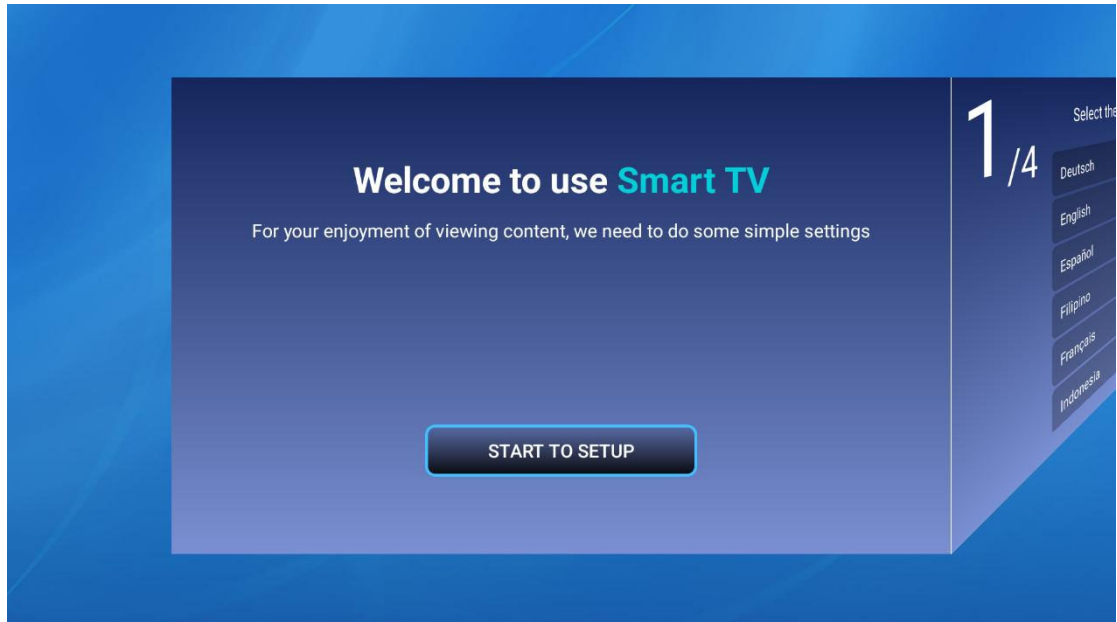

 2) Set the default language.

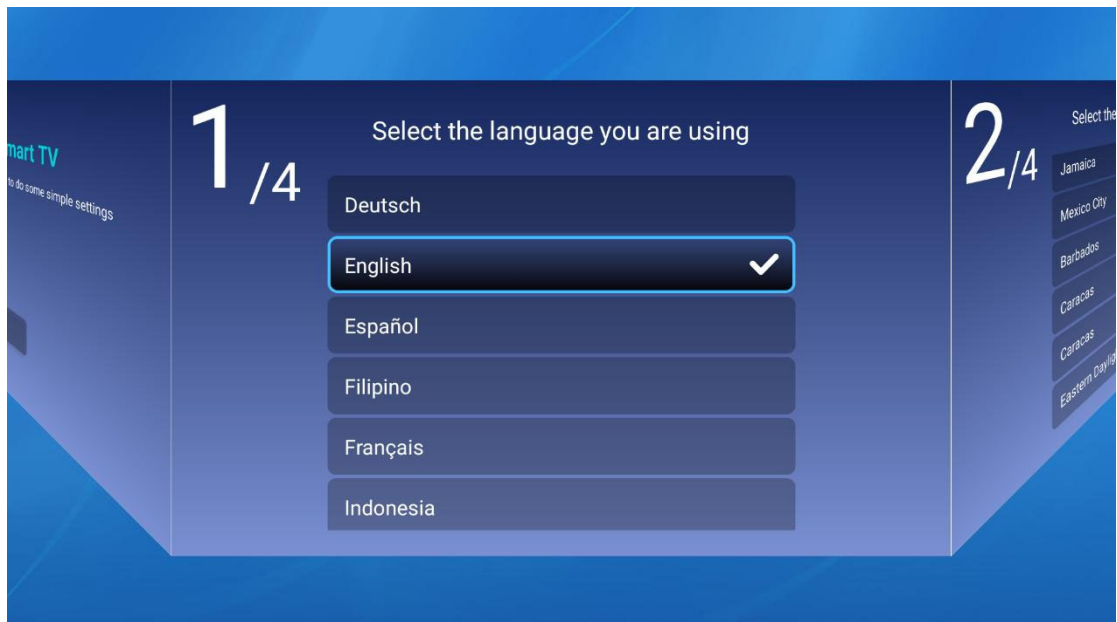

 3) Set default time zone.

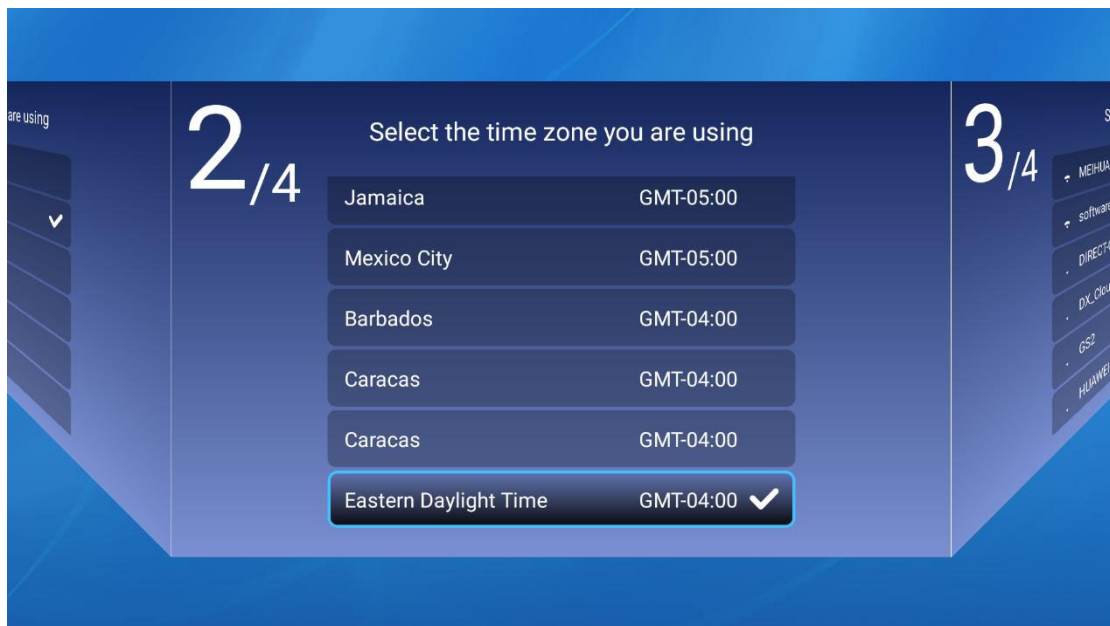


4) Set up network connection.



5) Set which view to start jumping to.




 6) Setup completed.

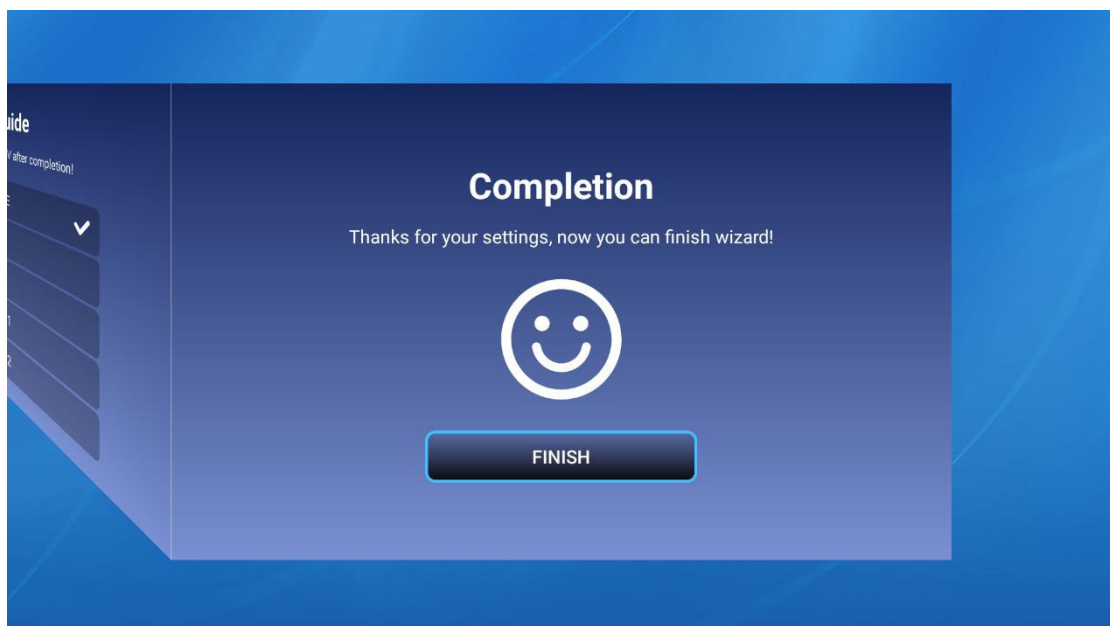


1、TV Home Page

 This is the **HOME** homepage, every time you press the **HOME** button, you will return here, you can press **【▲】** button to the top level to select other category menus.

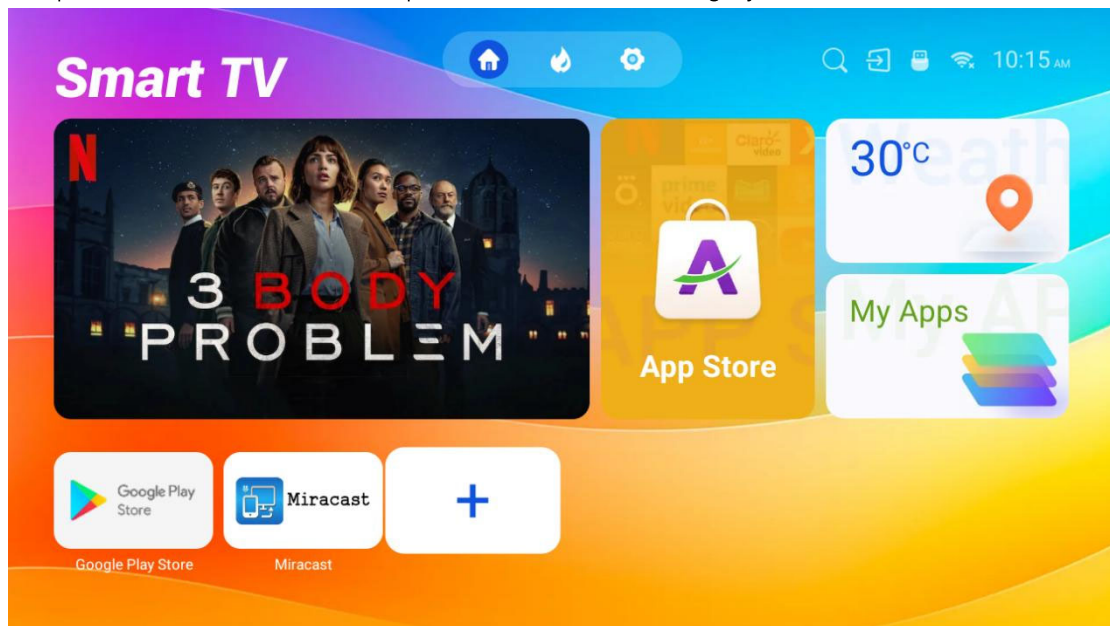


After pressing the **【▼】** button.

 Press **【◀】 / 【▶】** button to select **Apps Store**. You can see all the apps in the app store.

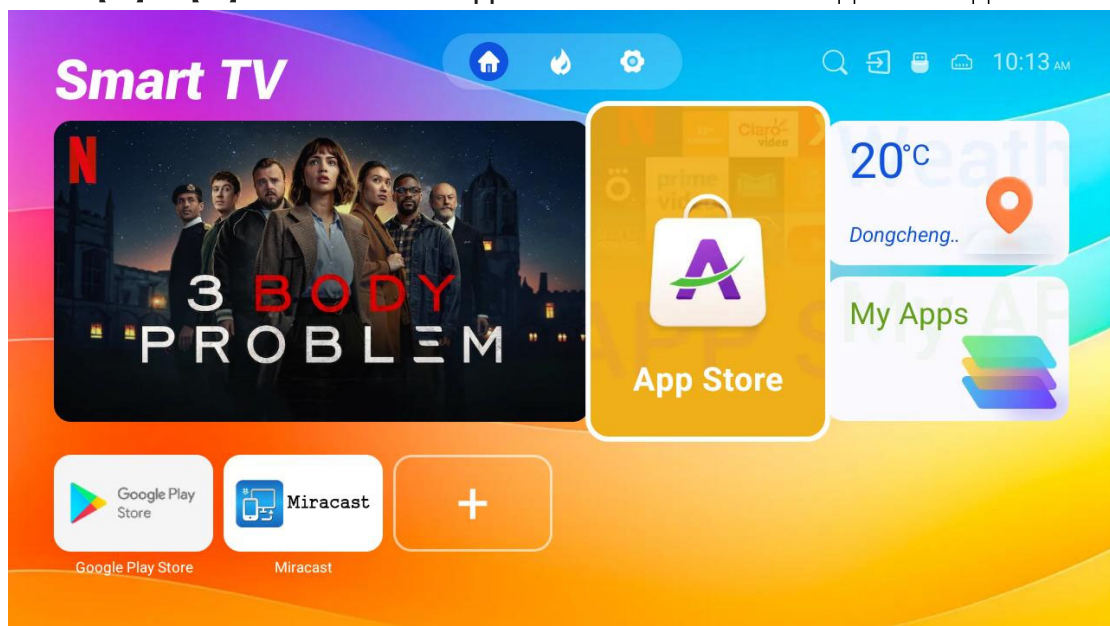


 Press **▼** / **▲** / **◀** / **▶** button to select the app and press **OK** button to download the app.

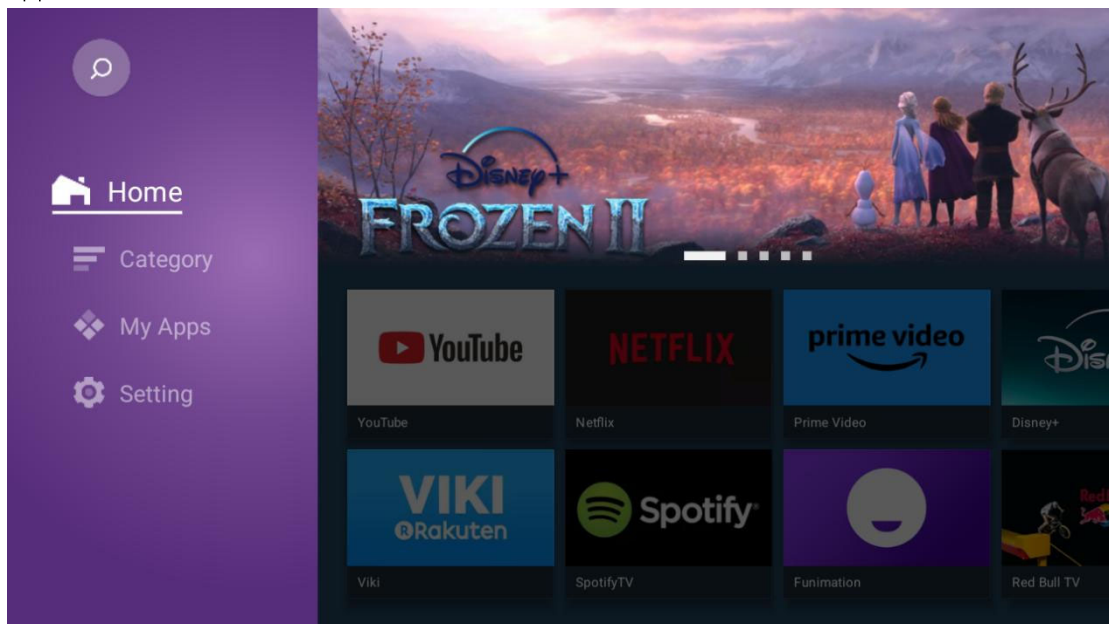

After pressing the **▼** button.

 
Press **◀** / **▶** button to select **Weather**. You can see the current weather situation in the city.

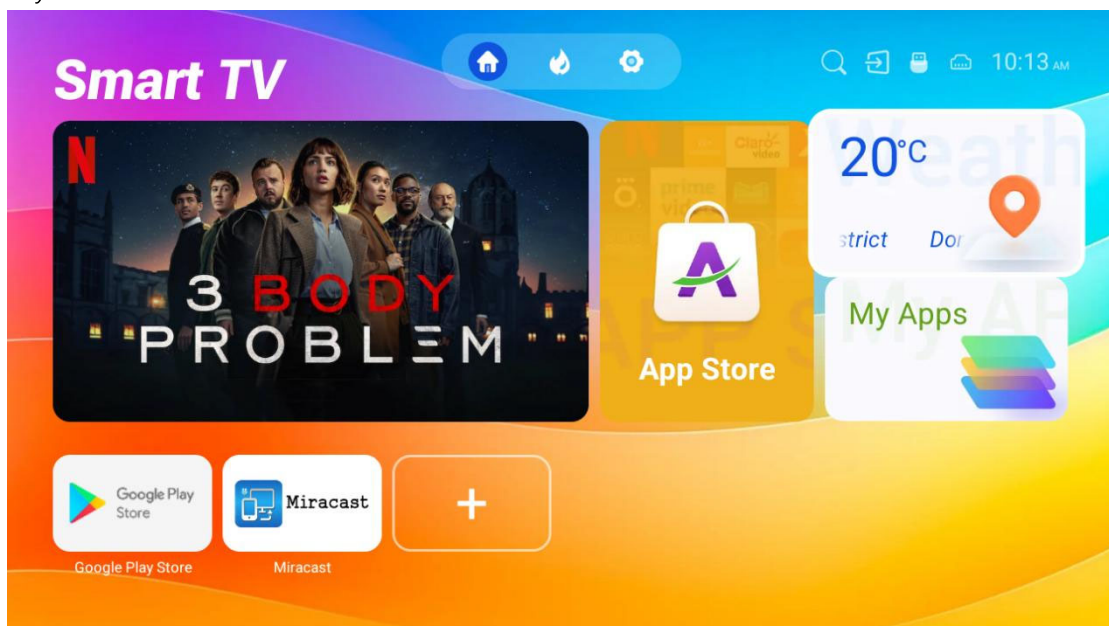


Detailed weather conditions of the current city.



 
After pressing the 【▼】 button.
Press 【◀】 / 【▶】 button to select **My Apps**. You can see all the apps installed on the current TV.

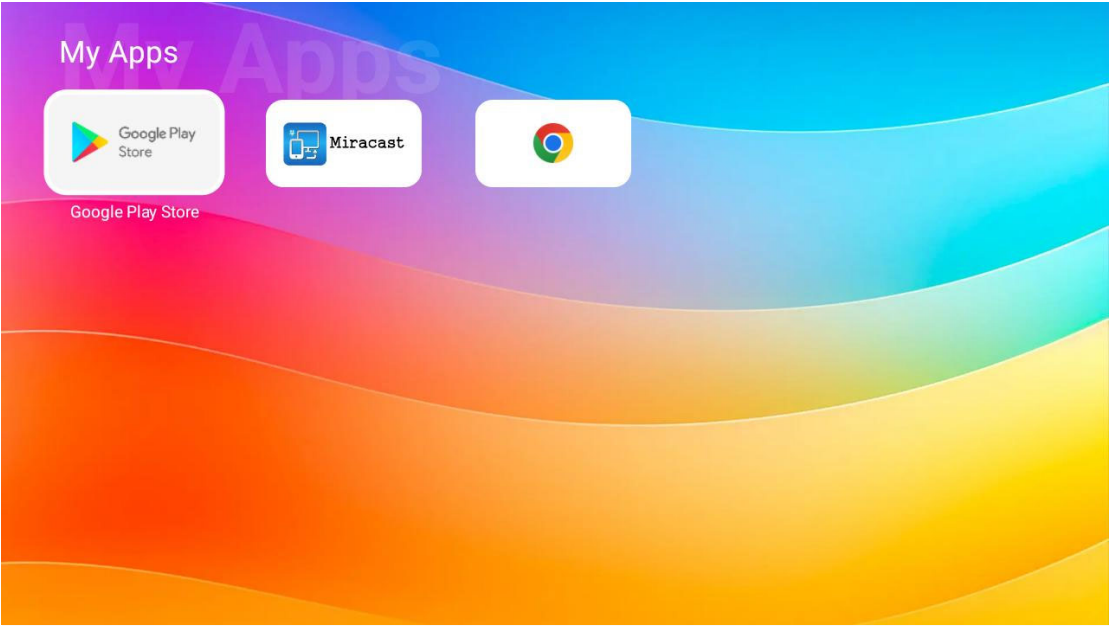

 Press **【◀】 / 【▶】** button to select **SEARCH** at the top of the category menu. You can search for apps, videos, music, etc. here.

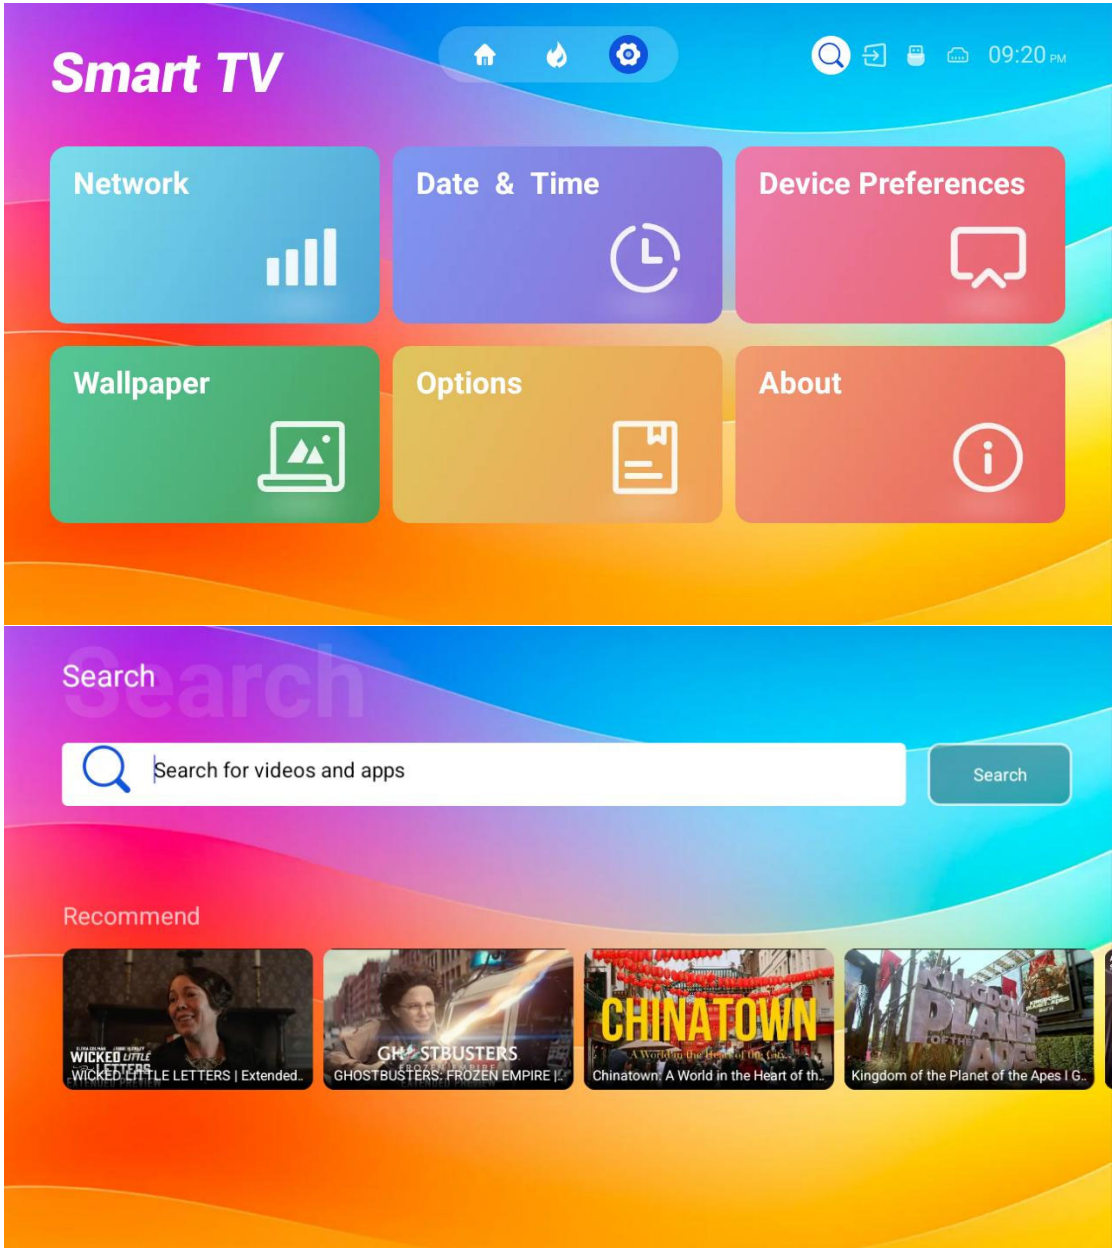


 Press **【◀】 / 【▶】** button to select **Recommend** at the top of the category menu.

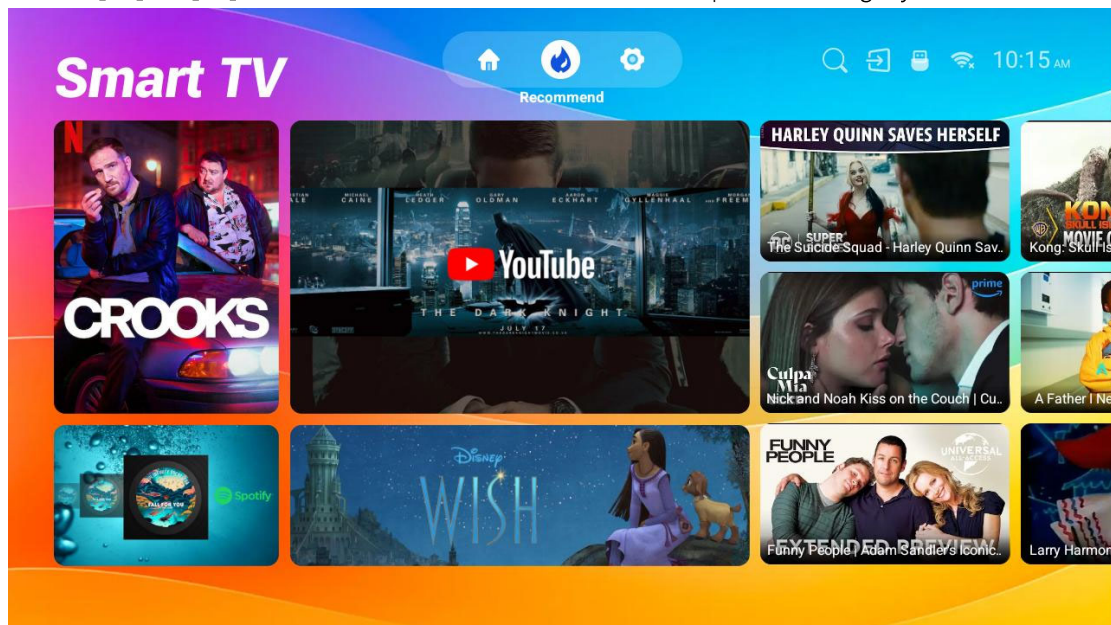


After pressing the **【▼】** button.

 Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select the app and press **OK** button to open the app.

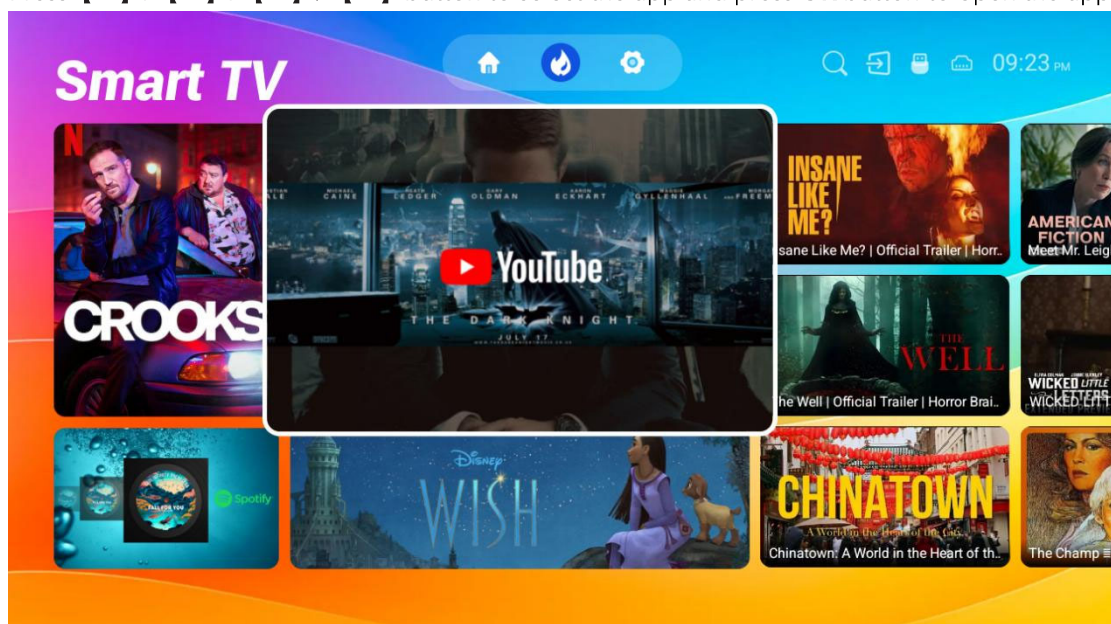

 Press **▼** / **▲** / **◀** / **▶** button to select the video and press **OK** button to open the video.

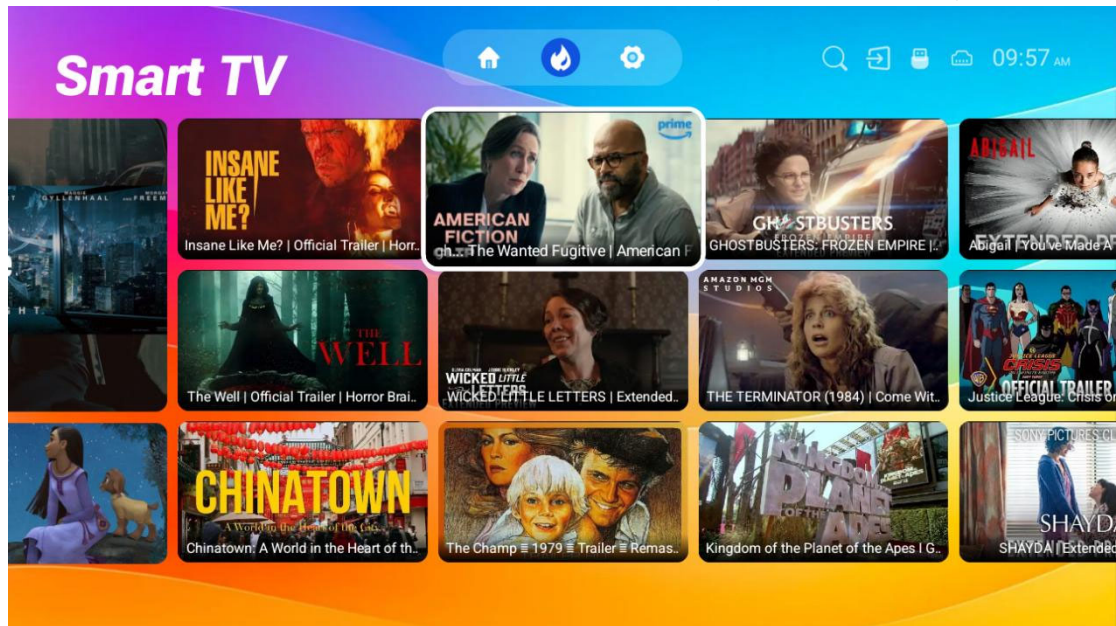


Press **◀** / **▶** button to select **SETTINGS**.


After pressing the **▼** button, press **◀** / **▶** button to select the settings.



 
Press **【◀】 / 【▶】** button to select **SOURCE** at the top of the category menu.

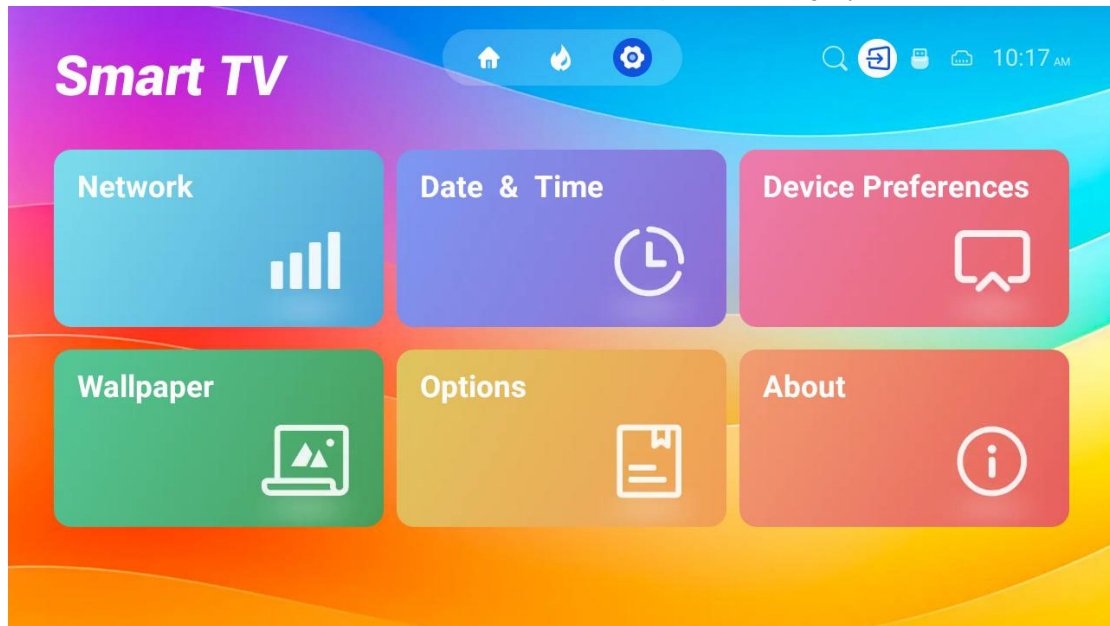

 
After pressing the **【▲】 / 【▼】** button to select the input source.

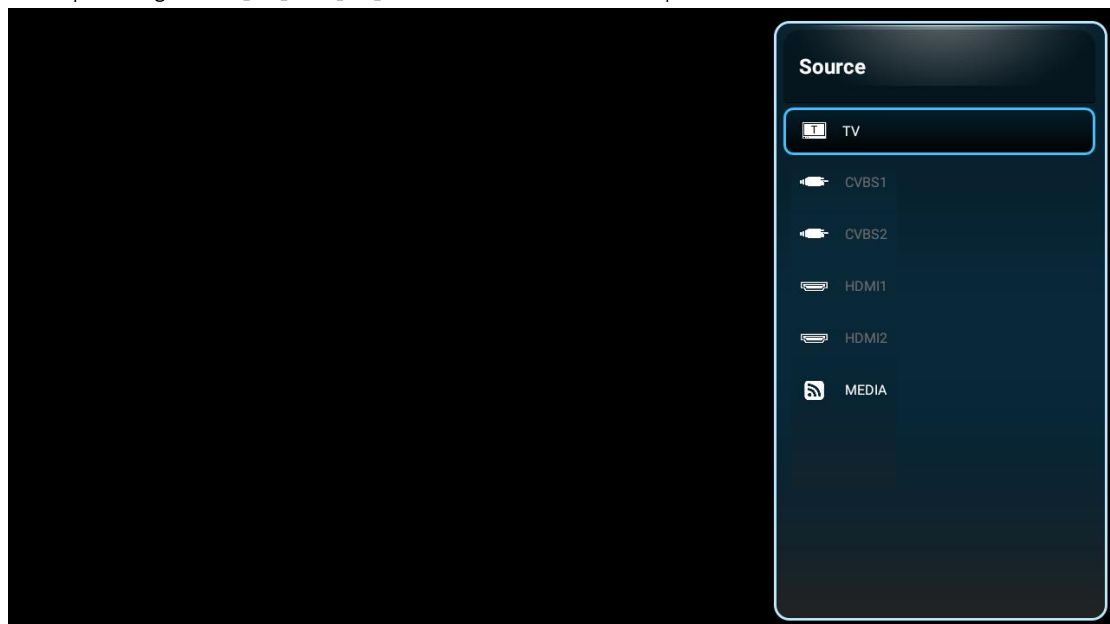

 Press **【◀】 / 【▶】** button to select **MEDIA** at the top of the category menu.

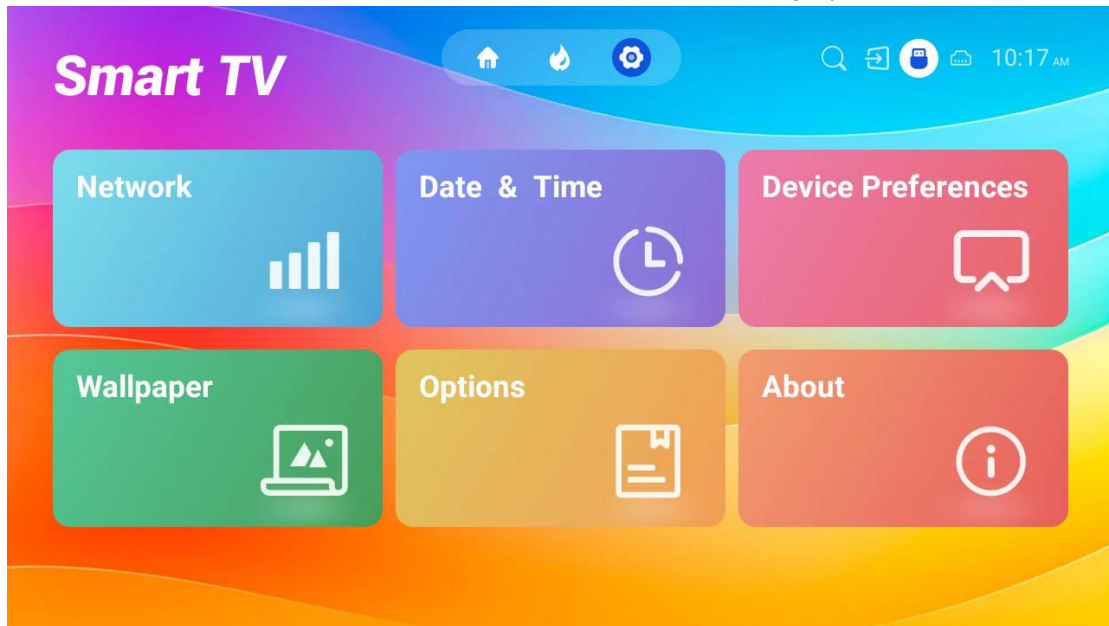

 
After press **【◀】 / 【▶】** button to select the media.

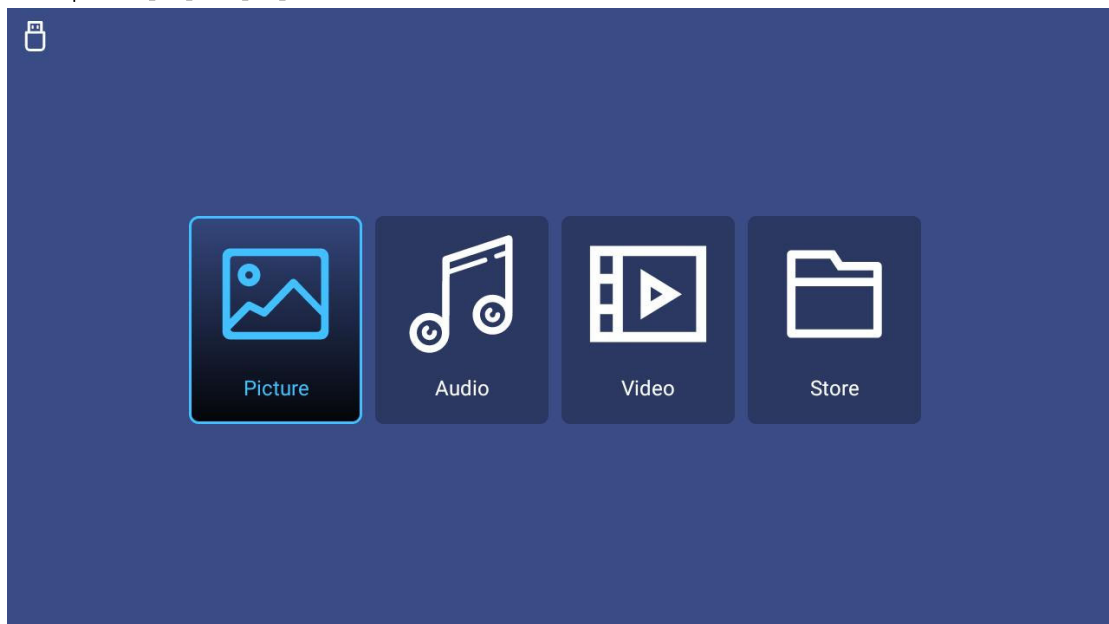

2、TV

1) Source

 
Press Source button to select the input source: TV、CVBS1、CVBS2、HDMI1、HDMI2、MEDIA.

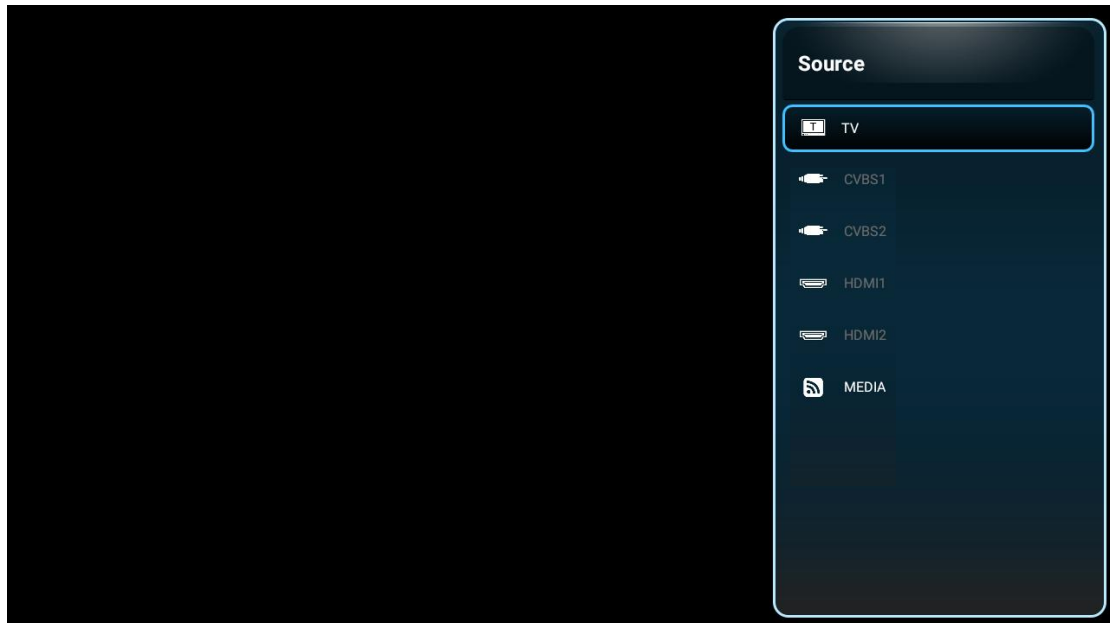


2) TV MENU

Press **Menu** button to modify TV settings in the TV menu.

 Press **▼** / **▲** button to select in the TV menu.

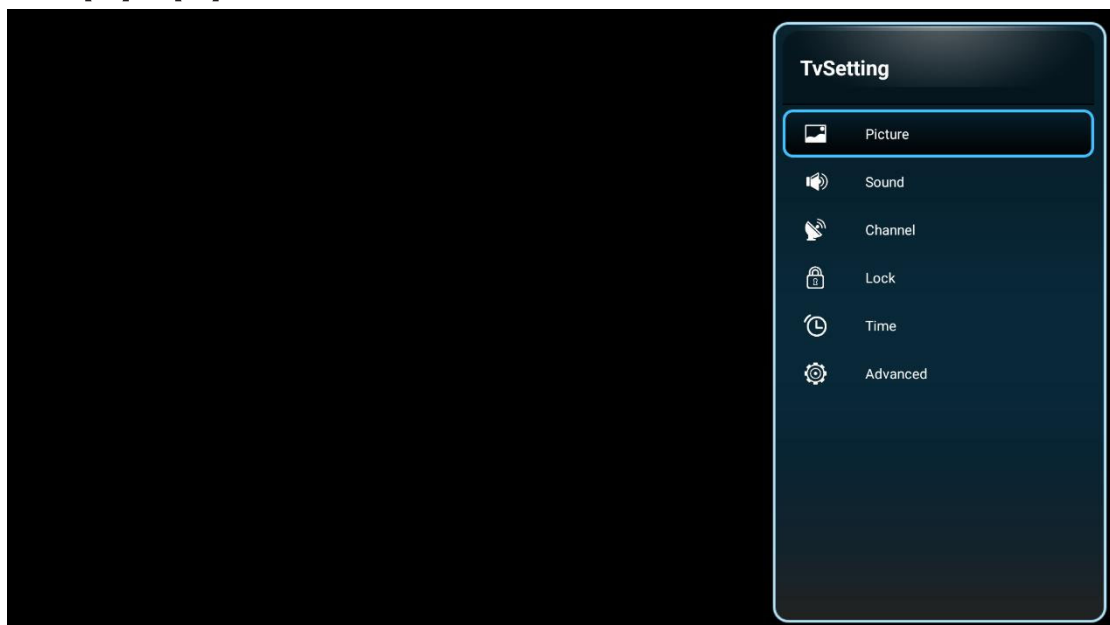


 1) Picture

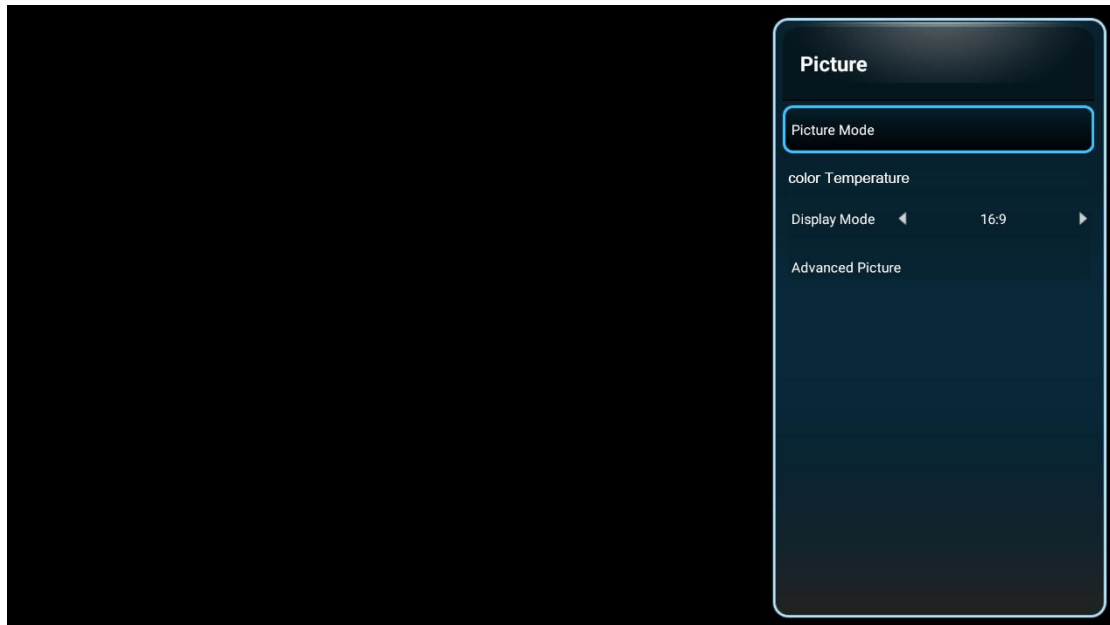


Press **【▼】** / **【▲】** button to select Picture settings.

 a) Sound

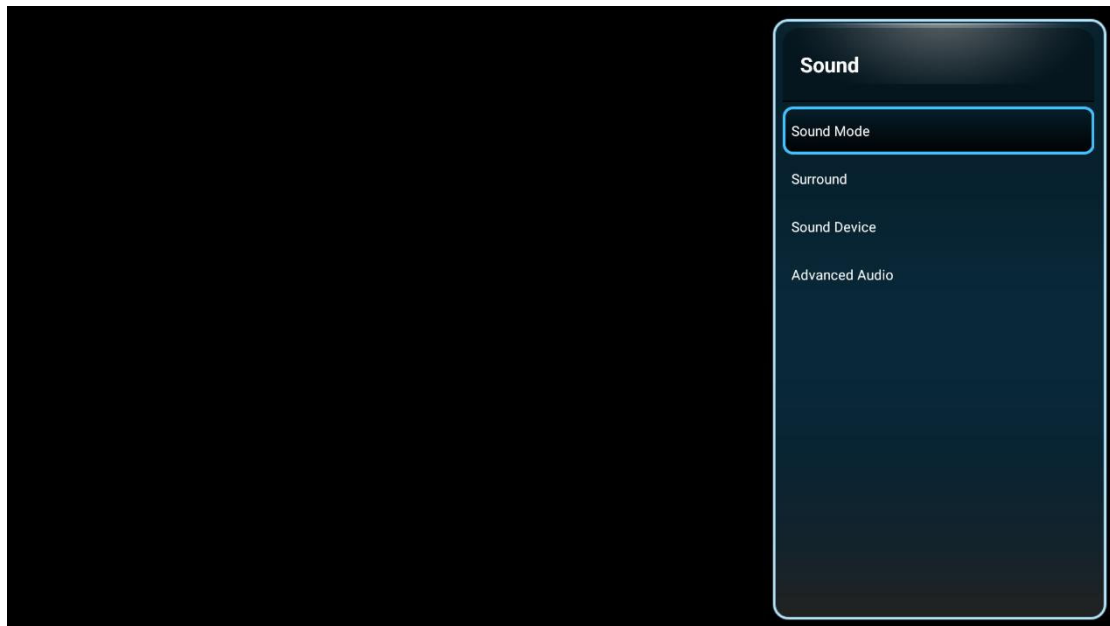


Press **【▼】** / **【▲】** / **OK** button to select the sound settings.

 b) Channel

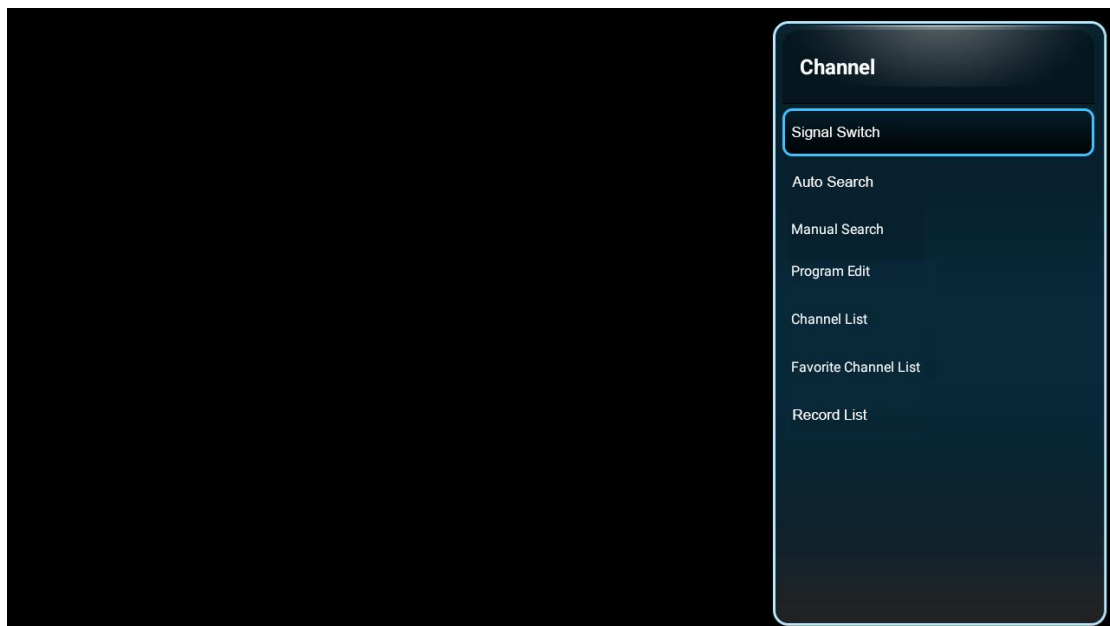


Press **【▼】** / **【▲】** / **OK** button to select the channel setting.

 c) Time

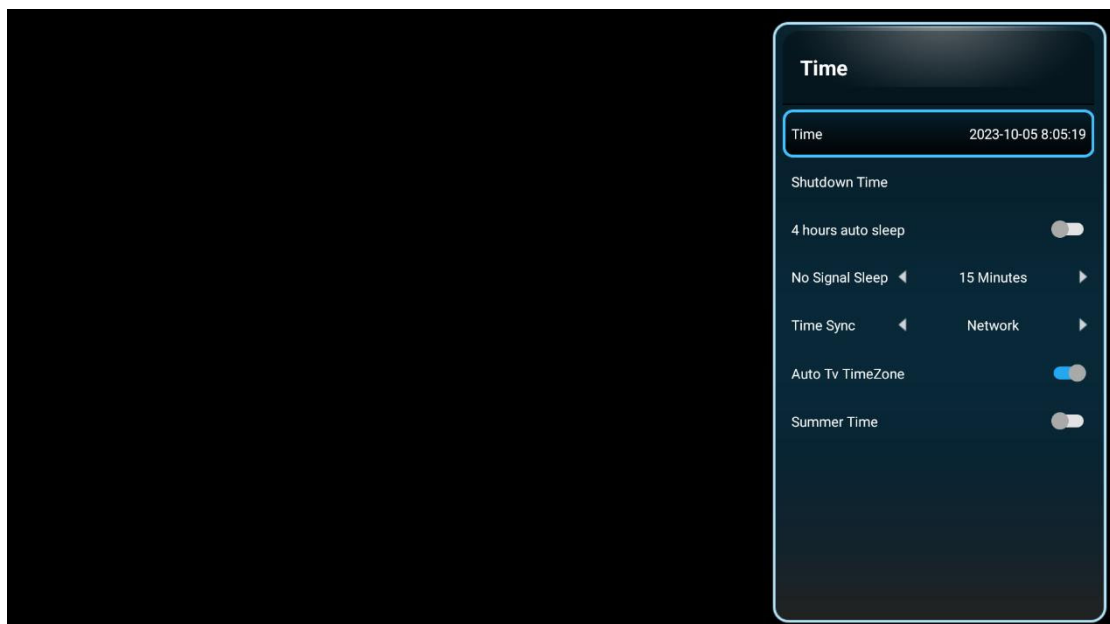

Press **【◀】** / **【▶】** / **【▼】** / **【▲】** / **OK** button to set the time settings

 
d)

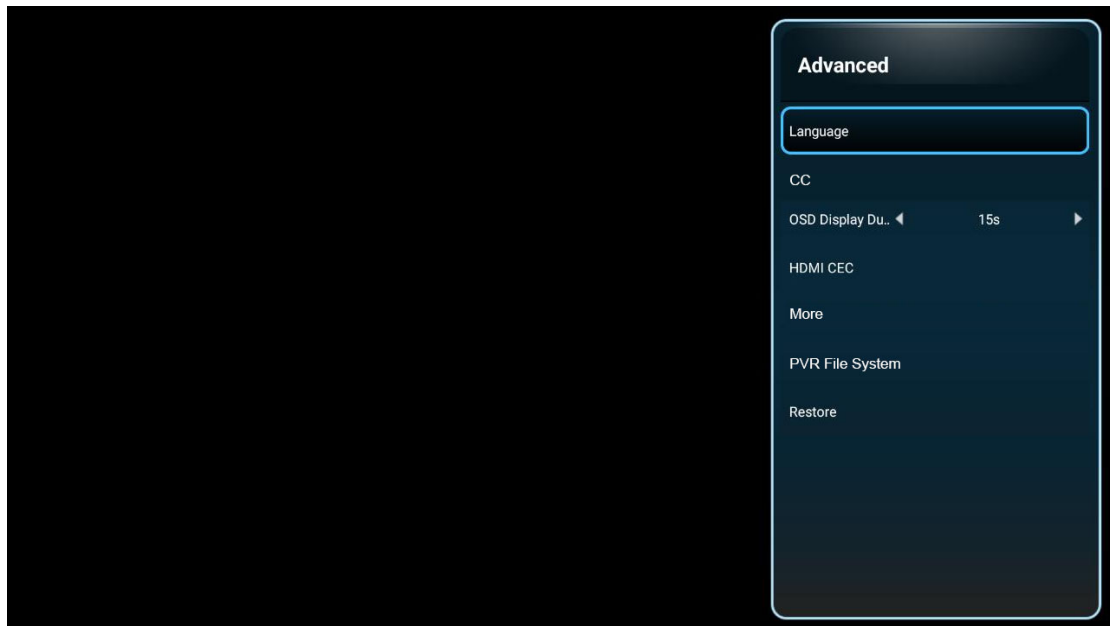

Press **【◀】** / **【▶】** / **【▼】** / **【▲】** / **OK** button to set the advanced settings

3) TV Channel Search

 a) ATV channel search

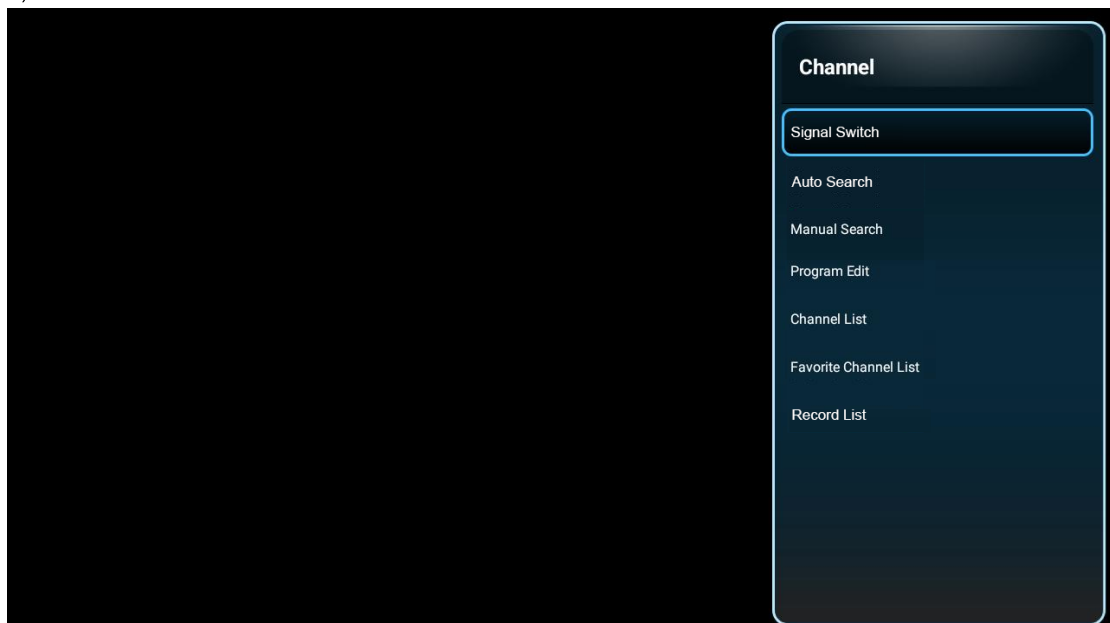


Press **【▼】** / **【▲】** / **OK** button to Select auto search to search for channels




Press **【▼】** / **【▲】** / **OK** button to select the relevant options to set automatic channel search. Generally, the current settings are default. Select confirm to perform channel search



 This page is an automatic search channel progress page

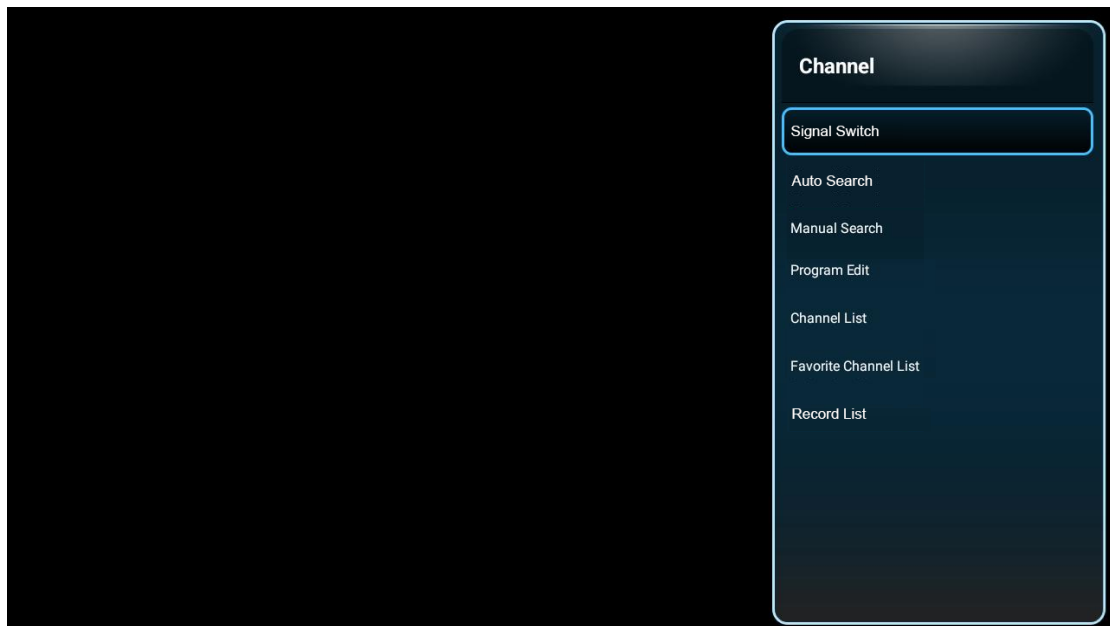


 Press **【▼】 / 【▲】 / OK** button to Select manual search to search for channels

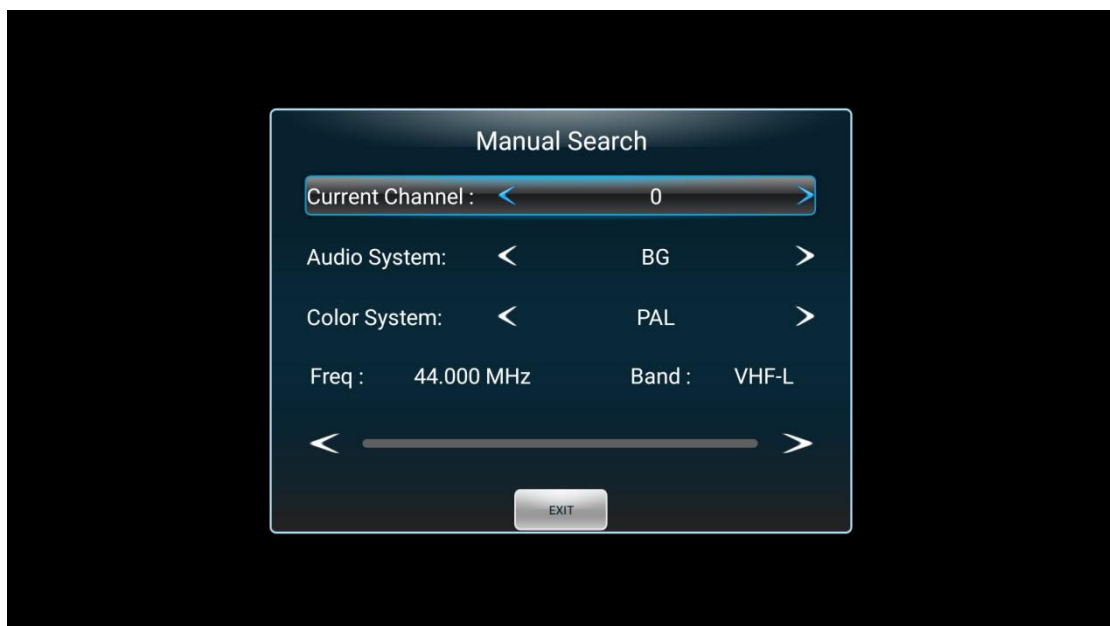


Press **【◀】 / 【▶】 / 【▼】 / 【▲】** button to set relevant options for manual channel search
Select the corresponding format for P and N systems

 
b) ATSC hannel search

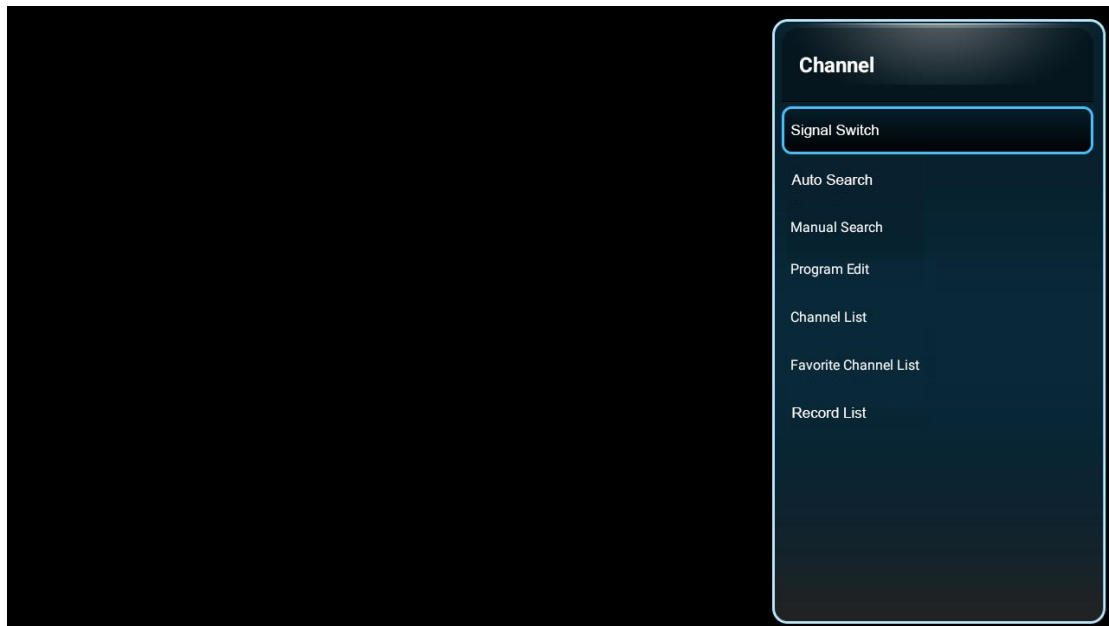

 
Press **【▼】** / **【▲】** / **OK** button to select Auto Search to search for channels

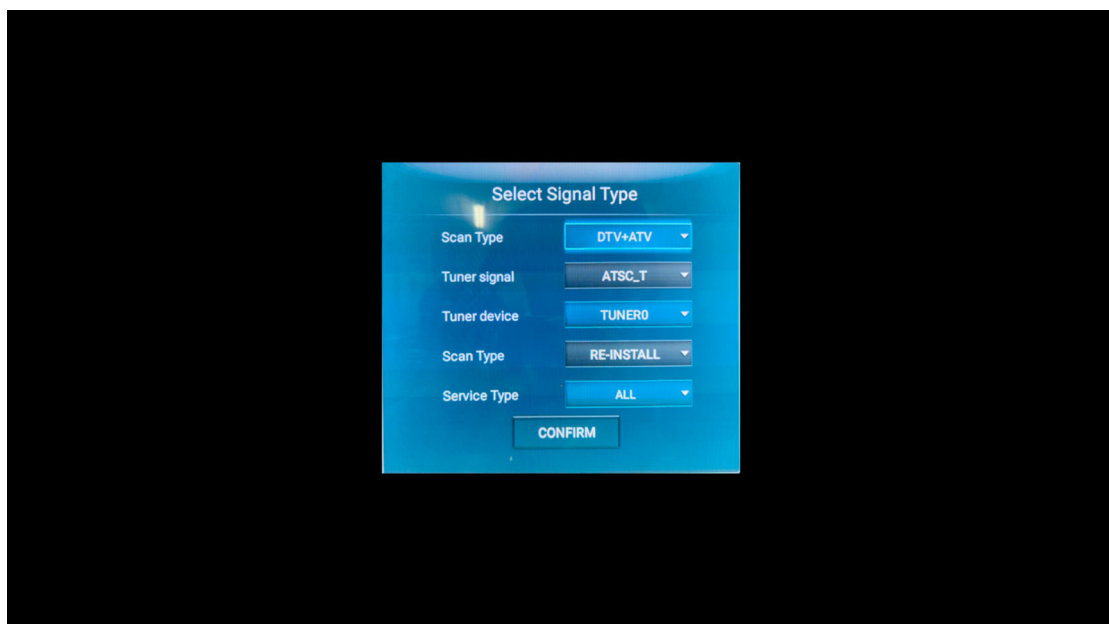

 
Press **【▼】** / **【▲】** / **OK** button to select the relevant options to set automatic channel search. Generally, the current settings are default. Select confirm to perform channel search

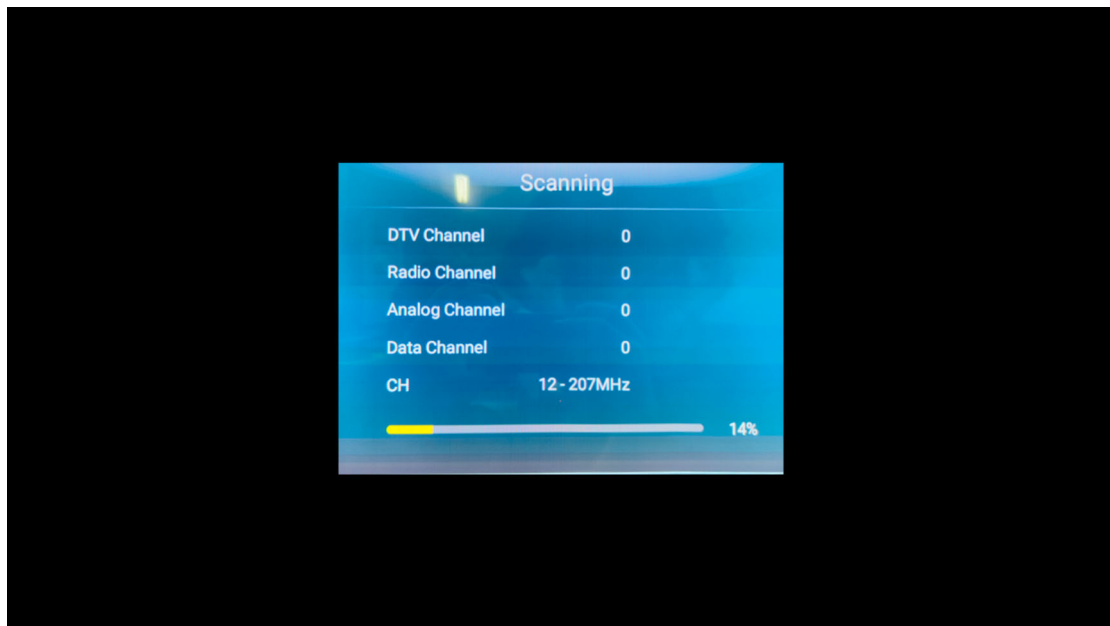

 This page is an automatic search channel progress page

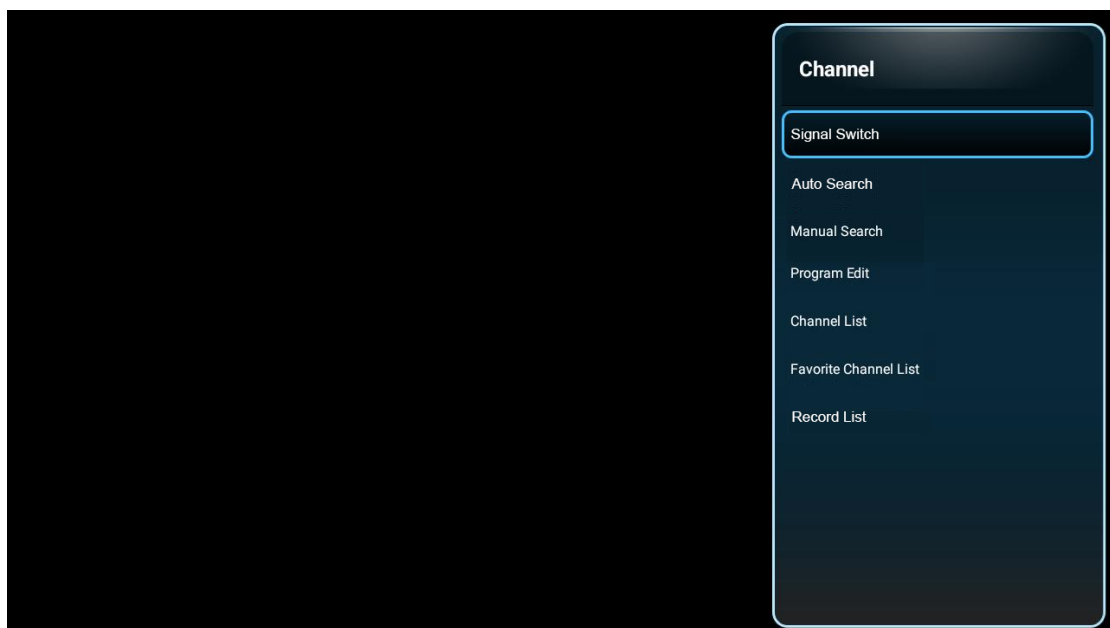


 Press **▼** / **▲** / **OK** button to select manual search to search for channels

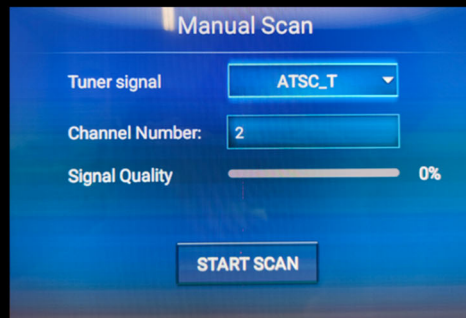


Press 【▼】 / 【▲】 button to set relevant options for manual channel search

 3、Setting

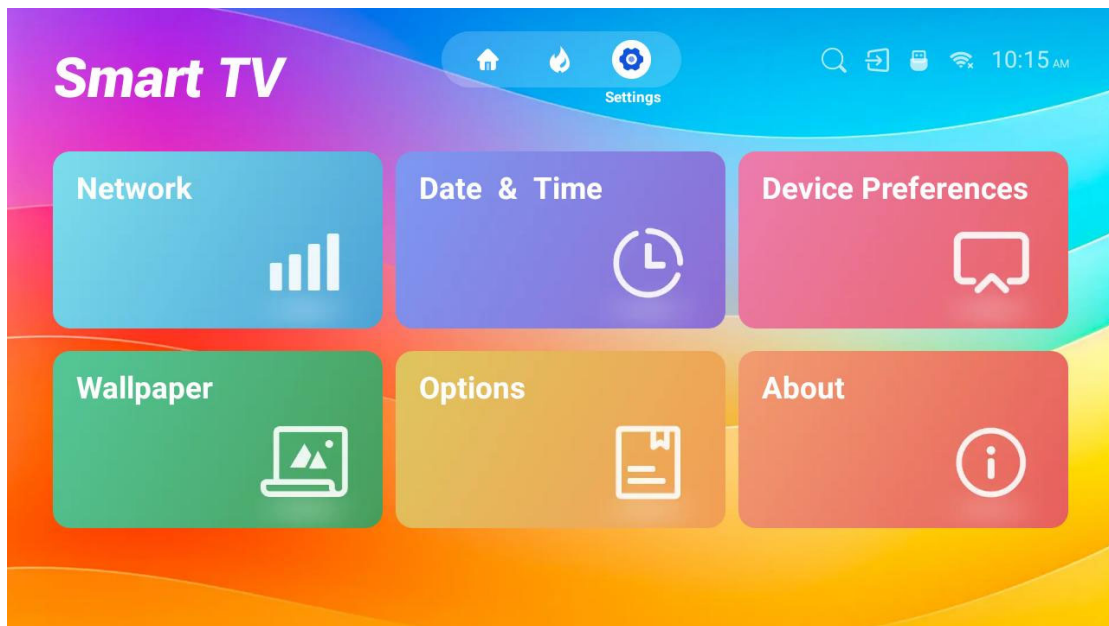


This is the home page for System Settings, with Network&Settings, 、 Date&time, 、 Device Preferences、 About and Options.

 1) Network Settings

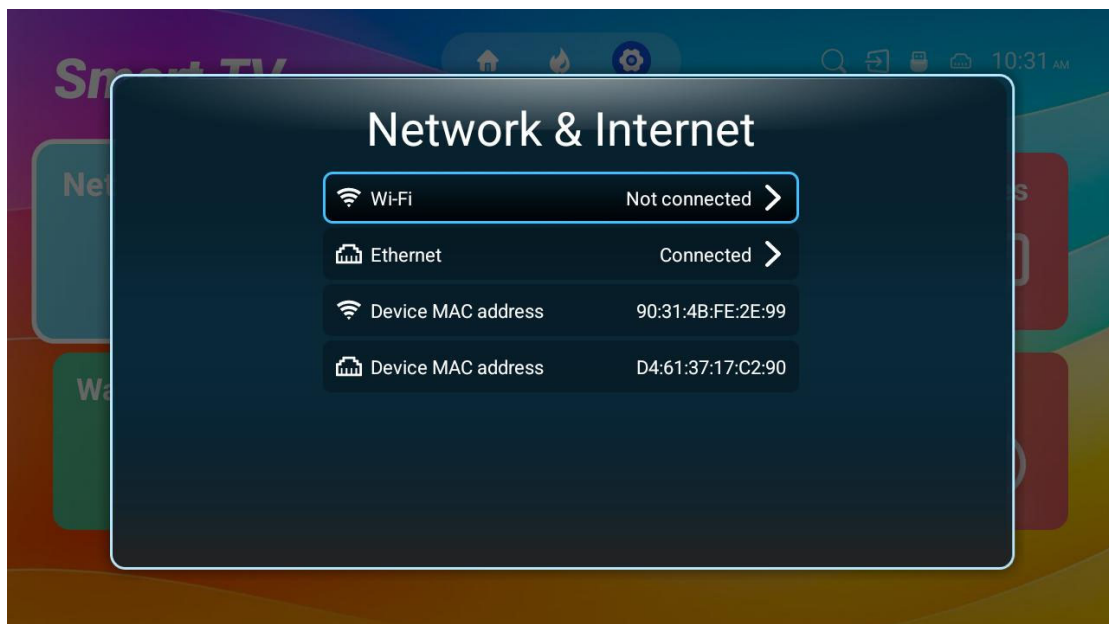

 In this page, You can view the connection status and MAC address of the wired network and wireless network.

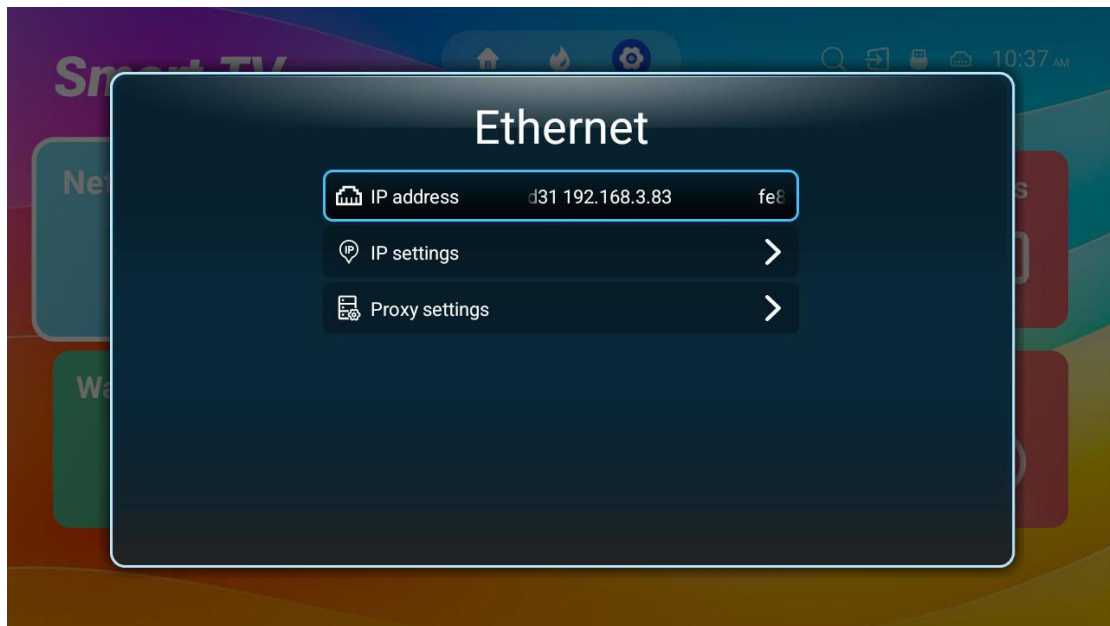


Press **【◀】 / 【▶】 / 【▼】 / 【▲】 / OK** button when selected the Wired network to set the Manual setting and Proxy setting.



Press **【◀】 / 【▶】 / 【▼】 / 【▲】 / OK** button when selected the Wireless network to set the WIFI ON/OFF or change to a new WIFI.

 
2) Timer Setting

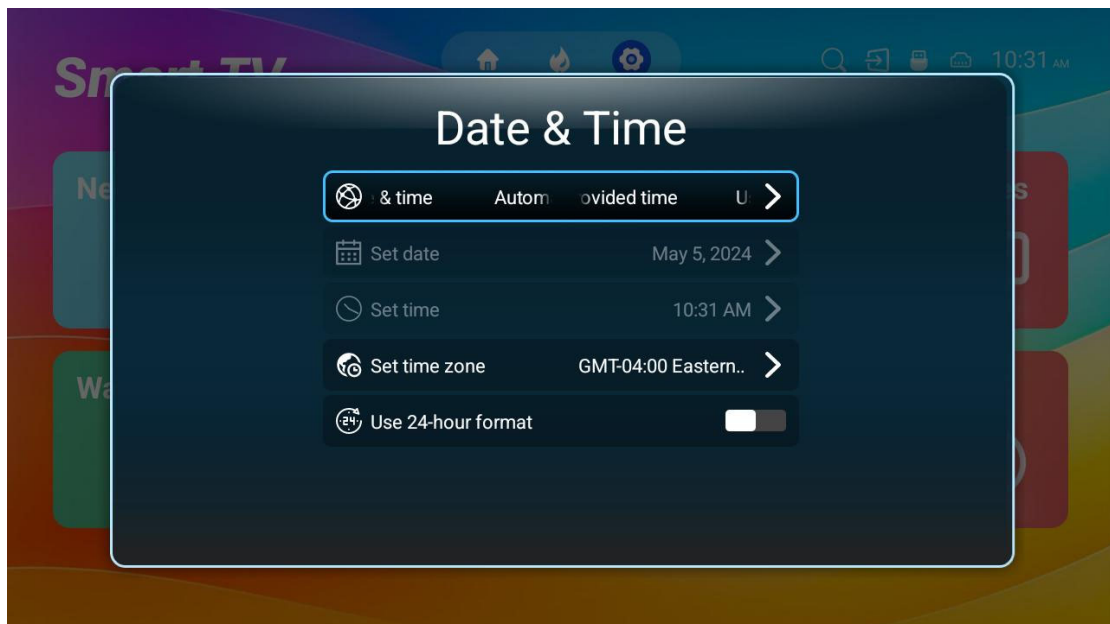

Press [◀] / [▶] / [▼] / [▲] / OK button to select items.

 3) Common Setting



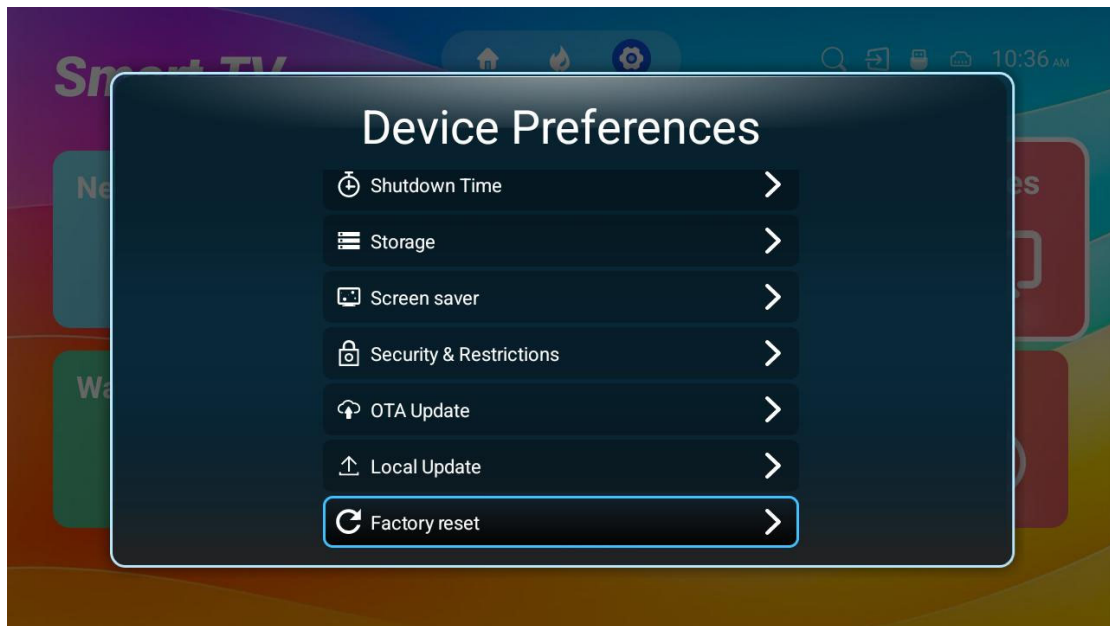

Language settings	Set the OSD Language.
Memory source	Set the Memory source function ON/OFF.
Accounts&Sign In	manage google account
Apps	Manage the list, uninstall and permissions of installed apps.
Keyboard	Set the default input method.
Sound	System sound menu
Shutdown Time	Set screen wait time
Storage	View the system hard disk space usage.
Security & restrictions	Unknown source
OTA update	Update the system by OTA.
Local Update	Update local programs
Reset	Initialize the system.

 
4) About TV




In this page, you can view information about the TV.

4、Media

You can select the **USB** input source in the **SOURCE** of the homepage to enter this page.

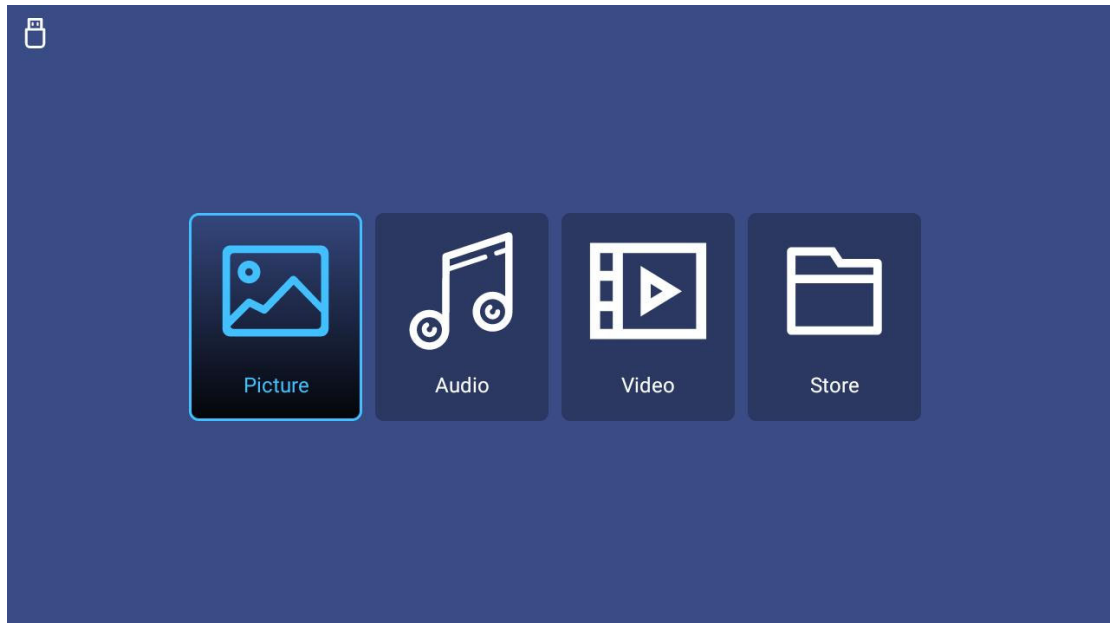

 
Multimedia divides files into three categories: Picture, Audio, Video, Store.

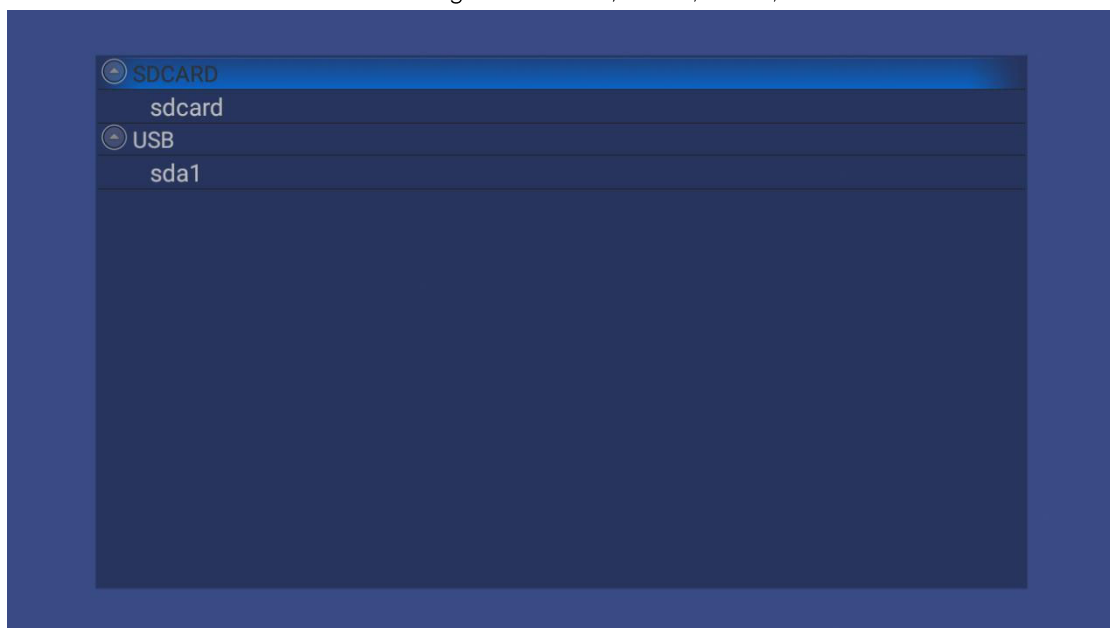

Press **【▼】 / 【▲】 / OK** button to view the storage file.

The “SDCARD” folder is local storage, other folders are external storage.

 1) Photo

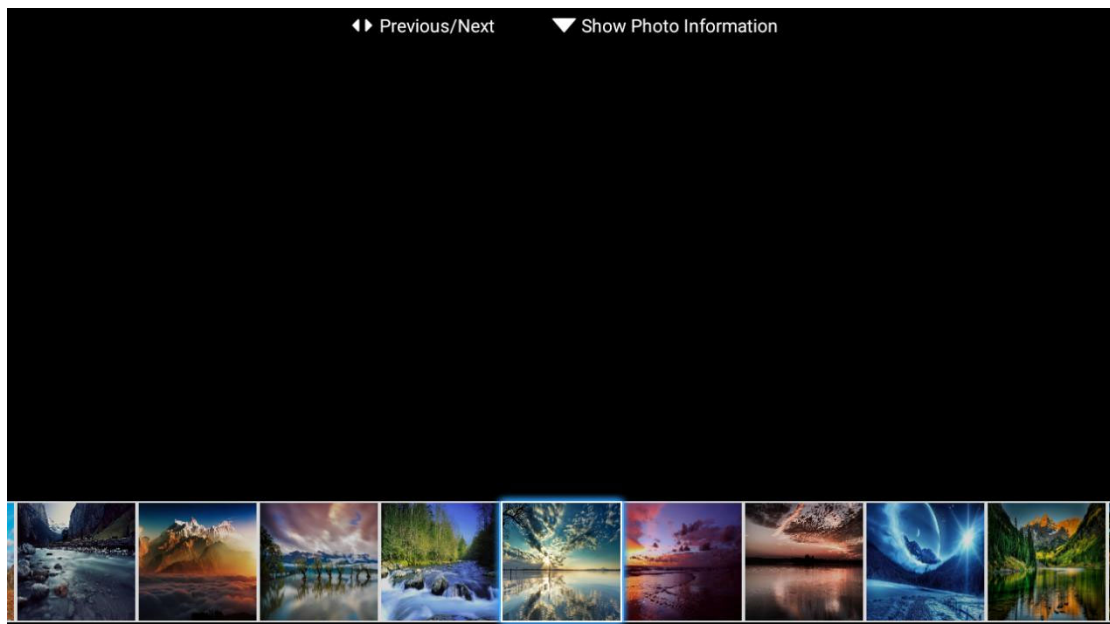

Press [◀] / [▶] /OK button to select photo.

Or MENU button to select more function

